


## Stratos Multi E401X Industrial Transmitter

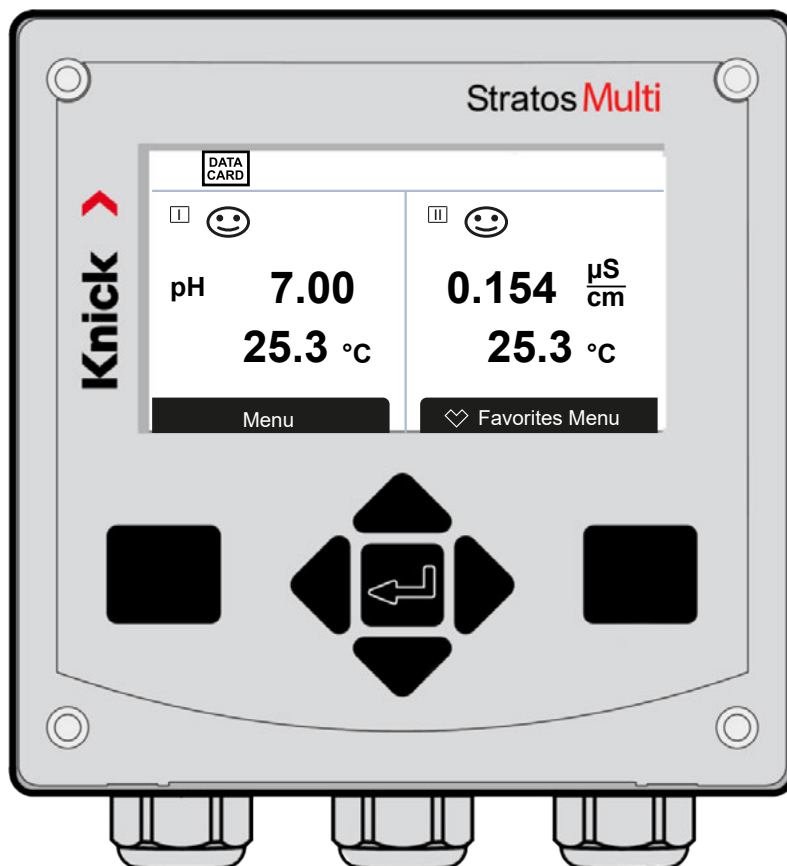

## Supplemental Directives

READ AND SAVE THIS DOCUMENT FOR FUTURE REFERENCE. BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT, PLEASE ENSURE A COMPLETE UNDERSTANDING OF THE INSTRUCTIONS AND RISKS DESCRIBED HEREIN. ALWAYS OBSERVE ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS IN THIS DOCUMENT COULD RESULT IN SERIOUS INJURY AND/OR PROPERTY DAMAGE. THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.

These supplemental directives explain how safety information is laid out in this document and what content it covers.

### Safety Chapter



This document's safety chapter is designed to give the reader a basic understanding of safety. It illustrates general hazards and gives strategies on how to avoid them.

### Safety Guide

The separate safety guide is designed to give the reader a basic understanding of safety. It illustrates general hazards and gives strategies on how to avoid them.

### Warnings





This document uses the following warnings to indicate hazardous situations:

Symbol	Category	Meaning	Remark
	<b>WARNING</b>	Designates a situation that can lead to death or serious (irreversible) injury.	The warnings contain information on how to avoid the hazard.
	<b>CAUTION</b>	Designates a situation that can lead to slight or moderate (reversible) injury.	
<i>None</i>	<b>NOTICE</b>	Designates a situation that can lead to property or environmental damage.	

### Additional Safety Information

- Stratos Multi safety guide

## Symbols Used in this Document

Symbol	Meaning
	Reference to additional information
	Interim or final result in instructions for action
	Sequence of figures attached to an instruction for action
	Item number in a figure
<b>(1)</b>	Item number in text

## Table of Contents

<b>1 Safety.....</b>	<b>8</b>
1.1 Intended Use.....	8
1.2 Symbols and Markings on the Product .....	8
1.3 Personnel Requirements.....	9
1.4 Safety Training .....	9
1.5 Installation and Commissioning .....	9
1.6 Operation in Explosive Atmospheres.....	10
1.7 Accessories.....	11
1.8 Maintenance .....	11
1.9 Disposal.....	11
1.10 Residual Risks.....	11
<b>2 Product.....</b>	<b>12</b>
2.1 Design and Function .....	12
2.2 Product Range and Options .....	12
2.3 System Overview .....	14
2.3.1 Typical Applications .....	15
2.4 Package Contents and Product Identification .....	17
2.4.1 Nameplate .....	18
2.5 Symbols and Markings on the Display .....	18
<b>3 Installation.....</b>	<b>20</b>
3.1 Assembly .....	20
3.1.1 Dimension Drawings .....	21
3.1.2 Housing Mounting Options .....	22
3.1.3 Pipe Mounting ZU0274.....	23
3.1.4 Protective Hood for Wall and Pipe Mounting ZU0737 .....	24
3.1.5 Panel-Mount Kit ZU0738 .....	25
3.1.6 Blanking Plugs, Reduction Sealing Inserts, Multiple Sealing Inserts.....	26
3.2 Connections .....	27
3.3 Electrical Installation .....	27
3.3.1 Connecting the Power Supply.....	28
3.3.2 Relay Contacts: Protective Wiring .....	29
3.3.3 Current Outputs.....	30
3.3.4 Terminal Assignments .....	31
3.4 Sensor Connection.....	32
3.4.1 Connecting the Memosens Sensor .....	32
3.4.2 Connecting an Analog Sensor/Second Memosens Channel .....	33
3.5 Terminal Assignments of Measuring Modules.....	35
<b>4 Commissioning.....</b>	<b>37</b>
4.1 Final Check During Commissioning .....	37

<b>5</b>	<b>Operation and Use</b> .....	<b>38</b>
5.1	Changing the User Interface Language .....	38
5.2	Keypad and Display .....	38
5.3	Menu Structure Overview .....	41
5.4	Access Control .....	41
5.5	Operating States .....	42
5.6	Measurement Display .....	42
<b>6</b>	<b>Parameter Setting</b> .....	<b>43</b>
6.1	Operating Levels.....	43
6.2	Locking a Function.....	44
6.3	Parameter Setting Menus.....	45
6.4	System Control .....	45
6.4.1	Memory Card .....	46
6.4.2	Transfer Configuration .....	46
6.4.3	Parameter Sets .....	47
6.4.4	Function Control.....	48
6.4.5	Calculation Blocks (TAN Option FW-E020) .....	48
6.4.6	Time/Date .....	48
6.4.7	Measuring Point Description .....	48
6.4.8	Firmware Update (TAN Option FW-E106).....	48
6.4.9	Option Activation.....	49
6.4.10	Logbook .....	49
6.4.11	Measurement Recorder (TAN Option FW-E103) .....	49
6.4.12	Buffer Table (TAN Option FW-E002).....	49
6.4.13	Concentration Table (TAN Option FW-E009) .....	50
6.4.14	Restore Factory Settings.....	50
6.4.15	Passcode Entry .....	50
6.5	Parameter Setting, General.....	50
6.5.1	Configuring the Measurement Display.....	51
6.5.2	Display.....	56
6.5.3	Measurement Recorder (TAN Option FW-E103) .....	56
6.6	Inputs and Outputs.....	57
6.6.1	Current Outputs.....	57
6.6.2	Relay Contacts.....	59
6.6.3	PID Controller .....	63
6.6.4	Control Inputs.....	64
6.7	Sensor Selection [I] [II] .....	65
6.8	pH Process Variable .....	66
6.8.1	Sensor Data .....	69
6.8.2	Calibration Presettings.....	72
6.8.3	Temperature Compensation of Process Medium .....	73
6.8.4	Delta Function.....	73
6.8.5	Messages.....	74
6.9	ORP Process Variable .....	75
6.9.1	Sensor Data .....	76
6.9.2	Calibration Presettings.....	77
6.9.3	Delta Function.....	77
6.9.4	Messages.....	78

6.10 Conductivity (Contacting) Process Variable.....	79
6.10.1 Sensor Data .....	80
6.10.2 Calibration Presettings.....	83
6.10.3 Temperature Compensation of Process Medium.....	83
6.10.4 Concentration (TAN Option FW-E009).....	84
6.10.5 TDS Function.....	84
6.10.6 USP Function .....	84
6.10.7 Messages.....	84
6.11 Conductivity (Inductive) Process Variable .....	86
6.11.1 Sensor Data .....	88
6.11.2 Calibration Presettings.....	90
6.11.3 Temperature Compensation of Process Medium.....	90
6.11.4 Concentration (TAN Option FW-E009).....	91
6.11.5 TDS Function.....	91
6.11.6 USP Function .....	91
6.11.7 Messages.....	92
6.12 Dual Conductivity Measurement.....	93
6.13 Oxygen Process Variable.....	94
6.13.1 Sensor Data .....	97
6.13.2 Calibration Presettings.....	100
6.13.3 Pressure Correction .....	100
6.13.4 Salinity Correction .....	101
6.13.5 Messages.....	101
6.14 Flow .....	102
6.15 HART Communication (TAN Option FW-E050).....	102
<b>7 Calibration/Adjustment .....</b>	<b>103</b>
7.1 Memosens Calibration/Adjustment .....	104
7.2 pH Process Variable Calibration/Adjustment .....	104
7.2.1 Calibration Methods .....	105
7.2.2 Temperature Compensation during Calibration .....	106
7.2.3 Calibration/Adjustment Methods.....	106
7.2.4 Calibration Mode: Calimatic.....	106
7.2.5 Calibration Mode: Manual.....	108
7.2.6 Calibration Mode: Product.....	109
7.2.7 Calibration Mode: Data Entry .....	110
7.2.8 Calibration Mode: ISFET Zero Point .....	111
7.2.9 Calibration Mode: Temperature .....	111
7.3 ORP Process Variable Calibration/Adjustment .....	112
7.3.1 Calibration Mode: ORP Data Entry.....	112
7.3.2 Calibration Mode: ORP Adjustment .....	112
7.3.3 Calibration Mode: ORP Check.....	113
7.3.4 Calibration Mode: Temperature .....	114
7.4 Conductivity (Contacting) Process Variable Calibration/Adjustment .....	115
7.4.1 Temperature Compensation during Calibration .....	115
7.4.2 Calibration/Adjustment Methods.....	116
7.4.3 Calibration Mode: Automatic.....	116
7.4.4 Calibration Mode: Manual.....	117
7.4.5 Calibration Mode: Product.....	118
7.4.6 Calibration Mode: Data Entry .....	120
7.4.7 Calibration Mode: Temperature .....	120

7.5	Conductivity (Inductive) Process Variable Calibration/Adjustment .....	121
7.5.1	Temperature Compensation during Calibration .....	121
7.5.2	Calibration/Adjustment Methods .....	122
7.5.3	Calibration Mode: Automatic.....	122
7.5.4	Calibration Mode: Manual.....	123
7.5.5	Calibration Mode: Product.....	124
7.5.6	Calibration Mode: Zero Point.....	125
7.5.7	Calibration Mode: Installation Factor.....	126
7.5.8	Calibration Mode: Data Entry .....	126
7.5.9	Calibration Mode: Temperature .....	127
7.6	Oxygen Process Variable Calibration/Adjustment .....	128
7.6.1	Calibration/Adjustment Methods .....	128
7.6.2	Calibration Mode: In Air .....	129
7.6.3	Calibration Mode: In Water.....	129
7.6.4	Calibration Mode: Data Entry .....	130
7.6.5	Calibration Mode: Product.....	131
7.6.6	Calibration Mode: Zero Point.....	133
7.6.7	Calibration Mode: Temperature .....	133
<b>8</b>	<b>Diagnostics .....</b>	<b>134</b>
8.1	Favorites Menu .....	134
8.2	Diagnostic Functions .....	135
8.2.1	Overview of Diagnostic Functions.....	135
8.2.2	Messages.....	135
8.2.3	Logbook .....	136
8.2.4	Device Information.....	137
8.2.5	Device Test.....	137
8.2.6	Measuring Point Description .....	138
8.2.7	Channel I/II Diagnostic Functions .....	138
<b>9</b>	<b>Maintenance Functions.....</b>	<b>140</b>
9.1	Overview of Maintenance Functions .....	140
9.2	Channel I/II Maintenance Functions.....	140
9.2.1	Sensor Monitor.....	141
9.2.2	Autoclaving Counter .....	141
9.2.3	Electrolyte Replacement/Membrane Body Replacement.....	141
9.2.4	Replacing the Membrane Body/Interior Body .....	141
9.3	Manual Function Check .....	142
9.3.1	Current Source .....	142
9.3.2	Relay Test.....	142
9.3.3	Controller Test .....	142
<b>10</b>	<b>Troubleshooting .....</b>	<b>143</b>
10.1	Malfunction States .....	143
10.2	Error Messages .....	143
10.3	Sensocheck and Sensoface.....	158
<b>11</b>	<b>Decommissioning.....</b>	<b>161</b>
11.1	Disposal.....	161
11.2	Returns .....	161

<b>12 Accessories.....</b>	<b>162</b>
12.1 Memory Card .....	162
<b>13 Specifications.....</b>	<b>165</b>
13.1 Power .....	165
13.2 Sensor Inputs (Intrinsically Safe) .....	165
13.3 Inputs and Outputs (SELV, PELV).....	165
13.4 Device .....	167
13.5 Rated Operating Conditions.....	168
13.6 Transport and Storage .....	168
13.7 Conformity.....	168
13.8 Interfaces.....	168
13.9 Measuring Functions.....	169
13.9.1 pH .....	169
13.9.2 Conductivity (Contacting).....	171
13.9.3 Conductivity (Inductive).....	172
13.9.4 Conductivity (Dual) .....	173
13.9.5 Temperature Compensation (Conductivity).....	174
13.9.6 Concentration Determination, Conductivity (TAN Option FW-E009) .....	174
13.9.7 Oxygen.....	175
13.10 Diagnostics and Statistics .....	177
<b>14 Annex .....</b>	<b>178</b>
14.1 Channel II Wiring Examples .....	178
14.1.1 pH Analog Wiring Examples.....	178
14.1.2 ORP Analog Wiring Example .....	184
14.1.3 ISM pH Wiring Example .....	185
14.1.4 Contacting Conductivity Wiring Examples.....	186
14.1.5 Inductive Conductivity Wiring Examples .....	188
14.1.6 Oxygen Wiring Examples .....	189
14.2 Buffer Tables .....	192
14.3 Calibration Solutions.....	200
14.4 TAN Options .....	202
14.4.1 pH Buffer Table: Entry of Individual Buffer Set (FW-E002) .....	202
14.4.2 Current Characteristic (FW-E006).....	204
14.4.3 Concentration Determination (FW-E009) .....	204
14.4.4 Pfudler Sensors (FW-E017) .....	209
14.4.5 Calculation Blocks (FW-E020) .....	211
14.4.6 HART (FW-E050) .....	215
14.4.7 Digital ISM Sensors (FW-E053) .....	216
14.4.8 Parameter Sets 1-5 (FW-E102) .....	217
14.4.9 Measurement Recorder (FW-E103) .....	218
14.4.10 Firmware Update (FW-E106).....	220
<b>15 Basics .....</b>	<b>221</b>
15.1 Basics of PID Control.....	221
<b>16 Abbreviations .....</b>	<b>223</b>
<b>Index.....</b>	<b>224</b>

# 1 Safety

This document contains important instructions for the use of the product. Always follow all instructions and operate the product with caution. If you have any questions, please contact Knick Elektronische Messgeräte GmbH & Co. KG (sometimes hereafter referred to as "Knick") using the information provided on the back page of this document.

## 1.1 Intended Use

Stratos Multi E401X is an industrial transmitter in 4-wire technology for installation in hazardous areas up to Zone 2. Up to two separately certified Ex sensors may be connected and operated in Zone 0. The device provides a digital Memosens input and an interface for analog or digital sensors. In the field of liquid analysis, the device can measure pH values, ORP, conductivity (contacting or inductive), and oxygen content, both dissolved and in the gaseous phase.

Alongside a permanently installed measuring channel I for Memosens sensors, the modular transmitter has a slot that can be equipped with analog or digital measuring modules (measuring channel II). The transmitter can be extended with device-specific add-on functions called TAN options.

The defined rated operating conditions must be observed when using this product. These conditions are set out in full in the Specifications chapter of the user manual, as well as, in parts, of the installation guide.

**USE CAUTION AT ALL TIMES WHEN INSTALLING, USING, OR OTHERWISE INTERACTING WITH THE PRODUCT. ANY USE OF THE PRODUCT EXCEPT AS SET FORTH HEREIN IS PROHIBITED, AND MAY RESULT IN SERIOUS INJURY OR DEATH, AS WELL AS DAMAGE TO PROPERTY. CUSTOMER SHALL BE SOLELY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM OR ARISING OUT OF AN UNINTENDED USE OF THE PRODUCT.**

### Inputs and Outputs (SELV, PELV)

The non-intrinsically safe signal input/output terminals may only be connected to non-shock-hazard equipment or systems (for example, SELV, PELV, ES1 in compliance with IEC 62368-1).








### Configuration

Replacing components may affect intrinsic safety. Stratos Multi E401X may only be equipped with a module of type MK-\*\*\*X and a memory card of type ZU1080-S-X\*\*\*.

### Devices Not Intended for Use in Hazardous Locations

Devices identified with an N in their product name must not be used in hazardous locations.

## 1.2 Symbols and Markings on the Product

	CE marking with identification number of the notified body involved in the production control.
	Special conditions and danger points! Observe the safety information and instructions on safe use of the product as outlined in the product documentation.
	Reminder to read the documentation.
	Protection class II
	European Union ATEX marking for operation in hazardous locations.
	FM approval for US and Canada
<b>IECEX</b>	IECEX marking for operation in hazardous locations.
	Marking of the Chinese organization NEPSI for operation in hazardous locations.



### 1.3 Personnel Requirements

Customer shall ensure that any personnel using or otherwise interacting with the product is adequately trained and has been properly instructed.

The operating company shall comply and cause its personnel to comply with all applicable laws, regulations, codes, ordinances and relevant industry qualification standards related to product. Failure to comply with the foregoing shall constitute a violation of operating company's obligations concerning the product, including but not limited to an unintended use as described in this document.

### 1.4 Safety Training

Upon request, Knick Elektronische Messgeräte GmbH & Co. KG will provide safety briefings and product training during initial commissioning of the product. More information is available from the relevant local contacts.

### 1.5 Installation and Commissioning

Adhere to all applicable local and national codes and standards for the installation of electrical equipment. Information on installation is provided in the installation guide for the Stratos Multi.

**Comply with the points below during installation and commissioning:**

- The device must be installed in a stationary location by a licensed electrician in compliance with all relevant regulations.
- The information provided on the control drawing and in the Specifications must be observed when installing in hazardous locations.
- Take care to avoid notches when stripping the wires.
- Prior to commissioning, the operating company must provide proof of the permissibility of interconnection with other equipment.
- A system specialist must commission the device, set its parameters, and make all necessary adjustments.

#### Cables

Only use cables with a suitable temperature resistance.

Transmitter	Cable temperature resistance
Stratos Multi	75 °C / 167 °F or higher

#### Mains Connection

The device does not have a power switch. An appropriately arranged and accessible disconnecting device for the transmitter must be present in the system installation. The disconnecting device must disconnect all non-grounded, current-carrying wires. The disconnecting device must be labeled in a way that enables the associated transmitter to be identified. The power line may carry dangerous touch voltages. Touch protection must be ensured by proper installation.

#### Parameter Setting and Adjustment

Incorrect parameter settings or adjustments can result in incorrect outputs. For this reason, Stratos Multi must be commissioned by a specialist, who will also set the parameters and make adjustments.

#### Function Check Mode (HOLD Function)

When you open the Parameter Setting, Calibration, or Maintenance menus, Stratos Multi switches to the function check (HOLD) mode. The current outputs and relay contacts behave in accordance with the parameter settings.

Operations must not be carried out while the device is in function check (HOLD) mode, as the system may behave unexpectedly and put users at risk.

### Relay Contacts

Make sure that the maximum ratings of the relay contacts are not exceeded even during switching. The relay contacts are subject to electrical erosion, which reduces their service life under inductive and capacitive loads.

### Degree of Protection

The housing of the device is dust-tight and offers complete protection against contact as well as protection against strong water jets.

- Europe: IP protection IP66/IP67
- USA: TYPE 4X Outdoor (with pressure compensation)

## 1.6 Operation in Explosive Atmospheres

The Stratos Multi E401X is certified for operation in explosive atmospheres.

Related certificates are included in the product's scope of delivery and are available at [www.knick.de](http://www.knick.de) in the current version.

Observe all applicable local and national codes and standards for the installation of electrical equipment in explosive atmospheres. For further guidance, consult the following:

- IEC 60079-14
- EU directives 2014/34/EU and 1999/92/EC (ATEX)
- NFPA 70 (NEC)
- ANSI/ISA-RP12.06.01

Comply with the points below:

- In a hazardous location, only cable glands with suitable approvals may be used. The installation instructions of the manufacturer must be observed.
- In hazardous locations, the device may only be cleaned with a damp cloth to prevent electrostatic charging.
- Devices and modules that have already been used must be subjected to a professional routine test before they may be operated in another zone or another type of protection.
- Before the product is commissioned, the operator must provide proof that the product is approved for connection to other equipment (including cables and wires). Connecting components designed for explosive atmospheres and those not designed for explosive atmospheres (mixed equipping) is not permitted.

Whenever it is likely that protection has been impaired, the device must be made inoperative and secured against unintended operation. The protection is likely to be impaired in the following cases, for example:

- the device shows visible damage
- failure to perform the intended function
- after prolonged storage at temperatures of below -30 °C/-22 °F or above 70 °C/158 °F
- after severe transport stresses

Before recommissioning the device, a professional routine test must be performed by Knick.

Manipulations of the device other than described in the user manual are not permitted.

### Opening the Device

When switched on, the device must not be opened during operation in Zone 2 hazardous locations.

## 1.7 Accessories

### Ex Memory Card

The ZU1080-S-X-\*\*\* memory card is an accessory for use in Ex Zone 2.

Before inserting or removing the ZU1080-S-X-\*\*\* memory card, make sure that the device has been disconnected from the power.

## 1.8 Maintenance

Stratos Multi does not require maintenance.

If maintenance is required at the measuring point (e.g., sensor replacement), function check mode (HOLD) must be activated as follows on the device:

- Open Calibration (the selected channel only)
- Open Maintenance (current source, measuring points)
- Open Parameter Setting at the operator and administrator levels

## 1.9 Disposal

The local codes and regulations must be observed when disposing of the product.

## 1.10 Residual Risks

The product has been developed and manufactured in accordance with generally accepted safety rules and regulations. The following residual risks remain:

- Ambient conditions with chemically corrosive substances may prevent the system from working properly.
- If access to the operator and administrator levels of the **Parameter Setting** menu is not protected by passcodes, faulty operation may occur.

## 2 Product

### 2.1 Design and Function

- The 1- and 2-channel transmitter permits a free combination of the pH/ORP process variables, conductivity (2-/4-electrode sensors, toroidal sensors), and oxygen, and can, for example, simultaneously measure pH values and conductivity.
- The TFT color display provides clear information on operating states and errors during parameter setting or measurement in accordance with NAMUR recommendations.
- The user interface is multi-lingual with full-text menu navigation.

#### Basic

1 measuring channel

2 current outputs

Second measuring channel via add-on measuring module

Multiparameter: Process variables freely selectable from pH, ORP, oxygen, conductivity (contacting/inductive)

Door contact

3 freely assignable relay contacts

for NAMUR messages (Failure, Maintenance Required, Out of Specification, Function Check), setpoint alarm relay, controller, rinse contact parameter set, USP (for conductivity), Sensoface

Function check input (HOLD)

2 control inputs

Flow measurement

Additional functions (TAN options) can be enabled by entering a transaction number (TAN).

→ *Product Range and Options, p. 12*

### 2.2 Product Range and Options

Version	Possible Combinations
1-channel	1x Memosens sensor
	1x analog sensor via measuring module (MK module)
	1x digital ISM sensor via measuring module (MK module) and TAN option FW-E053
2-channel	2x Memosens sensors (1x via MK-MS module)
	1x Memosens sensor and 1x analog sensor via measuring module (MK module)
	1x Memosens sensor and 1x digital ISM sensor via measuring module (MK module) and TAN option FW-E053

#### Product Line

Device (Digital Basic Unit)	Control Drawing	Order No.
Stratos E401X	212.502-100	E401X
<b>Measuring Modules, Ex</b>		
pH value, ORP measurement	212.002-110	MK-PH015X
Oxygen measurement	212.002-120	MK-OXY045X
Contacting conductivity measurement	212.002-130	MK-COND025X
Inductive conductivity measurement	212.002-140	MK-CONDI035X
Memosens multiparameter (for 2-channel version)	212.002-150	MK-MS095X

The following add-on functions (TAN options) can be enabled by entering a TAN:

<b>Add-on Function (TAN Option)</b>	<b>Order No.</b>
pH buffer table: Entry of individual buffer set	FW-E002
Current characteristic	FW-E006
Concentration determination for use with conductivity sensors	FW-E009
Oxygen measurement in low oxygen concentrations	FW-E015
Pfudler sensors	FW-E017
Calculation blocks	FW-E020
HART	FW-E050
Current input	FW-E051
Current outputs 3 and 4	FW-E052
Digital ISM pH/ORP and amperometric ISM oxygen sensors	FW-E053
Parameter sets 1 to 5	FW-E102
Measurement recorder	FW-E103
Logbook	FW-E104
Firmware update	FW-E106
<b>Accessories</b>	<b>Order no.</b>
Pipe-mount kit	ZU0274
Panel-mount kit	ZU0738
Protective hood	ZU0737
M12 socket for sensor connection with Memosens cable/M12 connector	ZU0860
<b>Ex Memory Cards</b>	<b>Order No.</b>
Data Card	ZU1080-S-X-D
FW Update Card	ZU1080-S-X-U
FW Repair Card	ZU1080-S-X-R
Custom FW Update Card	ZU1080-S-X-S-***
Custom FW Repair Card	ZU1080-S-X-V-***

See also

→ *Memory Card*, p. 162

### Operation with Analog Sensors

To enable operation with analog sensors, analog measuring modules are plugged in and must be configured during initial start-up.

### Parameter Sets

Two complete parameter sets (A, B) can be stored in the device. The control element for switching between the parameter sets (optocoupler input OK1, softkey) is selected in the system control.

The currently activated set can be signaled by a relay contact.

### Power Supply


Current is provided through a universal mains supply 80 ... 230 V AC, 45 ... 65 Hz/24 ... 60 V DC.

### HART Data Transmission (TAN Option)

Device identification, measured values, statuses and messages, calibration data, configurations of the current loop, and HART variables are transmitted using HART communication.

→ *HART (FW-E050)*, p. 215



### 2.3 System Overview

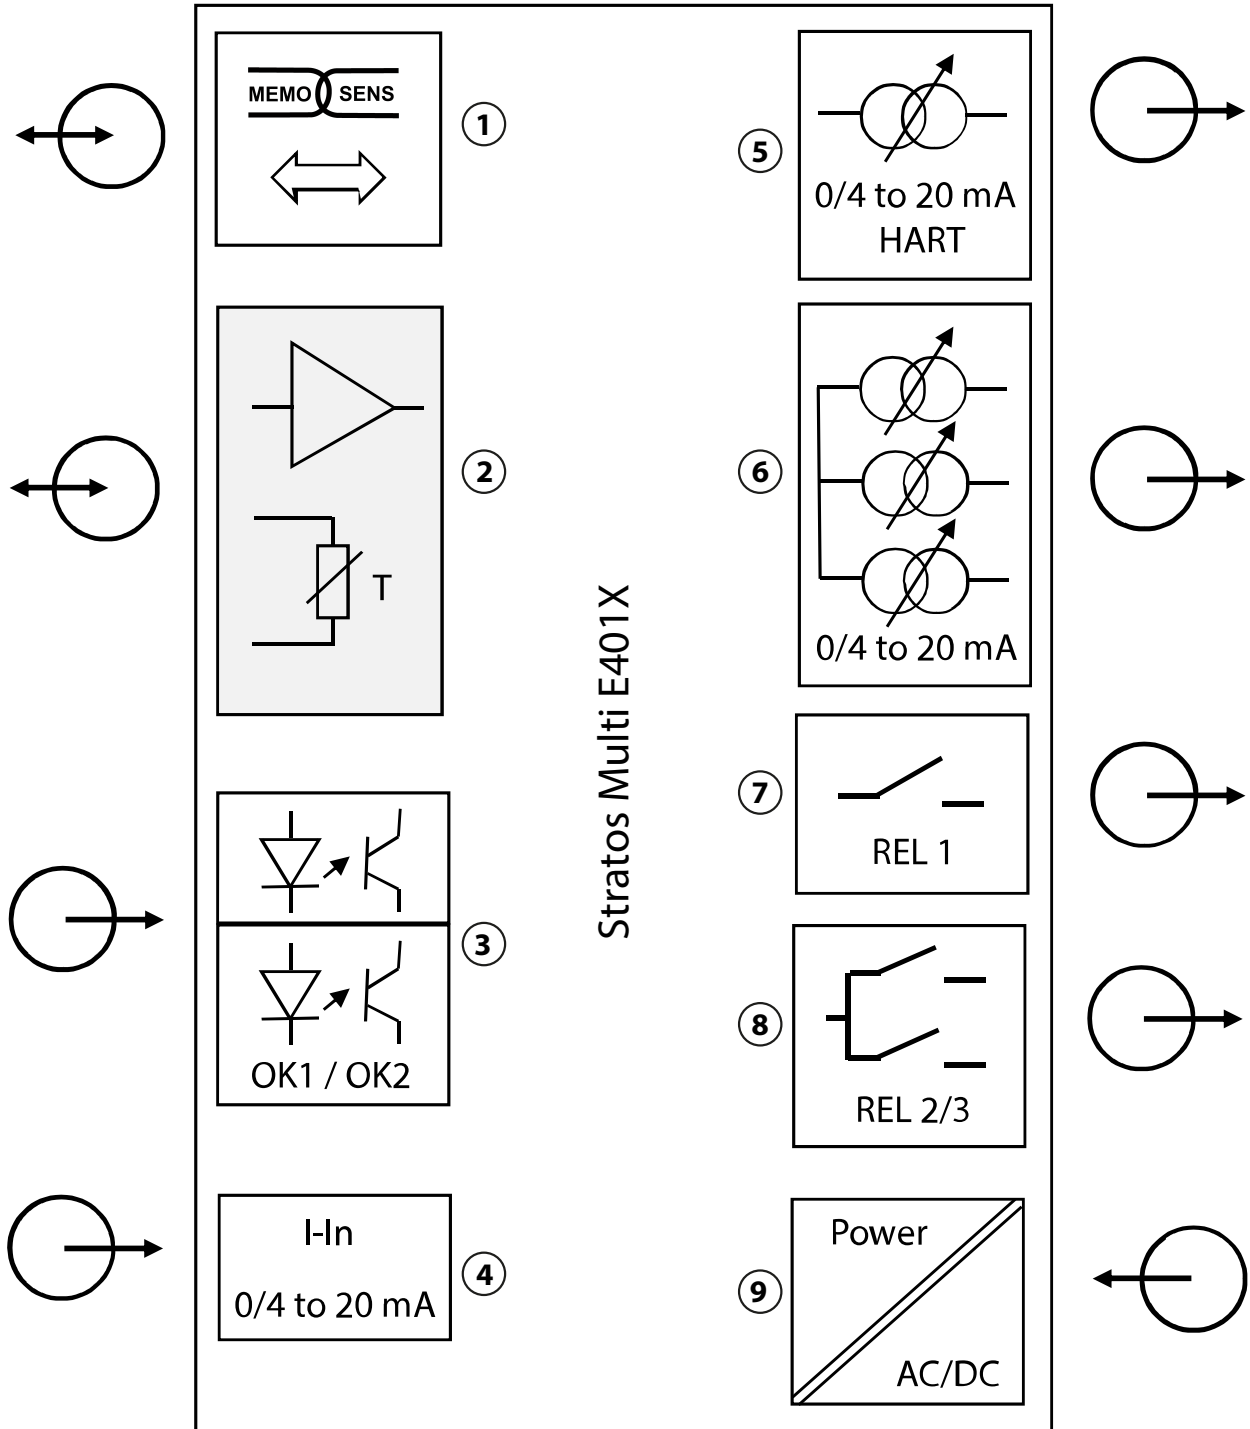


1	Input for Memosens sensor	6	Current outputs 2/3/4: Active (current outputs 3 and 4: TAN option FW-E052)
2	Port for an analog MK module or Memosens via MK-MS module	7	Relay contact K1: Messages, limits, rinse contact, ...
3	Optocoupler inputs OK1/OK2 OK1: Parameter set selection A/B, flow, ... OK2: Function check (HOLD)	8	Relay contact K2/K3: Controller or messages, limits, rinse contacts, ...
4	Current input 0/4 ... 20 mA for external pressure transmitter (TAN option FW-E051)	9	Power input: 80 ... 230 V AC / 24 ... 60 V DC < 15 VA/10 W
5	Current output 1: 0/4 ... 20 mA / HART active (TAN option FW-E050 HART: 4 ... 20 mA)		

### 2.3.1 Typical Applications

#### Memosens pH Measurement and PID Control

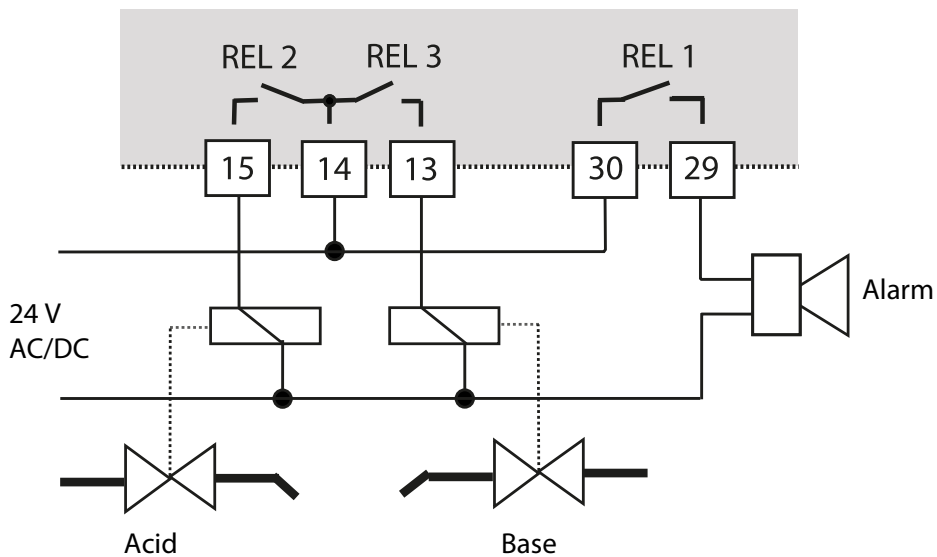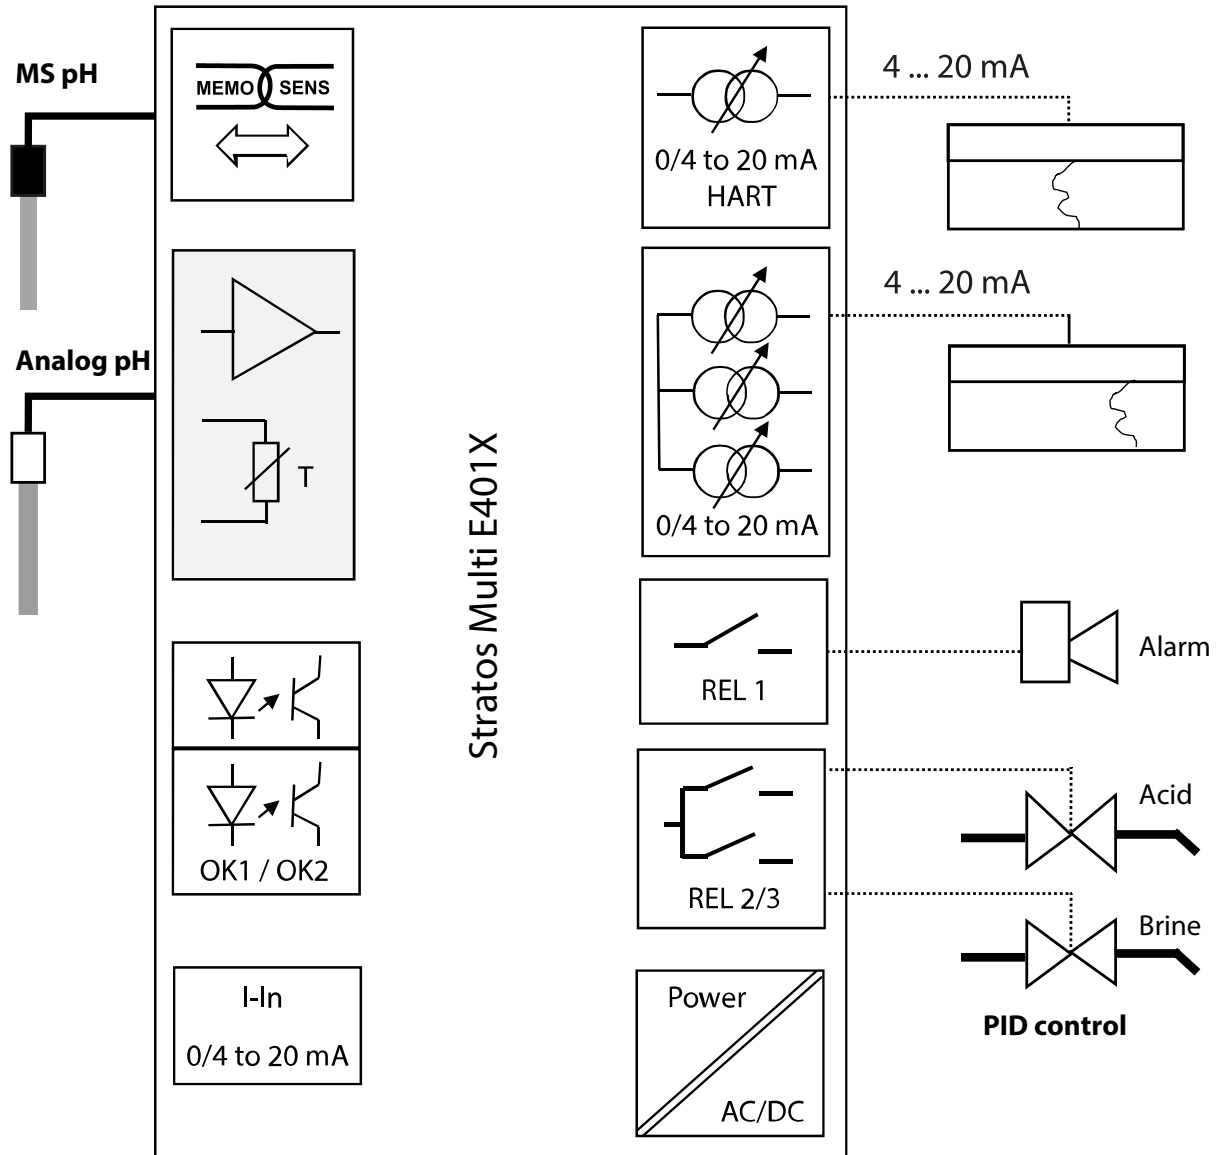

**Memosens Oxygen Measurement and Pressure Correction with External Pressure Transmitter  
(with TAN Option FW-E051 "Current Input")**

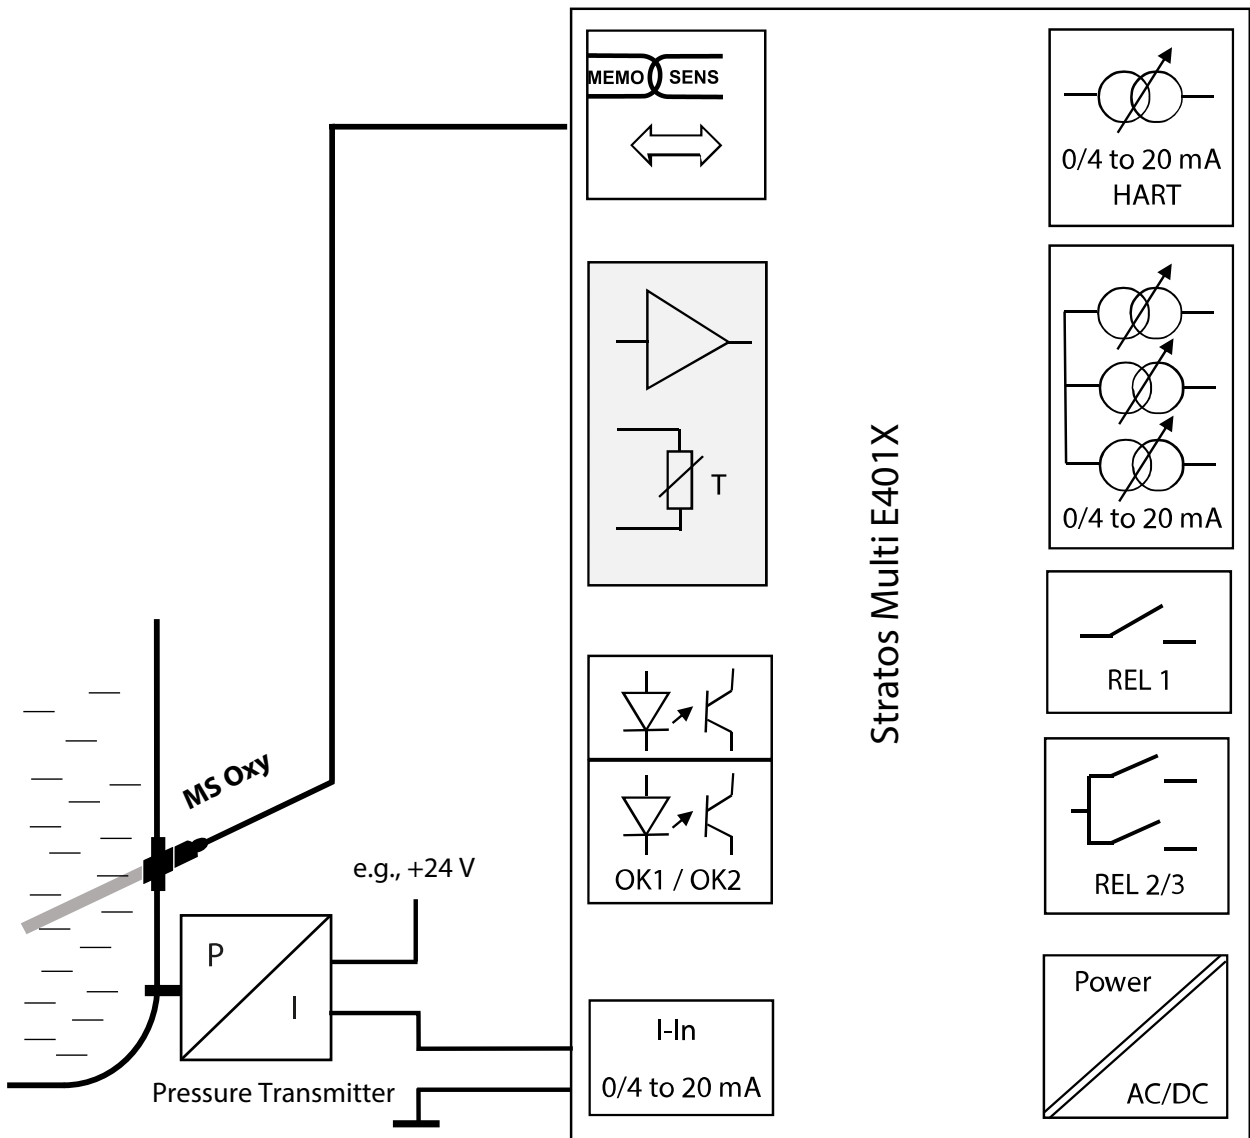




## 2.4 Package Contents and Product Identification

- Stratos Multi basic unit
- Bag containing small accessory parts (2x plastic sealing plugs, 1x hinge pin, 1x plate for conduits, 2x insertable jumpers, 1x reduction sealing insert, 1x multiple sealing insert, 2x blanking plugs, 5x cable glands, and M20x1.5 hex nuts)
- Test report 2.2 according to EN 10204
- Installation Guide
- Safety Guide
- Control Drawing 212.502-100
- EU Declaration of Conformity


**Note:** Check all components for damage upon receipt. Do not use damaged parts.

Measuring modules are not included in the basic unit's package contents.

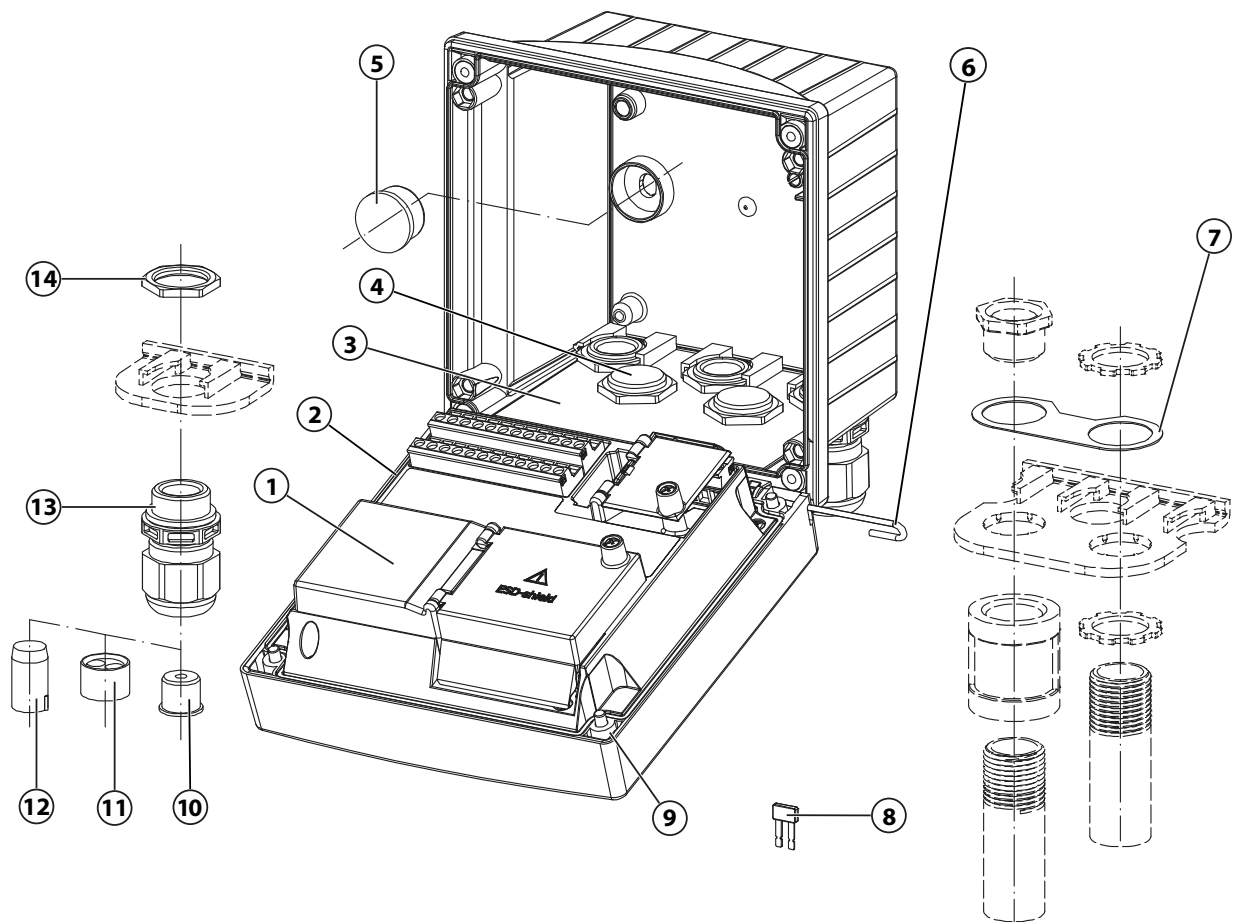

1 Front unit	8 Insertable jumper (2x)
2 Circumferential seal	9 Enclosure screw (4x)
3 Rear unit	10 Reduction sealing insert (1x)
4 Holes for cable glands	11 Multiple sealing insert (1x)
5 Plastic sealing plug (2x), for sealing in case of wall mounting	12 Blanking plug (2x)
6 Hinge pin (1x), insertable from either side	13 Cable gland (5x)
7 Plate (1x), for conduit mounting: Place washer between housing and nut	14 Hex nut (5x)

### 2.4.1 Nameplate

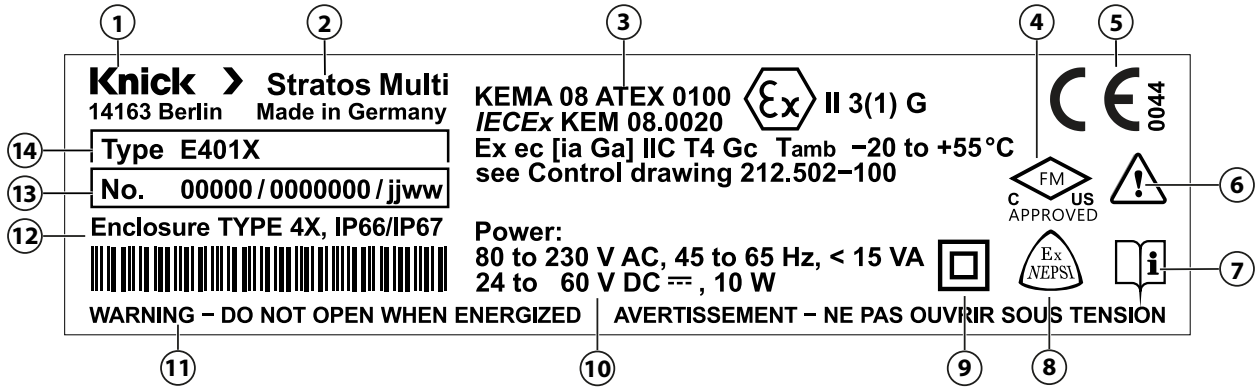









 





 










1 Name of manufacturer	8 Ex approval for China
2 Product name	9 Protection class II
3 ATEX and IECEx marking, specification of hazardous location, and number of Control Drawing	10 Power rating
4 FM approval for US and Canada	11 Warning to indicate that in a hazardous location the device may only be opened when it is de-energized.
5 Approval for Europe with CE mark	12 Degree of protection
6 Special conditions: Read the User Manual, observe the Specifications, and follow the instructions in the Safety Guide.	13 Product number/Serial number/Production year and week
7 Reminder to read the documentation	14 Model designation

You can view the device type, serial number, and firmware, hardware, and bootloader versions of your device in the Diagnostics menu: [Menu Selection](#) ▶ [Diagnostics](#) ▶ [Device Information](#)

→ *Device Information*, p. 137

### 2.5 Symbols and Markings on the Display


	Function check in accordance with NAMUR NE 107 <i>Wrench symbol on orange background</i> The NAMUR "HOLD" contact is active. Current outputs as configured: Currently measured value: The currently measured value appears at the current output. Last measured value: The last measured value is held at the current output. Fixed value: The current output supplies a fixed value.
	Out of specification in accordance with NAMUR NE 107 <i>Black question mark on yellow background</i> The NAMUR "Out of Specification" contact is active. Error message: <a href="#">Diagnostics</a> ▶ <a href="#">Message List</a>
	Failure in accordance with NAMUR NE 107 <i>Flashing black cross symbol on red background</i> The NAMUR "Failure" contact is active. Error message: <a href="#">Diagnostics</a> ▶ <a href="#">Message List</a>
	Maintenance required in accordance with NAMUR NE 107 <i>Oil can symbol on blue background</i> The NAMUR "Maintenance Required" contact is active. Error message: <a href="#">Diagnostics</a> ▶ <a href="#">Message List</a>
	The device is in calibration mode. Function check (HOLD) is active.
	The device is in maintenance mode. Function check (HOLD) is active.

	The device is in parameter setting mode. Function check (HOLD) is active.
	The device is in diagnostics mode.
	Selectable parameter sets (A/B). Indicates which parameter set is currently active when a control element for parameter set selection was selected:
	Parameter Setting ▶ System Control ▶ Function Control
	A “closed” Data Card (memory card) is located in the device. The memory card can be removed. If you want to continue using the card, select “Open Memory Card” in the Maintenance menu.
	There is an enabled Data Card (memory card) in the device. <b>Note:</b> Select “Close Memory Card” in the Maintenance menu before removing the memory card.
	There is an FW Update Card (memory card) in the device. You can save the current device firmware or perform a firmware update from the memory card <b>Note:</b> Check the parameter settings after updating.
	Free firmware repair in the event of device errors. The TAN option FW-E106 is not required here. General data cannot be stored on this card.
	Designates the measuring channel for clear assignment of measured-value/parameter displays in the case of identical process variables. Channel I: Memosens sensor Channel II: Measuring module for analog sensor or second Memosens sensor
	Channel CI: Calculation block 1 Channel CII: Calculation block 2
	To the left of a menu line that contains a further menu level. Pressing <i>Enter</i> opens the submenu.
	To the left of a menu line that, at administrator level, can be blocked from access at operator level.
	To the left of a menu line that, at administrator level, was blocked from access at operator level.
	When in measuring mode, Sensoface smileys indicate the quality of the sensor data: Happy
	Neutral
	Sad
	Wait; device is busy.
	Product calibration was not completed. The lab value still needs to be entered.
	To the left of a Diagnostics menu item set as a “Favorite”.

## 3 Installation

### 3.1 Assembly

**NOTICE!** Possible product damage. Use only a suitable Phillips head screwdriver to open and close the housing. Do not use sharp or pointed objects.

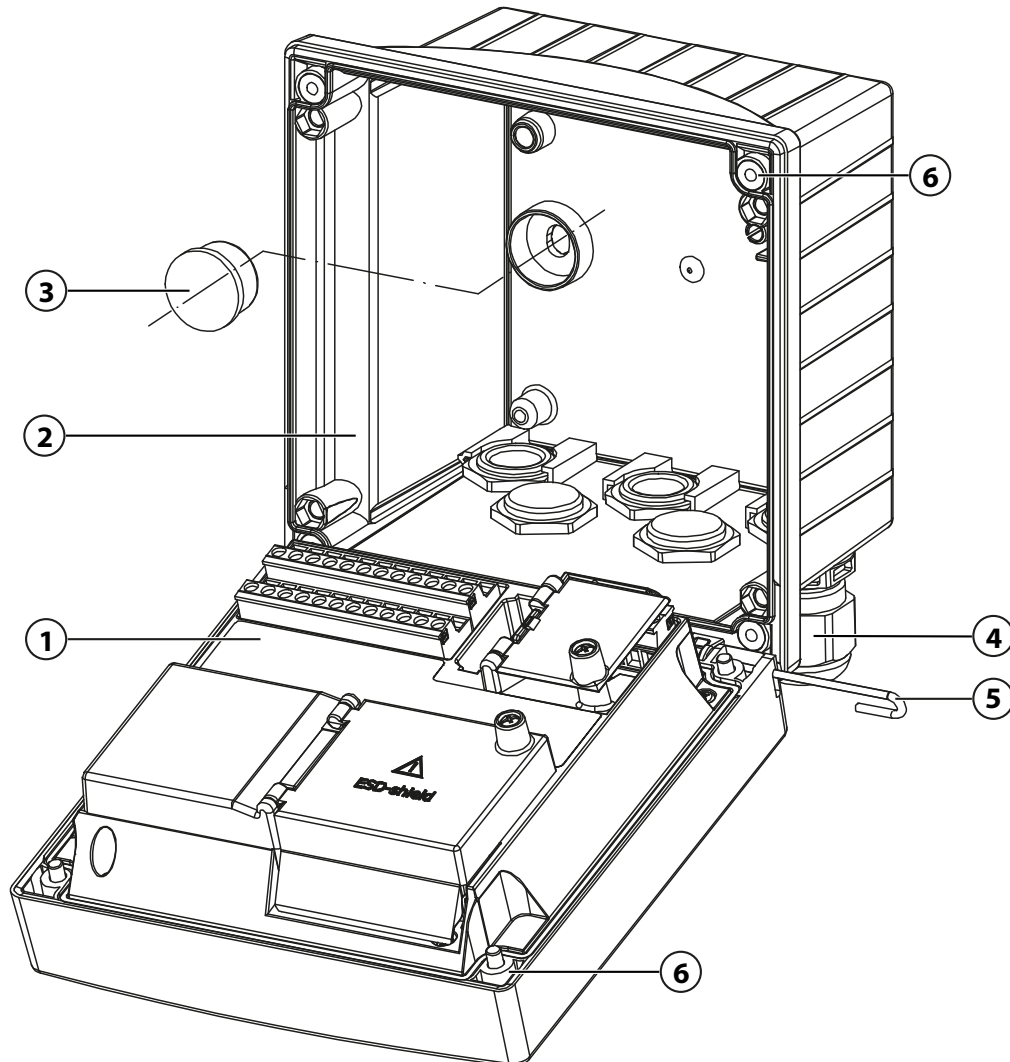

#### Assembling the Housing

01. Select mounting type and install.

- ✓ Wall mounting → *Dimension Drawings*, p. 21
- ✓ Pipe mounting → *Pipe Mounting ZU0274*, p. 23
- ✓ Panel mounting → *Panel-Mount Kit ZU0738*, p. 25

02. Following wall mounting, seal the holes with plastic sealing plugs **(3)**.

**▲ CAUTION! Risk of losing the specified ingress protection.** Observe the permissible cable diameters and tightening torques. Fasten the cable glands and screw together the housing correctly. Do not contaminate or damage the circumferential seal.

03. Install the cable glands **(4)** from the bag containing small accessory parts in the rear unit.

→ *Package Contents and Product Identification*, p. 17

04. Pass the sensor cable through the cable glands.


05. Seal unused cable glands **(4)** with blanking plugs.

→ *Blanking Plugs, Reduction Sealing Inserts, Multiple Sealing Inserts*, p. 26

- 06. Insert any modules. → *Connecting an Analog Sensor/Second Memosens Channel, p. 33*
- 07. Connect the sensor or sensors. → *Connecting the Memosens Sensor, p. 32*
- 08. Push in the hinge pin **(5)** to connect the front unit **(1)** and rear unit **(2)**.
- 09. Open the front unit and tighten the captive enclosure screws **(6)** on the front of the front unit **(1)** in diagonal sequence using a Phillips head screwdriver.

### 3.1.1 Dimension Drawings

**Note:** All dimensions are given in millimeters [inches].

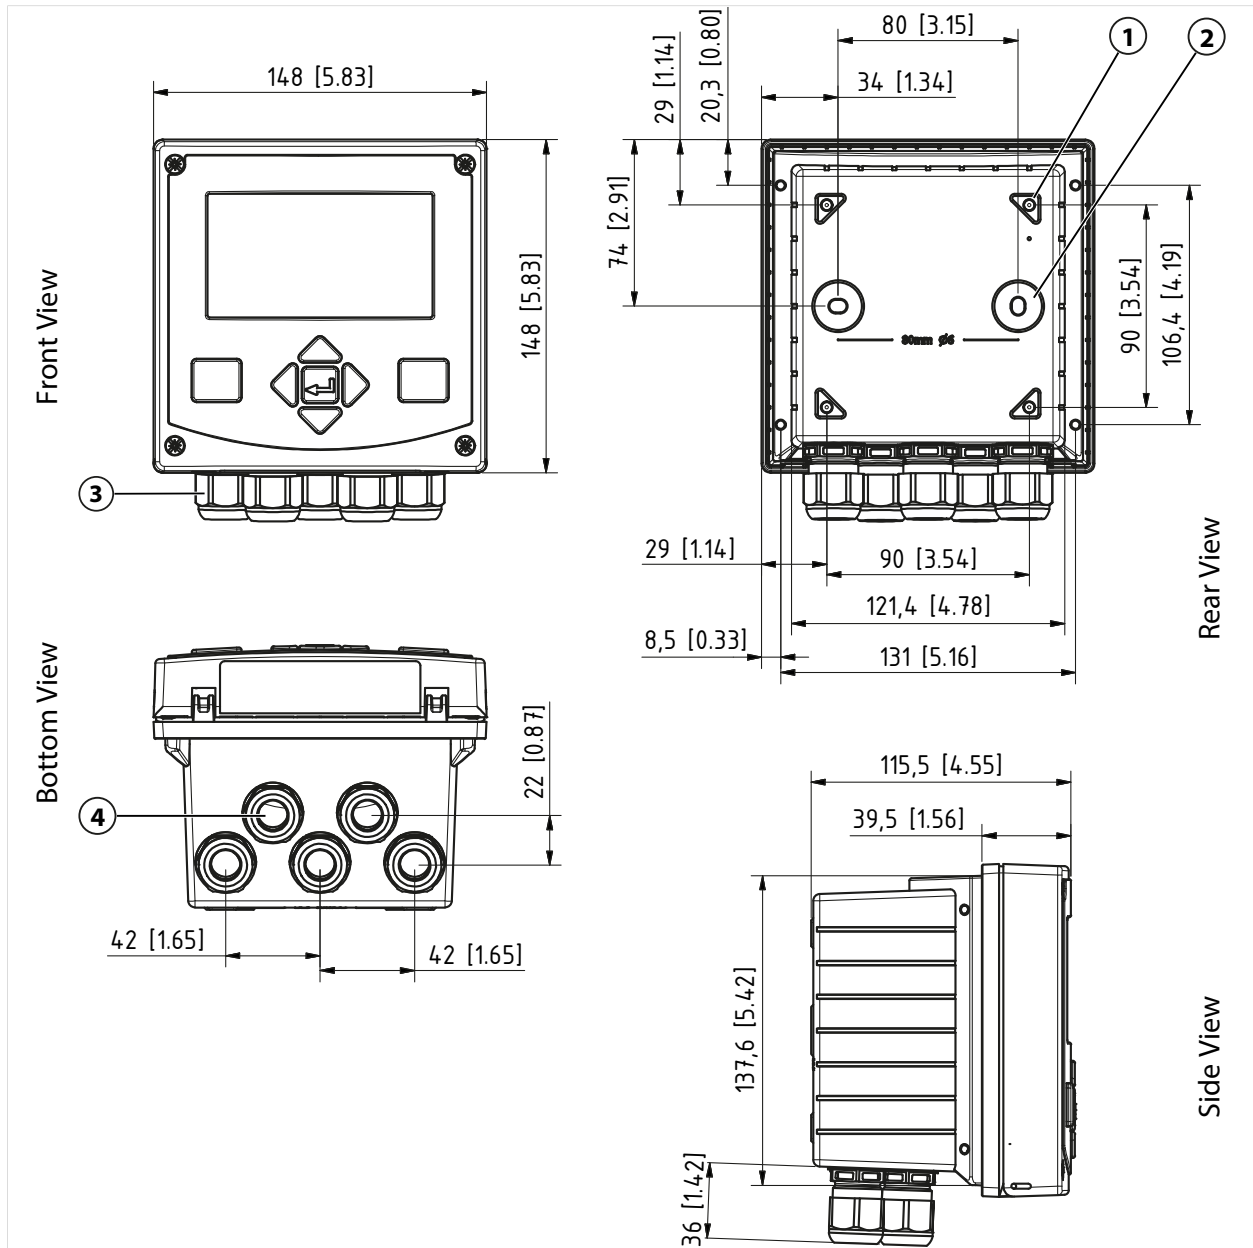

- |   |  |
|---|--|
| 1 Holes for pipe mounting, 4x                                       | 3 Cable glands, 5x                                     |
| 2 Holes for wall mounting, 2x<br>Sealing with plastic sealing plugs | 4 Holes for cable gland or 1/2" conduit, ø 21.5 mm, 2x |

See also

→ *Blanking Plugs, Reduction Sealing Inserts, Multiple Sealing Inserts, p. 26*

### 3.1.2 Housing Mounting Options

**Note:** All dimensions are given in millimeters [inches].

Knockouts in the rear unit enable different mounting options:


- Wall mounting → *Dimension Drawings, p. 21*
- Pipe mounting → *Pipe Mounting ZU0274, p. 23*
- Panel mounting → *Panel-Mount Kit ZU0738, p. 25*
- Protective hood → *Protective Hood for Wall and Pipe Mounting ZU0737, p. 24*

Cable glands for connecting sensors:

- 3 knockouts for M20x1.5 cable glands  
→ *Blanking Plugs, Reduction Sealing Inserts, Multiple Sealing Inserts, p. 26*
- 2 knockouts for M20x1.5 or NPT 1/2" cable glands or rigid metallic conduit

**Note:** Install the hinge pin to prevent tensile strain on the measuring cables when replacing the front unit. Imprecise measuring values may result if this is not done.

#### Mounting Clearance

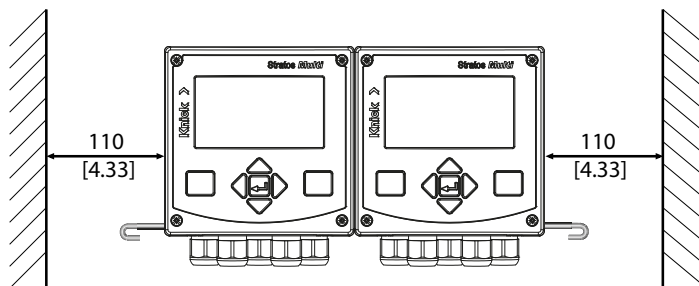


There is a 100 mm hinge pin in the bag containing small accessory parts included in the package contents → *Package Contents and Product Identification, p. 17*. The hinge pin connects the front and rear units. Depending on space requirements, the hinge pin can be inserted on the left or right. In order to replace the front unit, a minimum clearance of 110 mm [4.33 inches] must be maintained on the relevant side.

### 3.1.3 Pipe Mounting ZU0274

**Note:** All dimensions are given in millimeters [inches].

Pipe dimensions:

Diameter 40 ... 60 mm [1.57 ... 2.36"] or edge length 30 ... 45 mm [1.18 ... 1.77"]

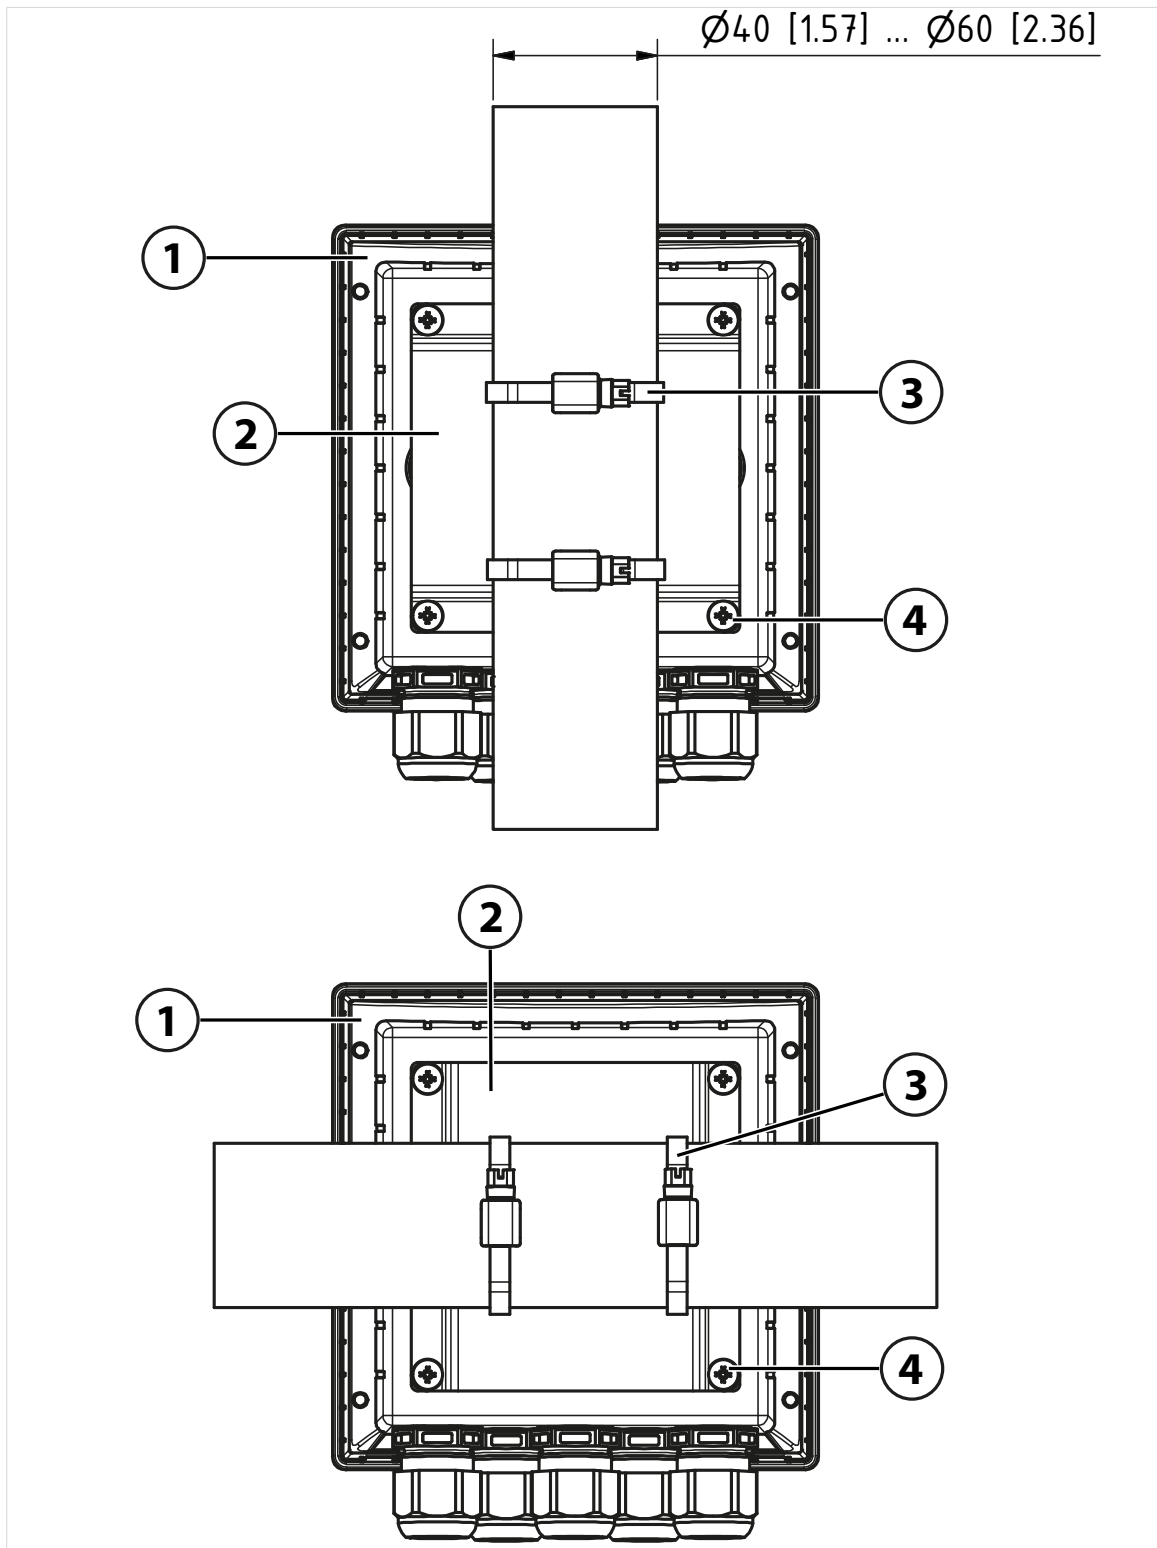

1 For vertical or horizontal posts or pipes


2 Pipe-mount plate, 1x

3 Hose clamp with worm gear drive according to DIN 3017, 2x

4 Self-tapping screw, 4x

### 3.1.4 Protective Hood for Wall and Pipe Mounting ZU0737

**Note:** All dimensions are given in millimeters [inches].

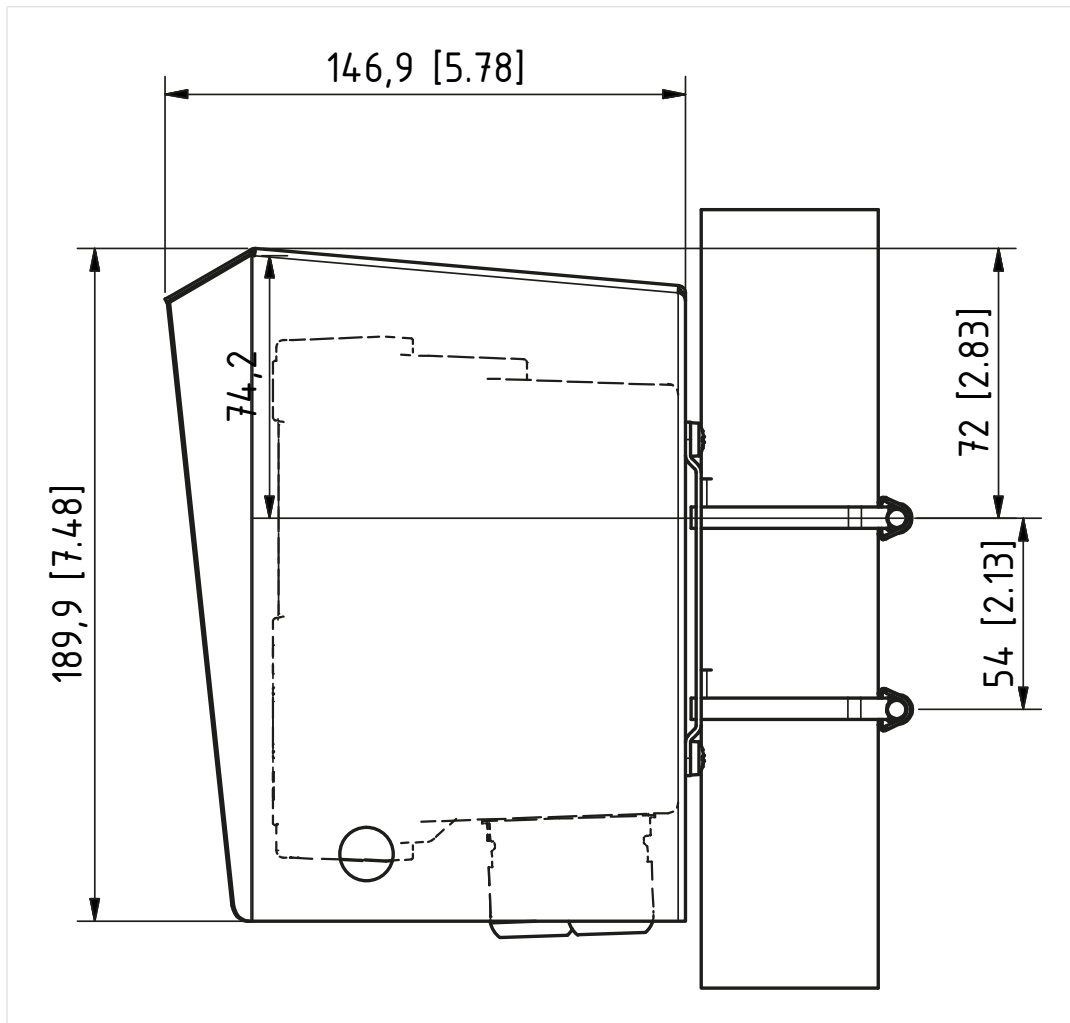

The protective hood can only be used for wall or pipe mounting.


The package contents includes 4 M6 nuts for fastening the protective hood on the threaded rod of the pipe-mount kit.



### 3.1.5 Panel-Mount Kit ZU0738

**Note:** All dimensions are given in millimeters [inches].

Cutout 138 mm x 138 mm (DIN 43700)

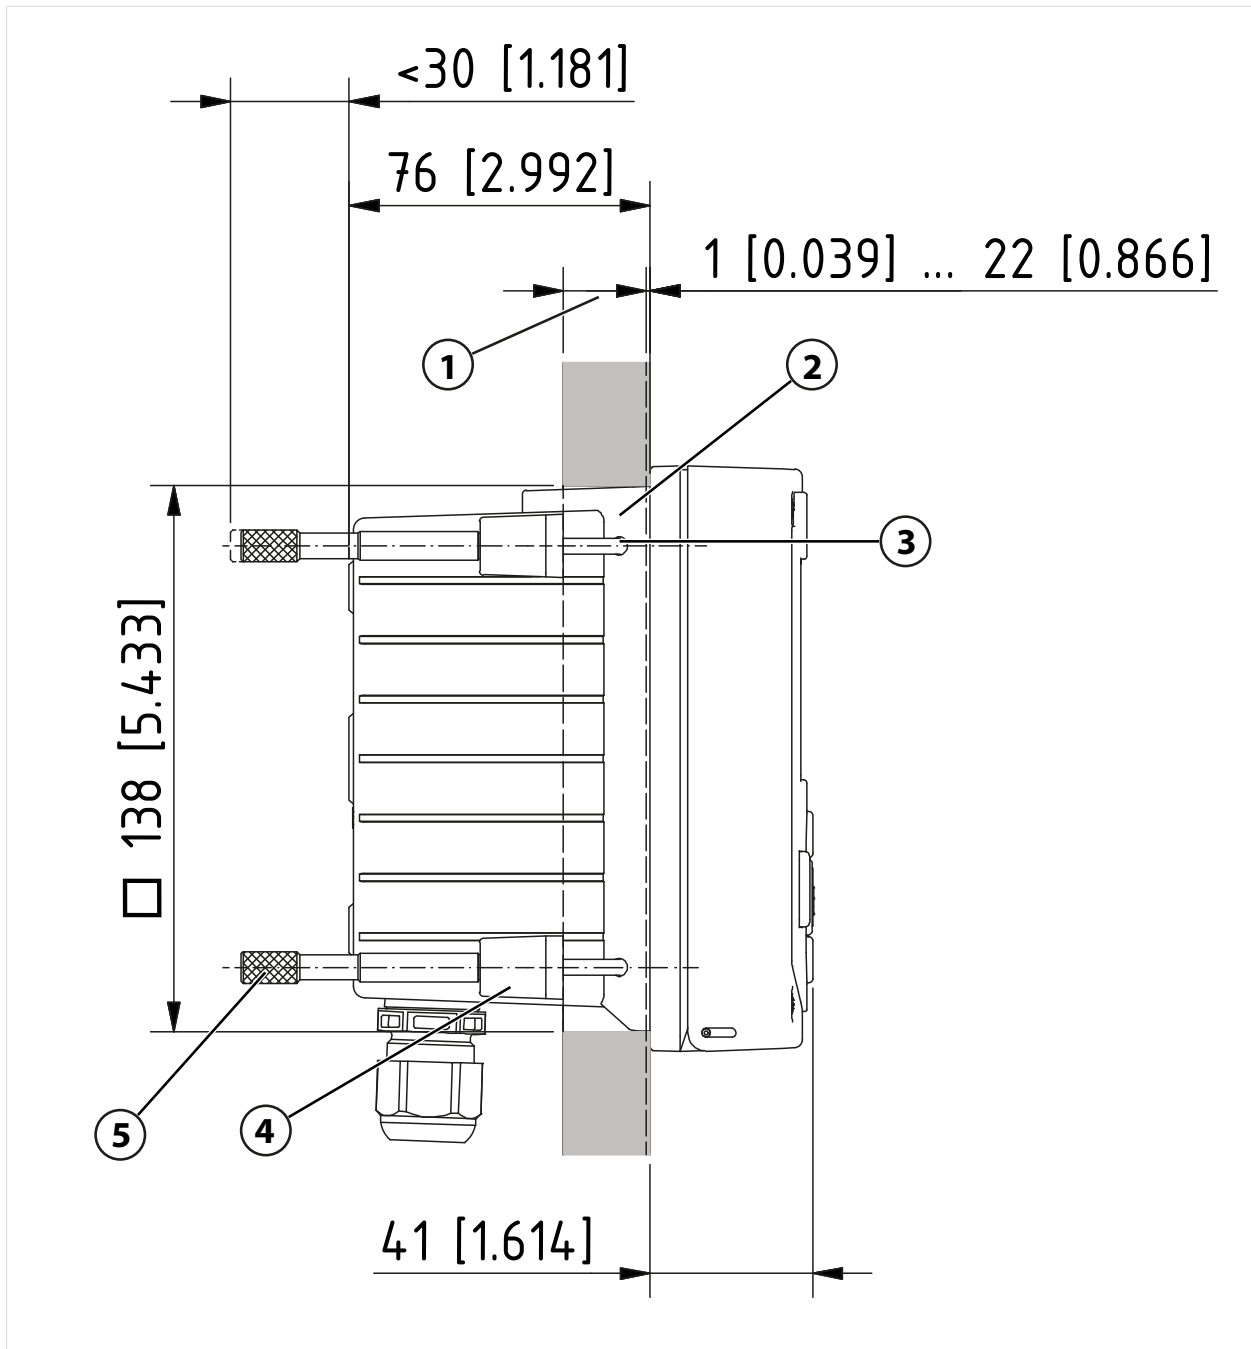


1 Position of panel	4 Span piece, 4x
2 Circumferential seal, 1x	5 Threaded sleeve, 4x
3 Screw 60.0 x 4.0 mm, 4x	

### 3.1.6 Blanking Plugs, Reduction Sealing Inserts, Multiple Sealing Inserts

Only use suitable and certified cable glands with suitable approvals in a hazardous location, e.g., WISKA Type ESKE/1 M20.


As delivered, each cable gland includes a standard sealing insert. Reduction and multiple sealing inserts are available for tight insertion of one or two thinner cables. The coupling can be tightly sealed using a blanking plug. Handling is as shown below.

**⚠ CAUTION! Risk of losing the specified ingress protection.** Fasten the cable glands and screw together the housing correctly. Observe the permissible cable diameters and tightening torques. Only use original accessories and spare parts.

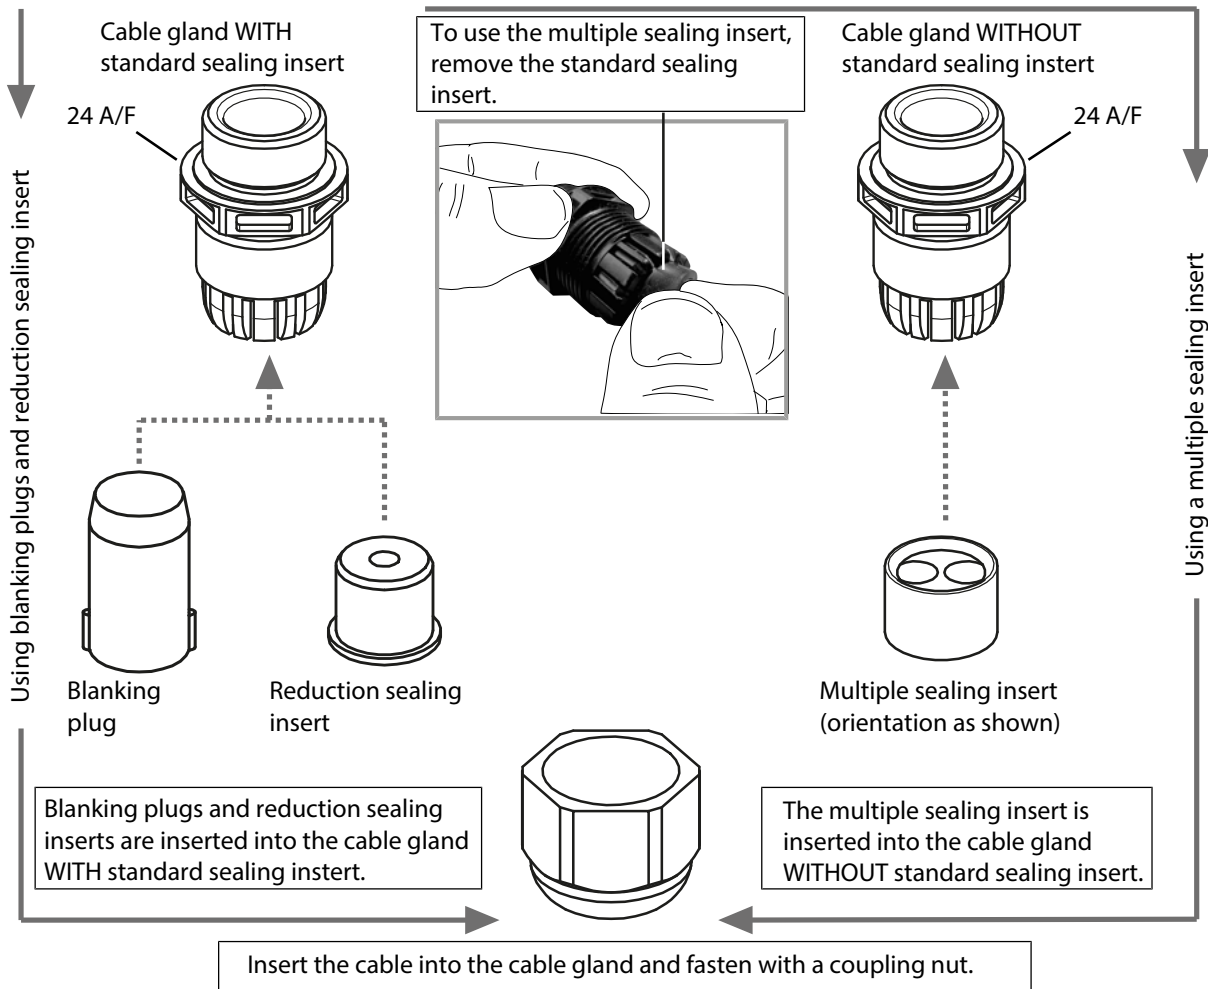

### 3.2 Connections

Rear of front unit

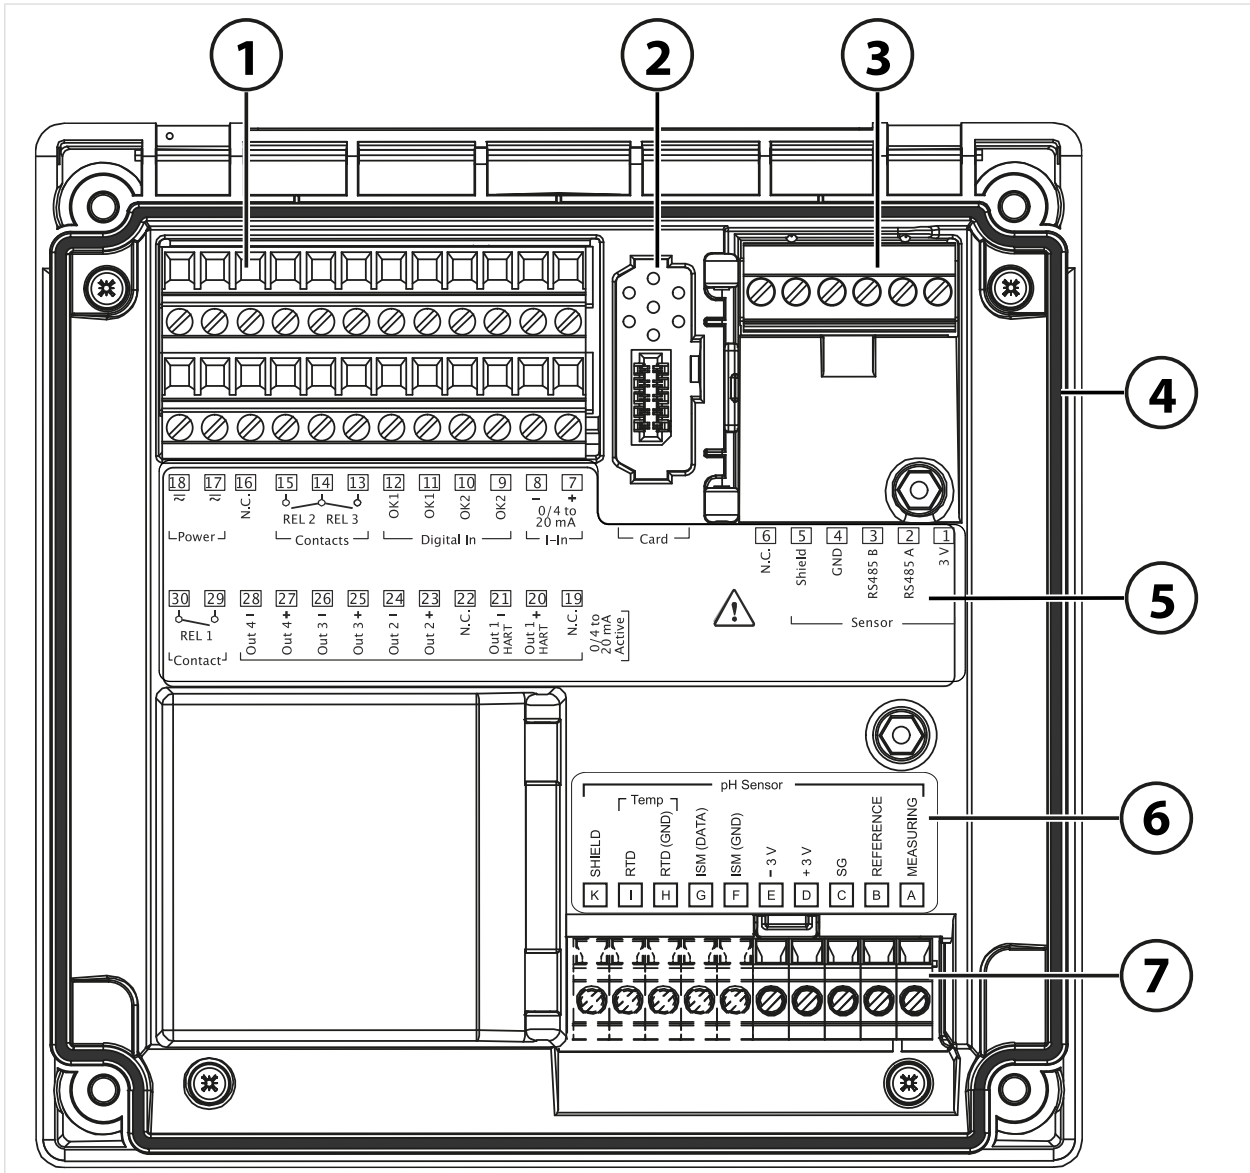

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Terminals for inputs, outputs, relay contacts, power supply</li> <li>2 Slot for the memory card. Follow the instructions for installing the memory card.</li> <li>3 RS-485 interface: Sensor connection for Memosens or digital sensors</li> <li>4 Circumferential seal</li> </ul> | <ul style="list-style-type: none"> <li>5 Terminal plate</li> <li>6 Module plate for analog sensors; example for pH module</li> <li>7 Module slot for measuring modules</li> </ul> |
|---|---|

**⚠ CAUTION! Risk of losing the specified ingress protection.** Do not contaminate or damage the circumferential seal.

### 3.3 Electrical Installation

**⚠ WARNING! The transmitter does not have a power switch.** An appropriately arranged and accessible disconnecting device for the transmitter must be present in the system installation. The disconnecting device must disconnect all non-grounded, current-carrying wires and be labeled such that the associated transmitter can be identified.

Before commencing with the installation, make sure that all lines to be connected are de-energized.

**Cable Glands**

In a hazardous location, only cable glands with suitable approvals may be used. The installation instructions of the manufacturer must be observed.

Cable glands	5 cable glands M20 x 1.5 A/F 24 mm WISKA type ESKE/1 M20
Clamping ranges	Standard sealing insert: 7 ... 13 mm Reduction sealing insert: 4 ... 8 mm Multiple sealing insert: 5.85 ... 6.5 mm
Tensile strain	Not permitted, suitable for "fixed installation" only

**⚠ CAUTION! Risk of losing the specified ingress protection.** Fasten the cable glands and screw together the housing correctly. Observe the permissible cable diameters and tightening torques. Only use original accessories and spare parts.

**NOTICE!** Strip the insulation from the wires using a suitable tool to prevent damage. Stripping length → *Specifications, p. 165.*


01. Wire the current outputs. Deactivate unused current outputs in the parameter settings or use jumpers.
02. Wire the relay contacts and inputs if necessary.
03. Connect the power supply (values → *Specifications, p. 165*).
04. When measuring with analog/ISM sensors or a second Memosens sensor: Insert the measuring module into the module slot.
05. Connect the sensor(s).
06. Check whether all connections are correctly wired.
07. Close the housing and successively tighten the enclosure screws in a diagonal pattern.
08. Before switching on the power supply, make sure its voltage is within the specified range.
09. Switch on the power supply.

See also

→ *Channel II Wiring Examples, p. 178*

→ *Package Contents and Product Identification, p. 17*

**3.3.1 Connecting the Power Supply**

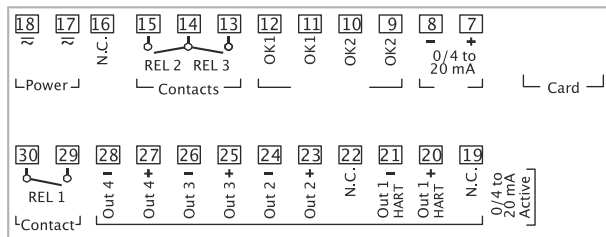

**⚠ WARNING! The power line may carry dangerous touch voltages.** Touch protection must be ensured by proper installation.

**Terminal**

17, 18	Power supply, reverse polarity protected, see Specifications
--------	--

### 3.3.2 Relay Contacts: Protective Wiring

Relay contacts are subject to electrical erosion. Especially with inductive and capacitive loads, the service life of the contacts will be reduced. For suppression of sparks and arcing, components such as RC combinations, nonlinear resistors, series resistors, and diodes should be used.

**NOTICE!** Make sure that the maximum ratings of the relay contacts are not exceeded, even during switching. → *Power, p. 165*


#### Information Concerning Relay Contacts

As delivered, the relay contacts are suitable for low signal currents (down to approx. 1 mA). If currents above approx. 100 mA are switched, the gold plating is destroyed during the switching process. After that, the contacts will not reliably switch low currents.

Configuration of relay contacts → *Relay Contacts, p. 59*


Wiring of relay contacts → *Terminal Assignments, p. 31*

#### Typical AC Application with Inductive Load

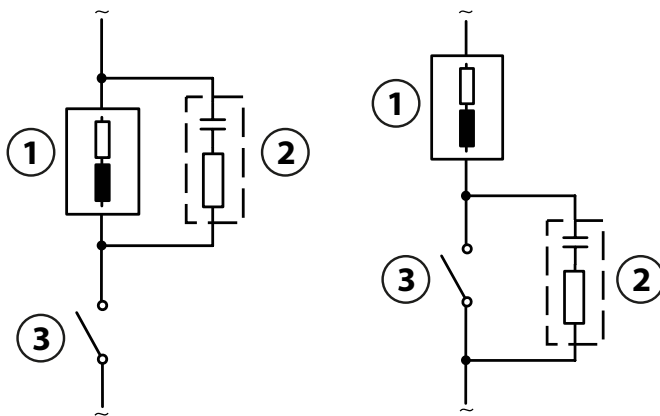


- |  |           |
|--|-----------|
| 1 Load   | 3 Contact |
| 2 Typical RC combination, e.g., capacitor 0.1 μF, resistor 100 Ω/1 W |           |

#### Typical DC Application with Inductive Load

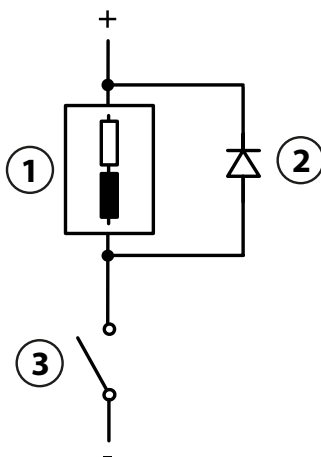

- |  |           |
|--|-----------|
| 1 Inductive load                                       | 3 Contact |
| 2 Free-wheeling diode, e.g., 1N4007 (observe polarity) |           |

**Typical AC/DC Application with Capacitive Load**

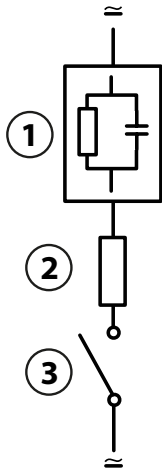

1	Capacitive load	3	Contact
2	Resistor e.g., 8 Ω/1 W at 24 V/0.3 A		


See also  
 → *Power*, p. 165

**3.3.3 Current Outputs**

The current outputs directly supply current (0/4 ... 20 mA) to a load according to the selected process variable.


**Note:** Observe the specifications and connected loads. → *Specifications*, p. 165

**Terminal Assignment Diagram**

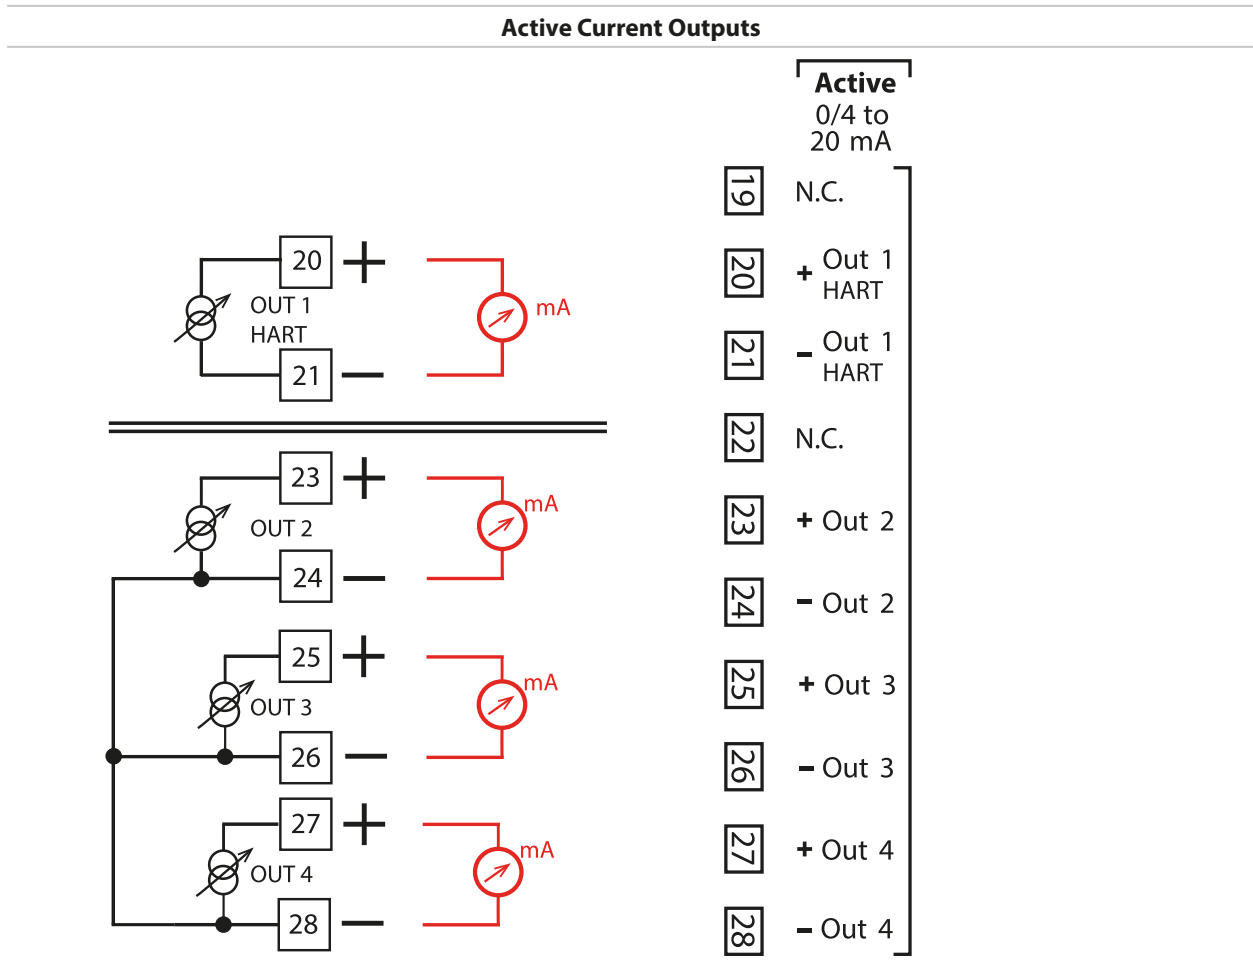

### 3.3.4 Terminal Assignments

The terminals are suitable for single or stranded wires up to 2.5 mm<sup>2</sup>.

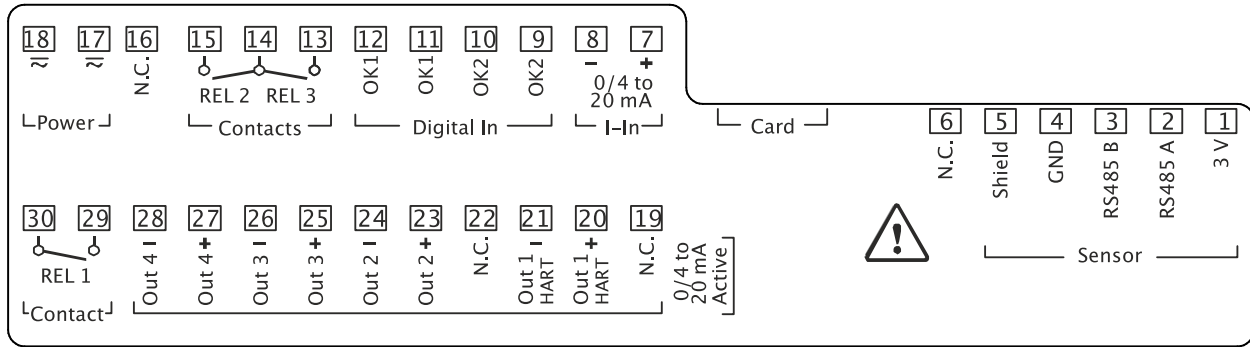

Terminal	Connection	
<b>Sensor (Memosens or other digital sensor)</b>	1	3 V
	2	RS485 A
	3	RS485 B
	4	GND
	5	Shield
	6	N.C. No connection
	Card	Memory card
<b>Current inputs</b> 0/4 mA ... 20 mA	7	+ I-Input
	8	- I-Input
<b>Digital control inputs</b> Optocoupler inputs	9	OK2
	10	OK2
	11	OK1
	12	OK1
<b>Relay contacts</b> REL 2, REL 3	13	Relay 3 Contact rating → <i>Specifications, p. 165</i>
	14	Relays 2/3
	15	Relay 2
	16	N.C. No connection
<b>Power supply</b> 24 V to 230 V AC/DC	17	Power Power supply input
	18	Power Power supply input
<b>Current outputs</b> Out 1/2/3/4 (0)4 mA ... 20 mA		<b>Active</b>
	19	N.C. No connection
	20	+ Out 1 for HART
	21	- Out 1 for HART
	22	N.C. No connection
	23	+ Out 2
	24	- Out 2
	25	+ Out 3
	26	- Out 3
	27	+ Out 4
28	- Out 4	
<b>Relay contact</b> REL 1	29	Relay 1 Contact rating → <i>Specifications, p. 165</i>
	30	Relay 1

For connection of analog sensors: Insert measuring module.


See also

→ *Power, p. 165*

### 3.4 Sensor Connection

#### 3.4.1 Connecting the Memosens Sensor

Top view of terminals for Memosens sensor. The figure shows the opened device, rear side of the front unit.

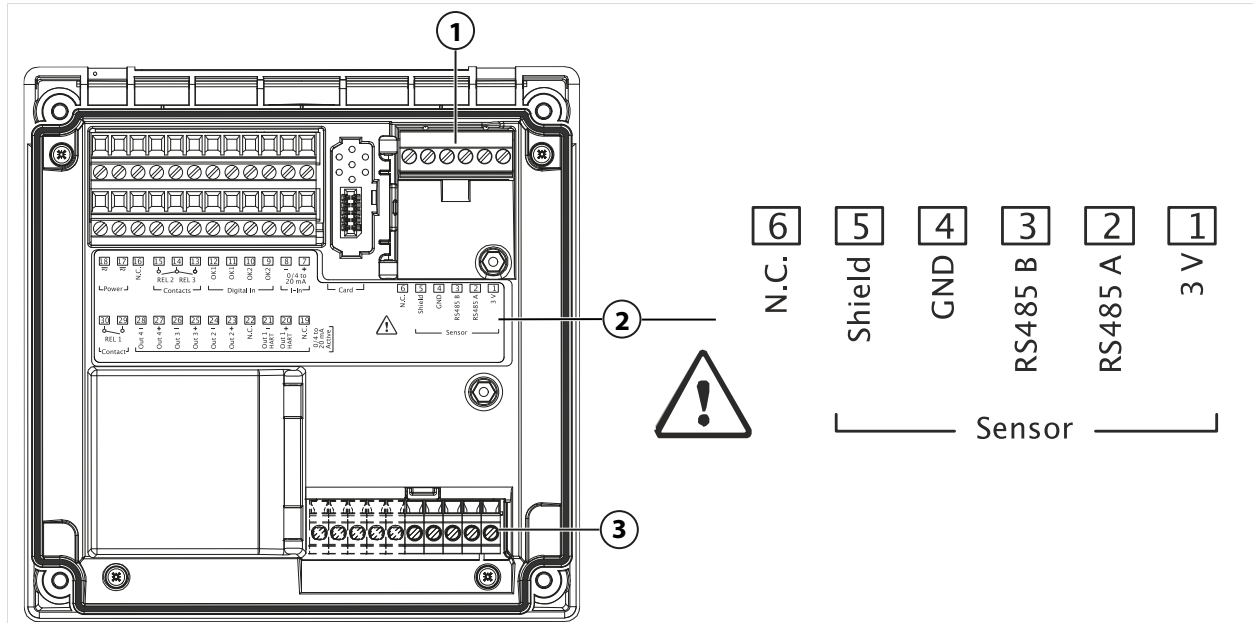

- 1 RS-485 interface: Standard sensor connection for digital sensor (Memosens sensor)
- 2 Terminal plate with terminal assignments for digital sensor
- 3 Sensor connection for analog sensors or second Memosens sensor via measuring module

#### Memosens Sensor

Terminal	Wire color	Memosens cable wiring
1	Brown	+3V
2	Green	RS-485 A
3	Yellow	RS-485 B
4	White	GND
5	Transparent	Shield

01. Using an appropriate sensor cable, connect a Memosens sensor to the RS-485 interface (1) of the Stratos Multi.
  02. Close the device and tighten the screws on the front.
  03. Then select a measuring function and configure the sensor:  
From within measuring mode, press the **left softkey: Menu**.  
✓ The **Menu Selection** opens.
  04. Select **Parameter Setting ▶ Sensor Selection [I] [II]**.
- Note:** Function check (HOLD) is active.
05. Press **enter** to open the **Sensor Selection [I]**.
  06. Select process variable, mode, and functionality, and confirm with **enter**.  
Set further parameters with the **left softkey: Back**.
  07. Return to measuring mode to end configuration, e.g., with the **right softkey: Back to Meas**.




### 3.4.2 Connecting an Analog Sensor/Second Memosens Channel

**⚠ CAUTION! Electrostatic discharge (ESD).** The modules' signal inputs are sensitive to electrostatic discharge. Take measures to protect against ESD before inserting the module and wiring the inputs.

**NOTICE!** Strip the insulation from the wires using a suitable tool to prevent damage.  
Stripping length → *Specifications, p. 165.*

#### Measuring Modules for Connection of Analog Sensors: pH, ORP, Oxygen, Conductivity

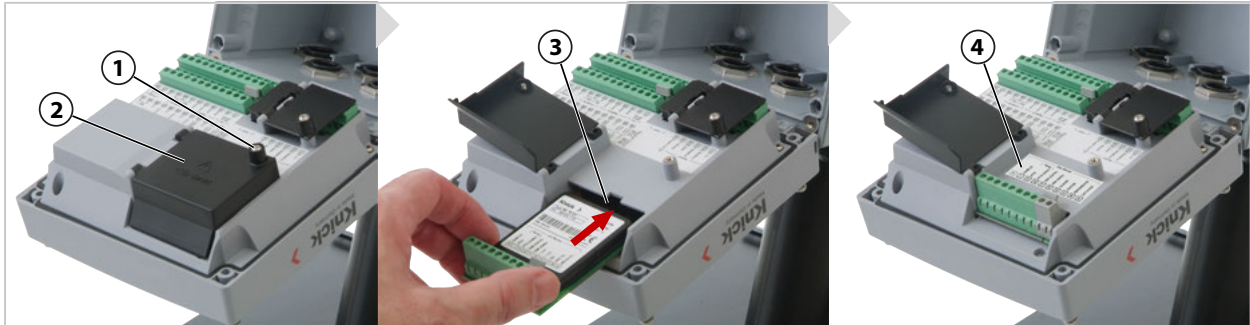


01. Switch off the power supply to the device.
02. Open the device (loosen the 4 screws on the front).
03. Loosen screw **(1)** on the module cover **(2)** ("ESD shield") and open the cover.
04. Insert the module into the module slot **(3)**.
05. Attach the module plate sticker **(4)**.
06. Connect the sensor and separate temperature probe, if necessary.  
→ *Channel II Wiring Examples, p. 178*

**⚠ CAUTION! Risk of losing the specified ingress protection.** Fasten the cable glands and screw together the housing correctly. Observe the permissible cable diameters and tightening torques. Only use original accessories and spare parts.

07. Check whether all connections are correctly wired.
08. Close the module cover **(2)**, tighten screw **(1)**.
09. Close the device and tighten the screws on the front.
10. Switch on the power supply.

#### Now select a measuring function and configure the sensor

01. From within measuring mode, press the **left softkey: Menu**.  
✓ The **Menu Selection** opens.
02. Select **Parameter Setting ▶ Sensor Selection [I] [II]**.

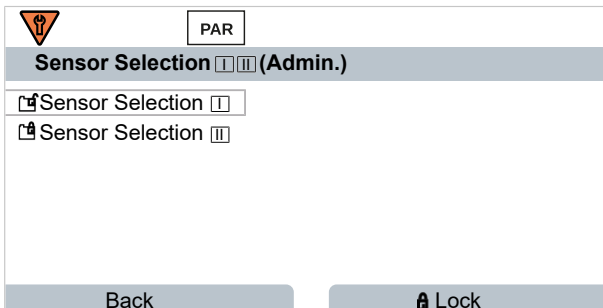

**Note:** Function check (HOLD) is active.

03. Press **enter** to open the **Sensor Selection [II]**.
04. Select the module and mode, and confirm with **enter**.  
Set further parameters with the **left softkey: Back**.

05. Return to measuring mode to end configuration, e.g., with the **right softkey: Back to Meas.**

### Measuring Module for Connection of a Second Memosens Sensor

If you want to measure two process variables using Memosens sensors, you must insert an MK-MS095X Memosens module for the second channel.

01. Insert a Memosens module in the module slot and connect it up (see above).
02. Then select a measuring function and configure the sensor:  
From within measuring mode, press the **left softkey: Menu**.  
✓ The **Menu Selection** opens.
03. Select **Parameter Setting ▶ Sensor Selection [I] [II]**.

**Note:** Function check (HOLD) is active.


04. Press **enter** to open the **Sensor Selection [II]**.
05. Select module MK-MS.
06. Select process variable, mode, and functionality, and confirm with **enter**.  
Set further parameters with the **left softkey: Back**.
07. Return to measuring mode to end configuration, e.g., with the **right softkey: Back to Meas.**

### 3.5 Terminal Assignments of Measuring Modules

Installation of the measuring modules


→ *Connecting an Analog Sensor/Second Memosens Channel, p. 33*

The module plate **(1)** is attached to the measuring module underneath the module cover on the rear of the device.

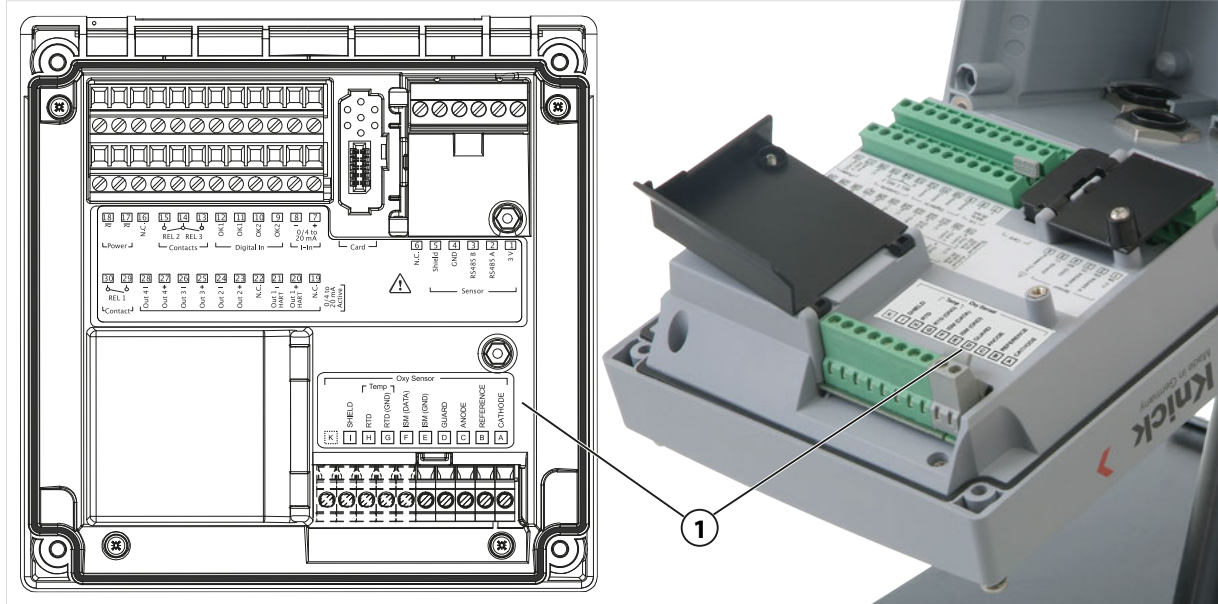


#### pH/ORP Measuring Module

Order code MK-PH015X

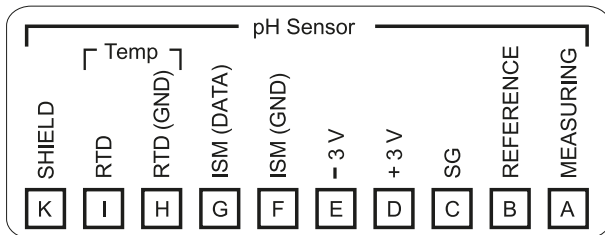


#### Oxygen Measuring Module

Order code MK-OXY045X

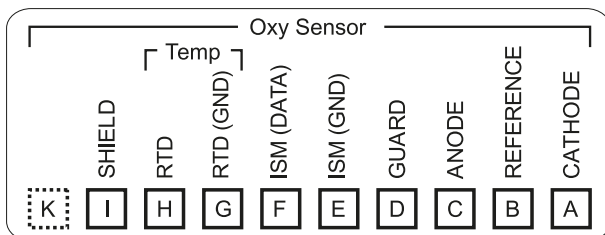


#### Module for Contacting Conductivity Measurement

Order code MK-COND025X

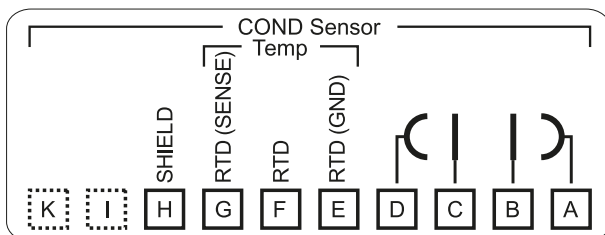


**Module for Inductive Conductivity Measurement**

Order code MK-CONDI035X

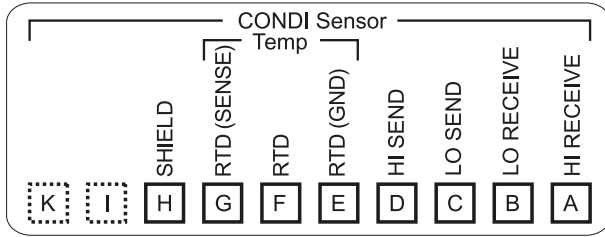

**Memosens Module**

Order code MK-MS095X

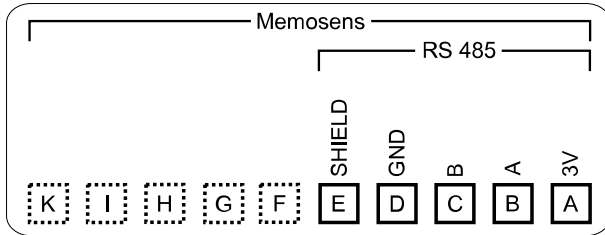

## 4 Commissioning

**Note:** Upon request, Knick will provide safety briefings and product training during initial commissioning of the product. More information is available from the relevant local contacts.

01. Install the housing. → *Assembly, p. 20*
02. Wire the connections. → *Connections, p. 27*
03. Connect the sensor(s). → *Sensor Connection, p. 32*
04. Configure the device. → *Parameter Setting, p. 43*

### 4.1 Final Check During Commissioning

- Are the Stratos Multi and all its cables externally intact and strain-relieved?
- Are the cables routed without any loops or crossovers?
- Have all the wires been correctly connected in accordance with their terminal assignments?
- Was the tightening torque of the screw terminals correctly adhered to?
- Are all connectors firmly engaged?
- Are all cable glands installed, tight, and leak-proof?
- Is the device closed and correctly screwed together?
- Does the supply voltage (power supply) accord with the voltage indicated on the nameplate?

## 5 Operation and Use

### 5.1 Changing the User Interface Language

Preconditions

- Stratos Multi is connected to the power.
- Measuring mode is shown on the display.

Steps

01. Press the **left softkey: Menu**. The menu selection opens.
02. Press the **right softkey: Lingua**. Press the right **arrow key** and set the language of the user interface.
03. Confirm with **enter**.


**Note:** The user interface language can also be changed in the Parameter Setting menu.


Parameter Setting ▶ General ▶ Language → *Parameter Setting, General, p. 50*

### 5.2 Keypad and Display

#### Display


Stratos Multi features a 4.3" TFT color graphic display. The Calibration, Maintenance, Parameter Setting, and Diagnostics menus each have their own colors. The device is operated using plain text in various languages. Messages are output as icons and plain text.

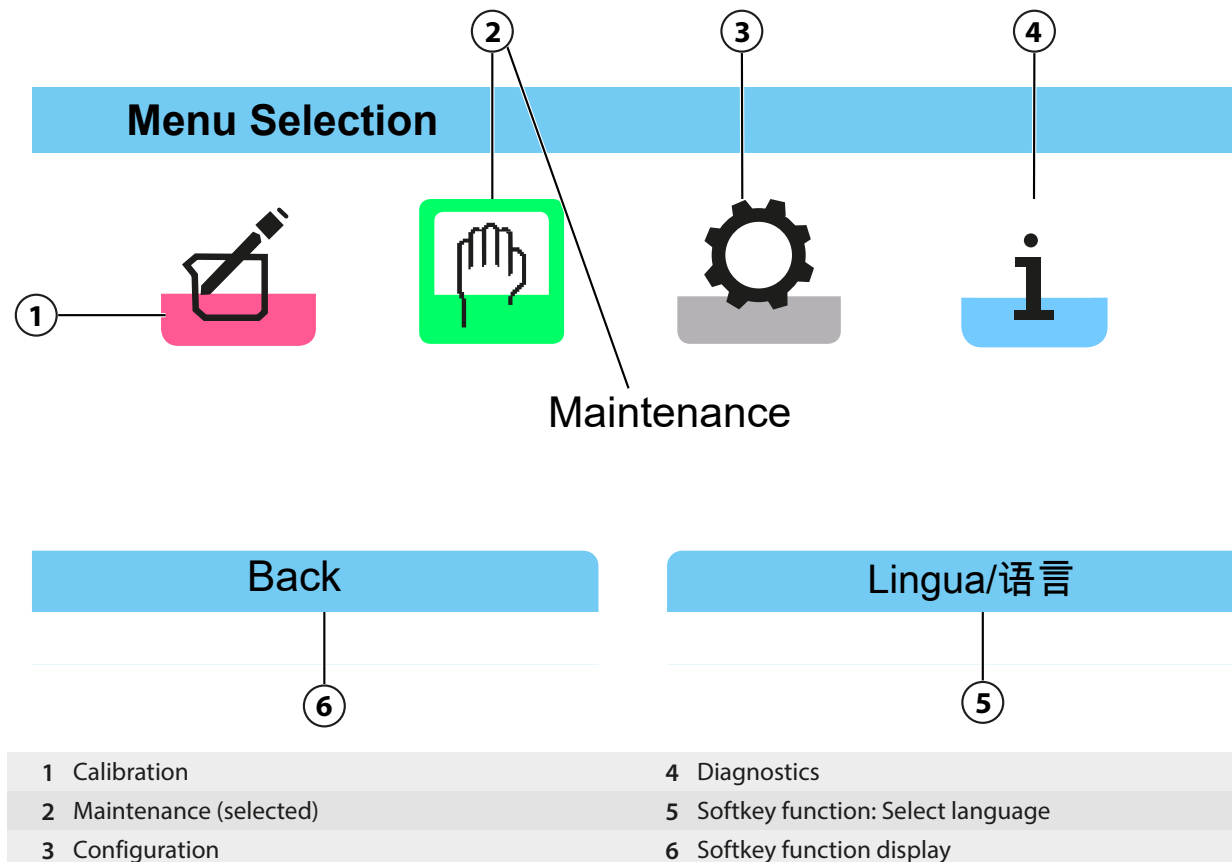

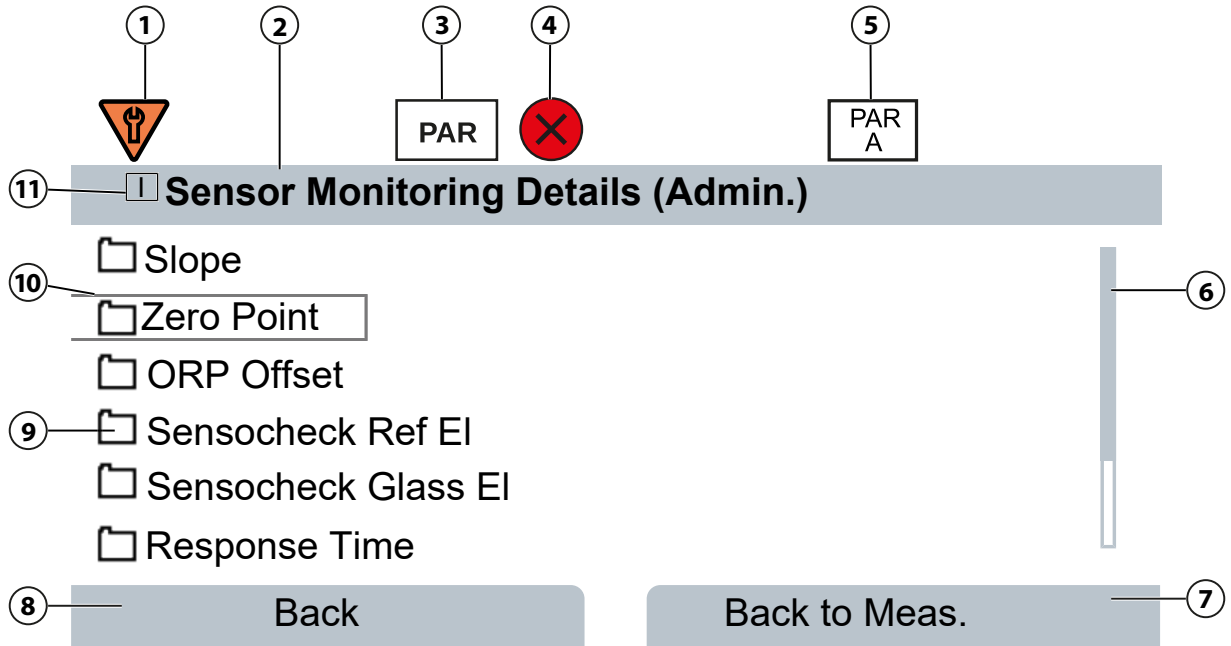


1	Function check (HOLD)	7	Softkey function display
2	Current menu heading	8	Softkey function display
3	Device condition (PAR for parameter setting)	9	Folder element
4	Failure is active	10	Selected element
5	Active parameter set	11	Measuring channel, e.g., channel I
6	Scrollbar		

**Display of Measuring Channels**

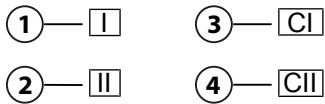 

1	Channel I	3	Calculation block 1
2	Channel II (measuring module)	4	Calculation block 2

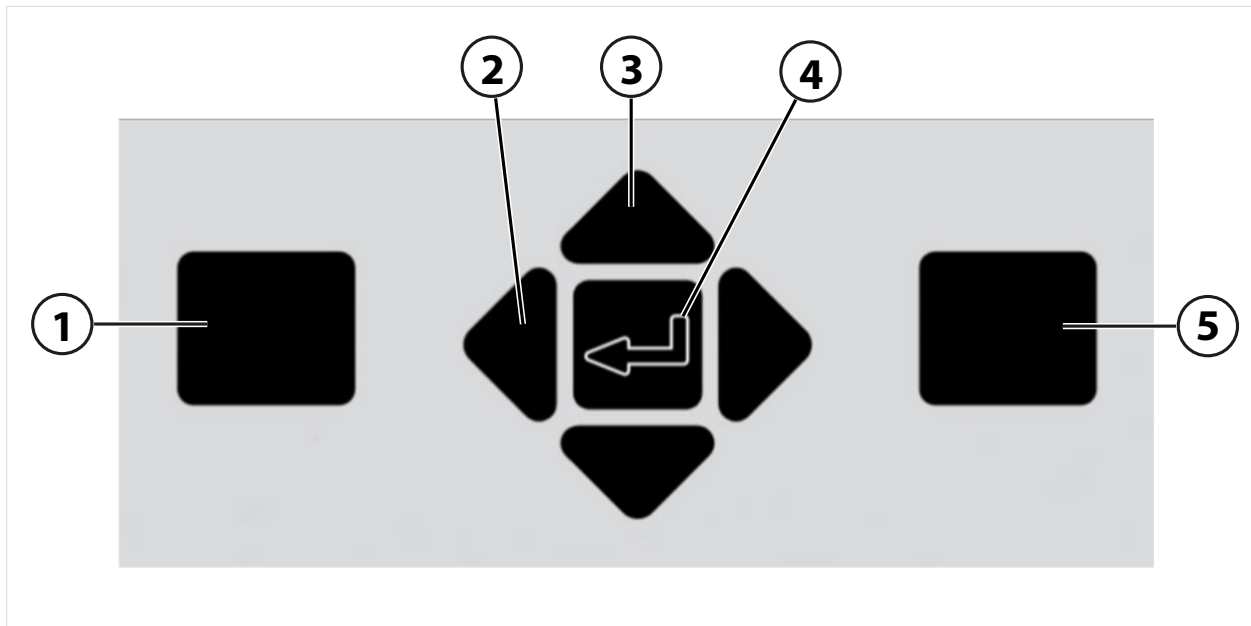**Keypad**

- |   |  |
|---|--|
| 1 <b>Left softkey:</b><br>Function as shown on left function display                                | 4 <b>enter:</b><br>Open menu, confirm inputs                           |
| 2 <b>Left/right arrow keys:</b><br>Menu selection: prior/next menu, move left/right                 | 5 <b>Right softkey:</b><br>Function as shown on right function display |
| 3 <b>Up/down arrow keys:</b><br>Row selection from selection window,<br>increase/decrease a numeral |  |


**Entering Text and Numbers; Selecting Signs**

01. Select a number using the *left/right arrow keys*.
02. Enter numbers or letters using the *up/down arrow keys*.  
Change the sign, as required.
03. Switch to signs using the left *arrow key*.
04. Set the sign value with the *up or down arrow keys*.
05. Confirm with *enter*.

**Note:** If you enter values outside the specified value range, an information window showing the permissible value range is shown.



### 5.3 Menu Structure Overview

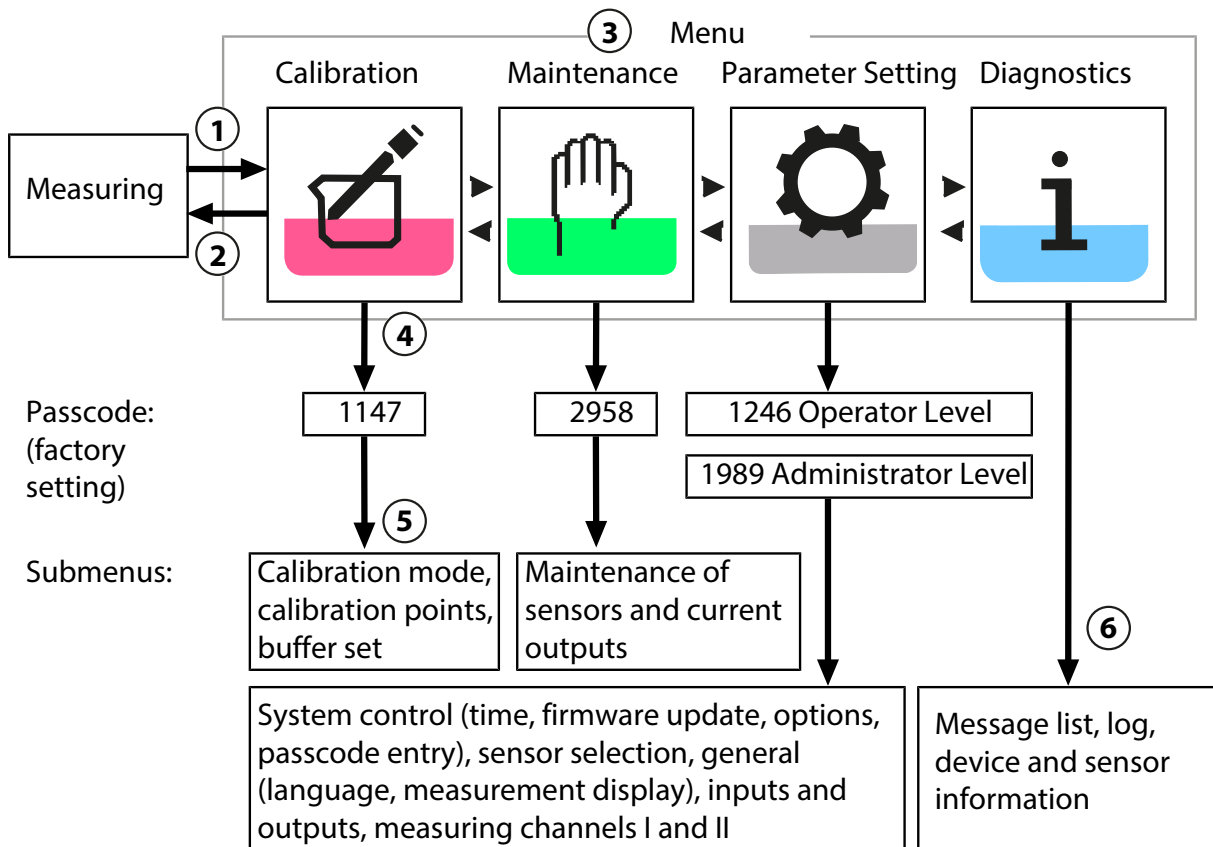

- |  |   |
|--|---|
| <p>1 Pressing the <b>left softkey: Menu</b> accesses the Menu Selection.</p> <p>2 Pressing the <b>right softkey: Back to Meas.</b> returns to measurement.</p> <p>3 Select a menu using the <b>arrow keys</b>.</p> | <p>4 Press <b>enter</b> to confirm, enter passcode.</p> <p>5 Further submenus and menu items are shown.</p> <p>6 Selected functions in the Diagnostics menu can also be accessed in measuring mode by pressing the right <b>softkey</b> (Favorites menu).</p> |
|--|---|

### 5.4 Access Control

Access to the device functions is regulated and limited by individually adjustable passcodes. This prevents unauthorized modification of device settings or manipulation of the measurement results.





























Passcodes are configured in **Parameter Setting** ▶ **System Control** → *System Control, p. 45*

## 5.5 Operating States

### Function Check Mode (HOLD Function)

After activating parameter setting, calibration, or maintenance, the Stratos Multi enters function check mode (HOLD). The current outputs and relay contacts behave in accordance with the parameter settings.

**⚠ CAUTION! In function check (HOLD) mode, the current outputs may be frozen at the last measurement or set to a fixed value.** Measurement operations must not be carried out while the device is in function check (HOLD) mode, as the system may behave unexpectedly and put users at risk.

Operating Mode	Current Outputs	Contacts	Controller (PID Controller)	Timeout <sup>1)</sup>
Measuring				-
Diagnostics				-
Calibration <sup>2)</sup>				-
Maintenance <sup>2)</sup>				
Sensor monitor				-
Current source				-
Manual controller				-
Parameter setting <sup>2)</sup>				20 min
Rinse function <sup>2)</sup>		 <sup>3)</sup>		At end of rinse time
	Active (output functions normally)			Manual control of the outputs
	Last value or fixed default value			Depending on parameter setting

## 5.6 Measurement Display

The following settings are possible:

2, 4, 6, or 8 values without measuring channel selection	Any display of measured values from the measuring channels and the device possible
2 or 4 values with measuring channel selection	Any display of measured values from the measuring channels

Settings can be changed in the **Measurement Display** submenu:

**Parameter Setting** ▶ **General** ▶ **Measurement Display**

An overview of display options can be found in the Parameter Setting chapter.

→ *Parameter Setting, General, p. 50*

The **right softkey: Back to Meas.** returns you to measurements from any menu level. You may have to confirm that the system is ready for measurement.

If required, the display can be configured to switch off after not having been used for a user-defined period of time.

This setting can be changed in the **Display** submenu:

**Parameter Setting** ▶ **General** ▶ **Display**

Display auto-off can be configured as follows:

- No auto-off
- After 5 minutes
- After 30 minutes

<sup>1)</sup> "Timeout" means that the device will return to measuring mode after 20 minutes without key activity.

<sup>2)</sup> Function check (HOLD) is active.

<sup>3)</sup> Rinse contact is active.

## 6 Parameter Setting

**⚠ CAUTION! Incorrect parameter settings or adjustments can result in incorrect outputs.**


A system specialist must therefore commission Stratos Multi, set all its parameters, make all necessary adjustments, and protect it from unauthorized modifications.

### Opening Parameter Setting

**Left softkey: Menu** Menu Selection ▶ Parameter Setting

01. From within measuring mode, press the **left softkey: Menu**.

✓ The **Menu Selection** opens.

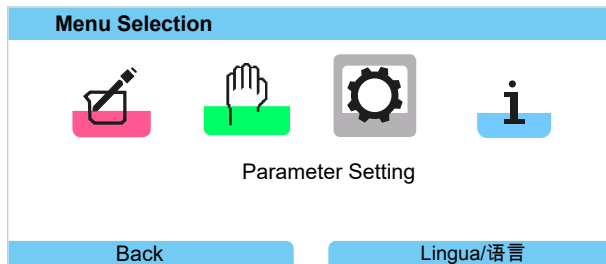

02. Using the right **arrow key**, select the **Parameter Setting** menu and confirm with **enter**.

03. Select the relevant operating level and enter any required passcode. → *Operating Levels, p. 43*


✓ The Parameter Setting menu contains items for things such as inputs and outputs, sensor selection I and II, system control, and general parameter setting. Parameter setting is automatically ended 20 minutes after the last registered keystroke, after which Stratos Multi returns to measuring mode (timeout).

**Note:** Function check (HOLD) is active. The current output and relay contacts behave in accordance with the parameter settings. Return to measuring mode to exit the function check, e.g., with the **right softkey: Back to Meas.**

### 6.1 Operating Levels

There are three access levels in the Parameter Setting menu:

- Viewing level (all data)
- Operator level (operation data)
- Administrator level (all data)

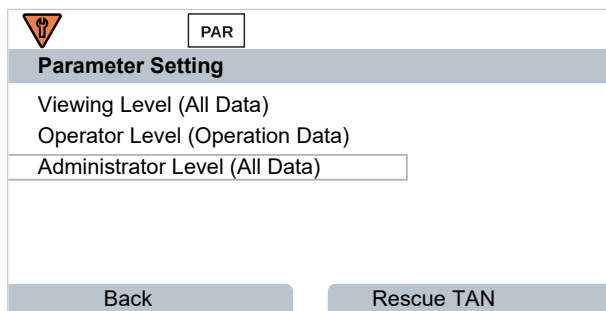

#### Viewing Level

- Display of all settings
- Settings cannot be changed in the Viewing level.

#### Operator Level

- Access to all functions that have been enabled at the Administrator level.
- Locked functions are displayed in gray and cannot be edited.

**Administrator Level**

- Access to all settings, including passcode settings. → *Passcode Entry, p. 50*
- Releasing or blocking functions for access from the operator level. Functions that can be locked for the Operator level are marked with the “lock” icon. → *Locking a Function, p. 44*


**Note:** For reasons of clarity, the step to “Select the relevant operating level and enter any required passcode” is omitted in the parameter setting description set out in this document. Parameter setting is generally carried out at Administrator level.

**6.2 Locking a Function**

Example: Locking access to the configuration of relay contact K1 from the Operator level


01. Open **Parameter Setting**.
02. Select **Administrator Level**.
03. Enter passcode (factory setting: 1989).
04. Select submenu:

Inputs/Outputs ▶ Relay Contacts ▶ Contact K1

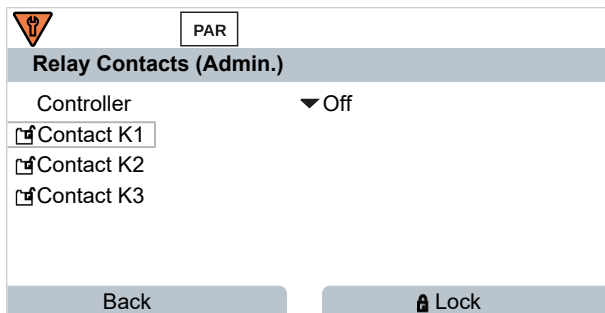

05. **Right softkey: Lock**

- ✓ The **Contact 1** submenu is now marked with the “lock” icon. This function can no longer be accessed from the Operator level.  
The **softkey** function automatically changes to **Unlock**.
- ✓ At the Operator level, the locked function is shown in gray.

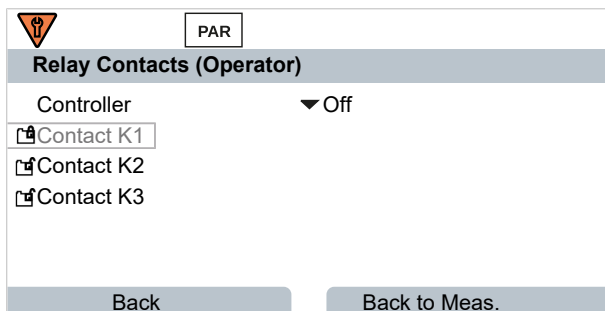

## 6.3 Parameter Setting Menus

Menu	Description
System Control	→ <i>System Control</i> , p. 45
General	→ <i>Parameter Setting, General</i> , p. 50
Inputs/Outputs	→ <i>Inputs and Outputs</i> , p. 57
Sensor Selection [I] [II]	→ <i>Sensor Selection [I] [II]</i> , p. 65
[I] [Sensor]	Channel I parameter setting: Menu based on sensor selection.
[II] [Sensor]	Channel II parameter setting: Menu based on sensor selection.
HART	→ <i>HART Communication (TAN Option FW-E050)</i> , p. 102

## 6.4 System Control

Submenu	Description
Memory Card	This menu item is shown if a Data Card is inserted: Settings for logbook and measurement recorder data recording. The memory card can be formatted. → <i>Memory Card</i> , p. 46
Transfer Configuration	If a Data Card is inserted, the measuring device's configuration can be saved and transferred to another measuring device. → <i>Transfer Configuration</i> , p. 46
Parameter Sets	Two parameter sets (A, B) are available in the device. If a Data Card is inserted, up to five parameter sets can be saved on or loaded from the Data Card. → <i>Parameter Sets</i> , p. 47
Function Control	Allocation of functions for activation by softkey or optocoupler input OK1. → <i>Function Control</i> , p. 48
Calculation Blocks	TAN option FW-E020: Convert available process variables to new variables. → <i>Calculation Blocks (FW-E020)</i> , p. 211.
Time/Date	Define date and time format; input of date, time, and weekday. → <i>Time/Date</i> , p. 48
Meas. Point Description	Free input of a tag number and notes; can be retrieved in the Diagnostics menu. → <i>Measuring Point Description</i> , p. 48
Firmware Update	This menu item is shown if a FW Update Card is inserted. TAN option FW-E106: Firmware update with FW Update Card. → <i>Firmware Update (FW-E106)</i> , p. 220
Option Activation	Activation of add-on options via TAN. The TAN is only valid for the Stratos Multi with the associated serial number. → <i>Option Activation</i> , p. 49
Logbook	Select events to be logged (failure/maintenance required); can be retrieved in the Diagnostics menu. → <i>Logbook</i> , p. 49
Buffer Table	TAN option FW-E002: Specification of a buffer set. → <i>pH Buffer Table: Entry of Individual Buffer Set (FW-E002)</i> , p. 202
Concentration Table	TAN option FW-E009: Specification of a concentration solution for conductivity measurement. → <i>Concentration Determination (FW-E009)</i> , p. 204
Restore Factory Settings	Restore all parameters to factory settings. → <i>Restore Factory Settings</i> , p. 50
Passcode Entry	Change passcodes. → <i>Passcode Entry</i> , p. 50

### 6.4.1 Memory Card

This menu is shown if a Data Card is inserted.

With activated TAN option FW-E104 logbook: Enable/disable recording of logbook entries on the Data Card. → *Logbook*, p. 49

With activated TAN option FW-E103 measurement recorder: Enable/disable recording of measurement recorder entries on the Data Card. → *Measurement Recorder (FW-E103)*, p. 218

The decimal separator can be set as a point or comma.

The Data Card can be formatted, in which case all saved entries are deleted.

See also

→ *Memory Card*, p. 162

### 6.4.2 Transfer Configuration

All device settings can be saved on a memory card (Data Card): → *Memory Card*, p. 162

Parameter Setting ▶ System Control ▶ Transfer Configuration

**Note:** The inserted Data Card is shown on the display.

- Select **Save Configuration** to write all the device settings (except passcodes) to the Data Card.  
Backup file generated on the Data Card:  
param/config.par
- Select **Load Configuration** to read all the device settings from the Data Card and apply them to the device.

### Transferring all Device Settings from One Device to Other Devices

Preconditions

- The devices all feature identical hardware.
- TAN options (add-on functions):  
All required TAN options must be enabled before they can be transferred.

Steps

01. Parameter Setting ▶ System Control ▶ Transfer Configuration
02. Menu item **Configuration**: Save
03. Start the transfer with the **right softkey**: *Execute*.  
✓ The device settings are saved to the Data Card.
04. Switch to the Maintenance ▶ Open/Close Memory Card menu.
05. Terminate access to the memory card using the **right softkey**: *Close*.
06. Remove the Data Card.  
✓ You can transfer the device settings to other, identically equipped devices.
07. Insert the Data Card containing the device settings in the next device to be configured.
08. Parameter Setting ▶ System Control ▶ Transfer Configuration
09. Menu item **Configuration**: Load
10. Start the transfer with the **right softkey**: *Execute*.  
✓ The device settings are read from the Data Card and applied.
11. Switch to the Maintenance ▶ Open/Close Memory Card menu.
12. Terminate access to the memory card using the **right softkey**: *Close*.
13. Remove the Data Card.

### 6.4.3 Parameter Sets

Stratos Multi provides two complete selectable parameter sets (A/B) for different measuring tasks. The currently activated set can be signaled by a relay contact. → *Relay Contacts, p. 59*

Parameter set "B" only permits setting of process-related parameters.

Parameter Setting ▶ System Control ▶ Parameter Sets

#### Save Parameter Set

The active parameter set is transferred to the Data Card.

**Note:** The parameter set saved on the Data Card is overwritten.

#### Load Parameter Set

A parameter set stored on the Data Card is transferred to the device.

**Note:** This overwrites the current parameter set in the device.

Up to five parameter sets can be stored on the Data Card with TAN option FW-E102.

→ *Parameter Sets 1-5 (FW-E102), p. 217*


#### Selecting Parameter Sets A/B

The control element for switching between parameter sets (optocoupler input OK1 or softkey) is selected in:

Parameter Setting ▶ System Control ▶ Function Control

The currently active parameter set is indicated by the  or  icons.

Selection via a signal at optocoupler input OK1:

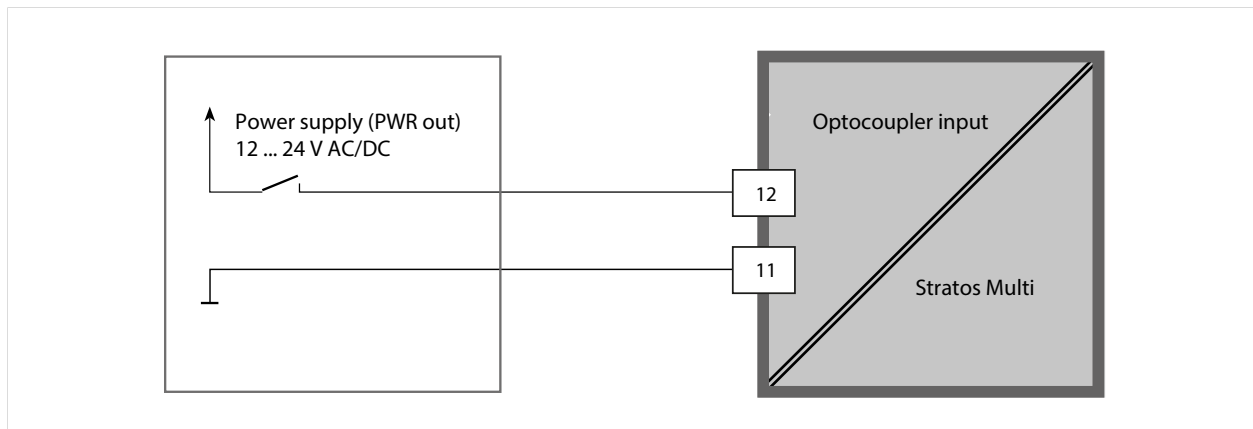

0 ... 2 V AC/DC: Parameter set A active

10 ... 30 V AC/DC: Parameter set B active

**Note:** The selection has no effect when using parameter sets from a memory card. Switching between parameter sets A and B is possible if they are saved in the device.

#### 6.4.4 Function Control

The following functions can be activated by softkey or optocoupler input OK1:

Input OK1:

- Parameter set selection
- Flow
- Function check
- Function check (channel)

Right softkey:

- Off
- Value rotation
- Parameter set selection
- Favorites menu

The selection can be changed in the **Function Control** submenu:

Parameter Setting ▶ System Control ▶ Function Control

#### 6.4.5 Calculation Blocks (TAN Option FW-E020)

Calculation blocks convert existing process variables to new variables.

The menu is only shown if the TAN option is activated. → *Calculation Blocks (FW-E020), p. 211*

Parameter Setting ▶ System Control ▶ Calculation Blocks

#### 6.4.6 Time/Date

The time and date in the installed real-time clock are required for:

- Controlling calibration and cleaning cycles
- Displaying the time on the display
- Assigning times to the calibration data in the sensor head on digital sensors
- Diagnostic functions; logbook entries are given a time stamp, for example

**Note:** No automatic switchover from winter to summer time.

Settings can be changed in the **Time/Date** submenu:

Parameter Setting ▶ System Control ▶ Time/Date

#### 6.4.7 Measuring Point Description

You can enter a measuring point and notes (e.g., date of last maintenance).

Parameter Setting ▶ System Control ▶ Meas. Point Description

- Select position: *Left/right arrow keys*
- Select characters A-Z 0-9 \_ # \* + - / : < = > Space: *Up/down arrow keys*

Display of the measuring point description in the **Diagnostics** menu

→ *Measuring Point Description, p. 138*

#### 6.4.8 Firmware Update (TAN Option FW-E106)

The firmware update is carried out using TAN option FW-E106 and an FW Update Card.

→ *Firmware Update (FW-E106), p. 220*

The menu is only shown if the TAN option is activated and the FW Update Card has been inserted.

Parameter Setting ▶ System Control ▶ Firmware Update



### 6.4.9 Option Activation

Add-on functions (TAN options) expand the device's capabilities. The TAN options are device-specific. When ordering a TAN option, you must therefore specify the serial number of the device in addition to the relevant order code for this function. The manufacturer then supplies a TAN (transaction number) to activate the add-on function. This TAN is only valid for the device with the stated serial number.

You can find your device's serial number in:

[Diagnostics](#) ▶ [Device Information](#)

Overview of TAN options → *Product Range and Options*, p. 12

Description of TAN options → *Annex*, p. 178

#### Activate TAN Option

01. [Parameter Setting](#) ▶ [System Control](#) ▶ [Option Activation](#)

02. Select the option to be enabled.

03. Set to "Active" using the **arrow keys**.

✓ Enter the TAN at the prompt. The current serial number is shown.

04. Enter the TAN and confirm with OK.

✓ The option is available.

**Note:** An activated TAN option can be deactivated and reactivated without having to re-enter the TAN.

### 6.4.10 Logbook

The logbook records the last 100 events with date and time and displays them on the device.

In addition, when using the Data Card and TAN option FW-E104, 20,000 entries or more can be stored on the Data Card.

[Parameter Setting](#) ▶ [System Control](#) ▶ [Logbook](#)

- Select whether to log Failure and/or Maintenance Required messages in the logbook.
- Delete the logbook entries

#### Displaying the Logbook Entries

The entries can be viewed in the [Diagnostics](#) menu. → *Logbook*, p. 136

[Menu Selection](#) ▶ [Diagnostics](#) ▶ [Logbook](#)

### 6.4.11 Measurement Recorder (TAN Option FW-E103)

With TAN option FW-E103: Delete the data stored on the measurement recorder.

The menu is only shown if the TAN option is activated.

[Parameter Setting](#) ▶ [System Control](#) ▶ [Measurement Recorder](#)

See also

→ *Measurement Recorder (FW-E103)*, p. 218

### 6.4.12 Buffer Table (TAN Option FW-E002)

The menu is only shown if the TAN option is activated.

[Parameter Setting](#) ▶ [System Control](#) ▶ [Buffer Table](#)

See also

→ *pH Buffer Table: Entry of Individual Buffer Set (FW-E002)*, p. 202

### 6.4.13 Concentration Table (TAN Option FW-E009)

The menu is only shown if the TAN option is activated.

Parameter Setting ▶ System Control ▶ Concentration Table

See also

→ *Concentration Determination (FW-E009), p. 204*

### 6.4.14 Restore Factory Settings

Allows the parameters to be reset to their factory settings:

Parameter Setting ▶ System Control ▶ Restore Factory Settings

**NOTICE!** After confirming with “Yes,” all individual parameter settings are overwritten with the factory settings.

### 6.4.15 Passcode Entry

Passcodes (factory setting)

Calibration	1147
Maintenance	2958
Operator Level	1246
Administrator Level	1989

The passcodes can be changed or deactivated in the **Passcode Entry** submenu:

Parameter Setting ▶ System Control ▶ Passcode Entry

**Note:** The passcode for the Administrator level cannot be deactivated.

**Note:** If you lose the administrator passcode, system access is locked! The manufacturer can generate a rescue TAN. If you have any questions, please contact Knick Elektronische Messgeräte GmbH & Co. KG using the information provided on the last page of this document.

## 6.5 Parameter Setting, General

**Note:** Function check (HOLD) is active.





Submenu	Description
Language	User interface language: German (factory setting), English, French, Italian, Spanish, Portuguese, Chinese, Korean, Swedish
Units/Formats	Temperature unit °C (factory setting) or °F. Other units and formats depending on the selected process variable, e.g., pressure in mbar, kPa, psi Display format pH xx.xx or xx.x
Measurement Display	Values to be displayed (up to 8) → <i>Configuring the Measurement Display, p. 51</i>
Display	Display color, brightness, and display auto-off (factory setting: None) → <i>Display, p. 56</i>
Measurement Recorder	TAN option FW-E103: Logging of measured and additional values → <i>Measurement Recorder (FW-E103), p. 218</i>

### 6.5.1 Configuring the Measurement Display

Parameter Setting ▶ General ▶ Measurement Display


01. Set the **number** of values to be displayed:  
 2 values (1 channel), 2 values (2 channels), 4 values (2 channels),  
 2 values, 4 values, 6 values, 8 values
02. As required, assign channels and variables to be displayed.
03. Confirm with *enter*.

#### Measurement Display, Example with 2 Values

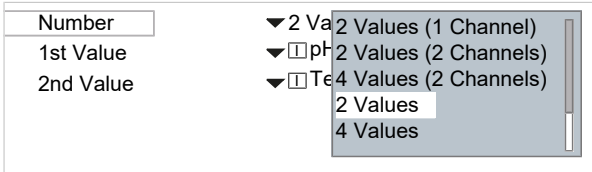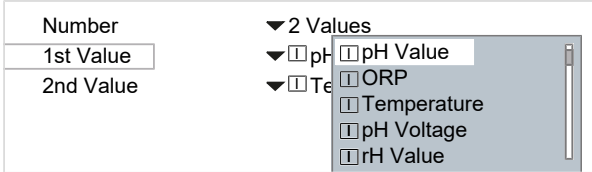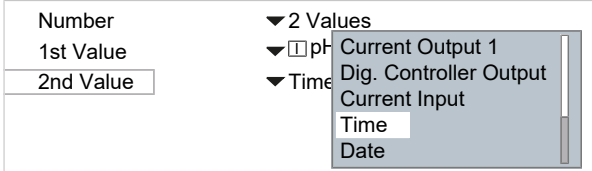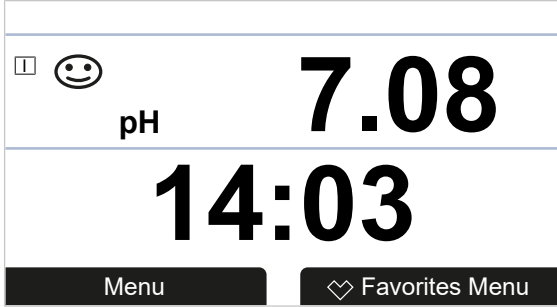
Selection	Result
Selection of any two variables:	
	
Select number of values. Confirm with <i>enter</i> .	
	
Select first variable. Confirm with <i>enter</i> .	
	
Select second variable. Confirm with <i>enter</i> . Set further parameters with the <i>left softkey: Back</i> . End parameter setting with the <i>right softkey: Back to Meas</i> .	
(1) First value (2) Second value	

**Measurement Display, Example with 2 Values (1 Channel)**


Selection	Result
Select two variables in one measuring channel:	

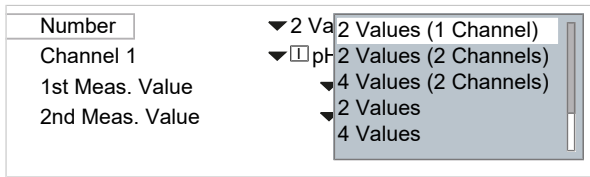


Select number of values and channels.  
Confirm with **enter**.

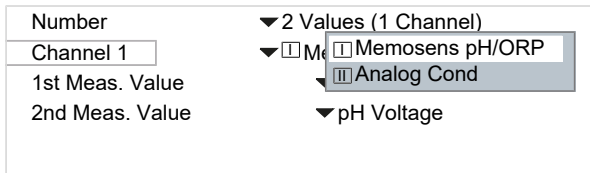


Assign a sensor to the channel.  
Confirm with **enter**.

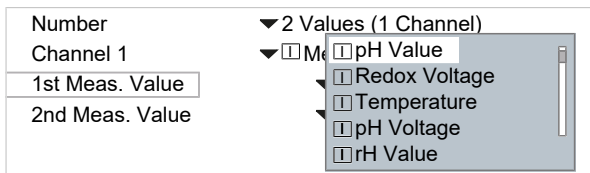

Select the first variable for channel I.  
Confirm with **enter**.

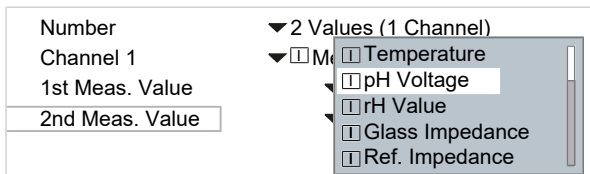

Select the second variable for channel I.  
Confirm with **enter**.  
Set further parameters with the **left softkey: Back**.  
End parameter setting with the **right softkey: Back to Meas**.

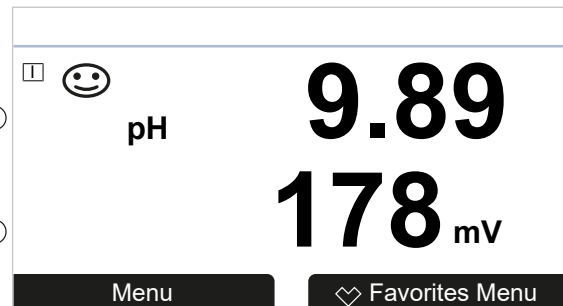


- (1) First value in channel I
- (2) Second value in channel I


**Measurement Display, Example with 2 Values (2 Channels)**

Selection	Result
-----------	--------


Select two variables in two measuring channels:

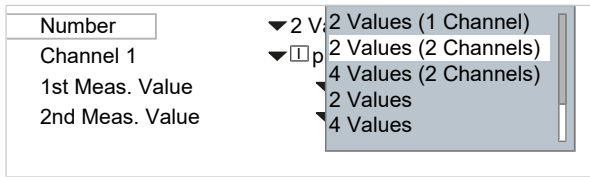


Select number of values and channels.  
Confirm with **enter**.

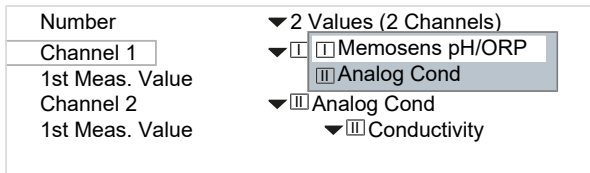


Assign a sensor to the first channel.  
Confirm with **enter**.

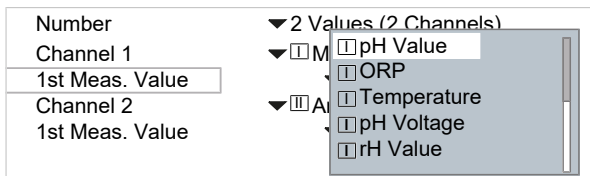


Select the variable for the first channel.  
Confirm with **enter**.

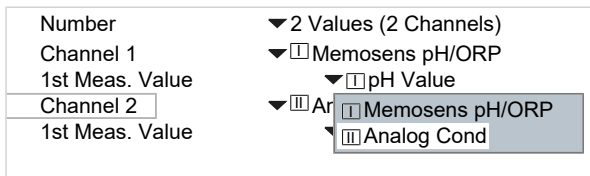

Assign a sensor to the second channel.  
Confirm with **enter**.

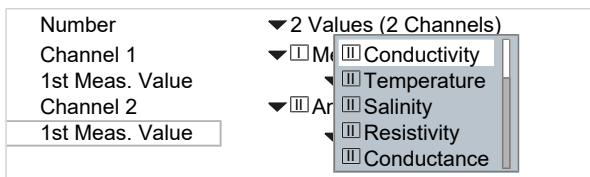


Select the variable for the second channel.  
Confirm with **enter**.  
Set further parameters with the **left softkey: Back**.  
End parameter setting with the **right softkey: Back to Meas**.

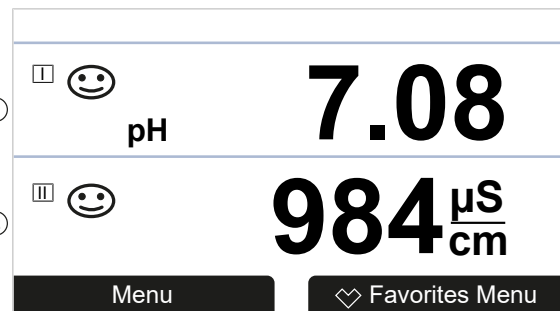


- (1) First value in channel I
- (2) Second value in channel II

**Measurement Display, Example with 4 (6, 8) Values**


Selection	Result
Select any four (six, eight) variables	

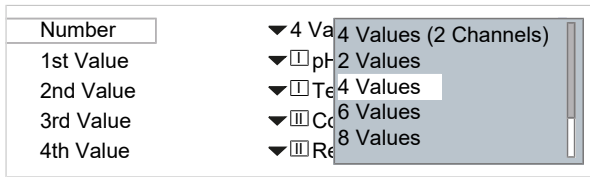


Select number of values.  
Confirm with **enter**.

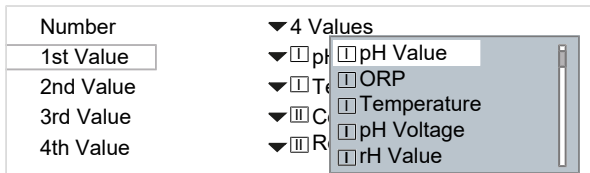


Select first variable.  
Confirm with **enter**.

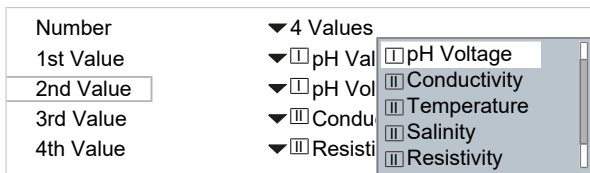

Select second variable.  
Confirm with **enter**.

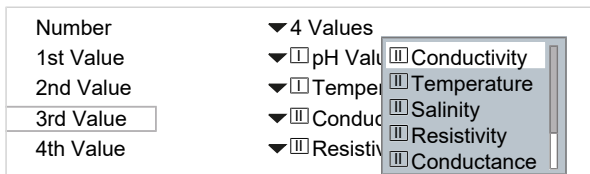


Select third variable.  
Confirm with **enter**.

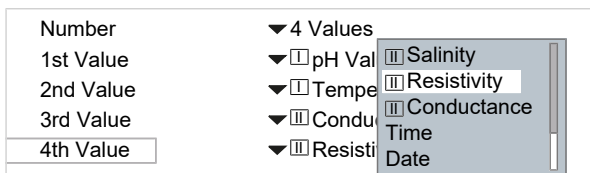

Select fourth variable.  
Confirm with **enter**.

Set further parameters with the **left softkey: Back**.  
End parameter setting with the **right softkey: Back to Meas**.

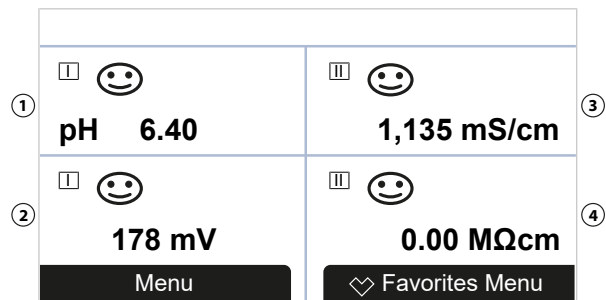


- (1) First value
- (2) Second value
- (3) Third value
- (4) Fourth value


**Measurement Display, Example with 4 Values (2 Channels)**

Selection	Result
-----------	--------


Select four variables in two measuring channels:

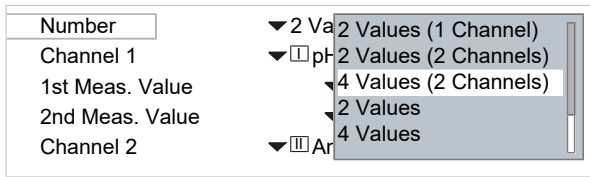


Select number of values and channels.  
Confirm with **enter**.

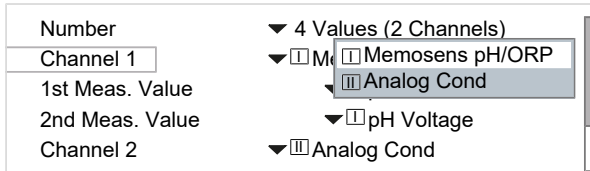


Assign a sensor to the first channel.  
Confirm with **enter**.

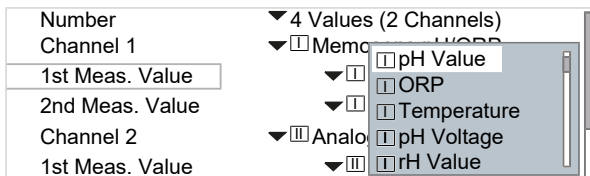


Select the first variable for the first channel.  
Confirm with **enter**.

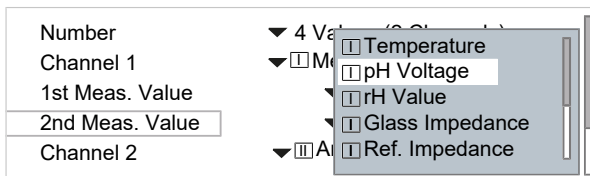


Select the second variable for the first channel.  
Confirm with **enter**.

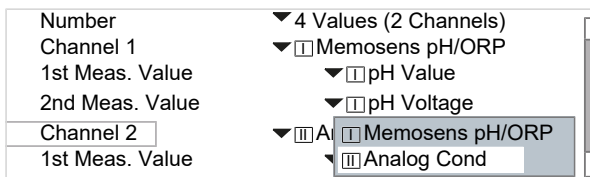

Assign a sensor to the second channel.  
Confirm with **enter**.

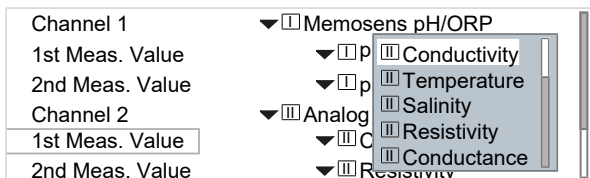

Select the first variable for the second channel.  
Confirm with **enter**.

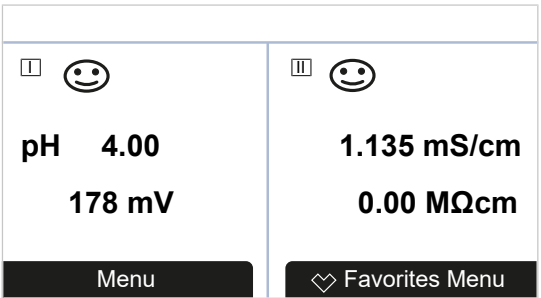Selection	Result
<div style="border: 1px solid gray; padding: 5px;"> <p>Channel 1 <span style="float: right;">▼ [I] Memosense pH/ORP</span></p> <p>1st Meas. Value <span style="float: right;">▼ [I] pH [II] Conductivity</span></p> <p>2nd Meas. Value <span style="float: right;">▼ [I] pH [II] Temperature</span></p> <p>Channel 2 <span style="float: right;">▼ [II] Analog [II] Salinity</span></p> <p>1st Meas. Value <span style="float: right;">▼ [II] C [II] Resistivity</span></p> <p>2nd Meas. Value <span style="float: right;">▼ [II] Resistivity</span></p> </div>	
<p>Select the second variable for the second channel. Confirm with <b>enter</b>. Set further parameters with the <b>left softkey: Back</b>. End parameter setting with the <b>right softkey: Back to Meas</b>.</p>	<p>(1) First value in channel I (2) Second value in channel I (3) First value in channel II (4) Second value in channel II</p>

### 6.5.2 Display

It is possible to change the display's color and brightness.

**The following settings are possible:**

Display Color	White, NE107 (factory setting): If a NAMUR message is available for a measured value, the measured value is backlit in accordance with the NAMUR color.  Limits at which a message is generated can be defined for the "Failure" and "Out of Specification" messages. <a href="#">Parameter Setting</a> ▶ <a href="#">[I] [II] [Sensor]</a> ▶ <a href="#">Messages</a> ▶ <a href="#">Messages [Process Variable]</a> ▶ <a href="#">Monitoring</a>
Brightness	Factory setting: 80 %
Auto-off	None (factory setting), after 5 min, after 30 min

Settings can be changed in the [Display](#) submenu:

[Parameter Setting](#) ▶ [General](#) ▶ [Display](#)

#### Note on Display Auto-off

The display switches off 5 or 30 minutes after the last keystroke is registered. Press any key to switch the display back on.

### 6.5.3 Measurement Recorder (TAN Option FW-E103)

The measurement recorder logs measured values and additional values depending on its parameter setting. The last 100 entries are graphically presented on the display of the Stratos Multi.

The menu is only shown if the TAN option is activated.

[Parameter Setting](#) ▶ [General](#) ▶ [Measurement Recorder](#)

See also

→ *Measurement Recorder (FW-E103), p. 218*



## 6.6 Inputs and Outputs

The following inputs and outputs are available:

- Four current outputs 0/4 ... 20 mA for transferring variables such as measured value or temperature (factory setting); two of these outputs can be enabled via TAN → *Current Outputs, p. 57*
- Three freely configurable floating switching outputs, → *Relay Contacts, p. 59* of which two can be used to control a PID controller. → *PID Controller, p. 63*
- Two digital control inputs, OK1 and OK2 → *Control Inputs, p. 64*

### 6.6.1 Current Outputs

The current outputs are deactivated ex works.

Current outputs 3 and 4 need to be activated by TAN (TAN option FW-E052).

#### Adjustable Parameters for the Current Outputs


Usage	On, Off	
Process Variable	Selection from all available process variables	
Current Range	4 ... 20 mA or 0 ... 20 mA	
Characteristic	Linear Trilinear (input of additional vertex points required) Function (input of a 50 % point required) Logarithmic Table (with TAN option FW-E006 "current characteristic") → <i>Current Characteristic (FW-E006), p. 204</i>	
Output	Output current range 4 ... 20 mA or 0 ... 20 mA	
Start 0(4) mA	Start of span	
End 20 mA	End of span	
Output Filter	To smooth the current output, a low-pass filter with adjustable filter time constant can be switched on. The filter acts on the current output only.	
Function Check	Current output response in Function Check mode:	
	Current Meas.	The currently measured value appears at the current output.
	Last Usable Value	The last measured value is held at the current output.
	Fixed Value	The current output supplies a fixed value of 0 ... 22 mA.
Behavior During Messages	Failure	Current output response in the event of a failure message: Off, 3.6 mA, 22 mA
	Delay	Input of a delay of 0 ... 600 s in the event of a failure message.

Settings can be changed in the **Current Outputs** submenu:

**Parameter Setting** ▶ **Inputs/Outputs** ▶ **Current Outputs**


#### Setting the Span: Start (0/4 mA) and End (20 mA)

Example span pH 0 ... 14

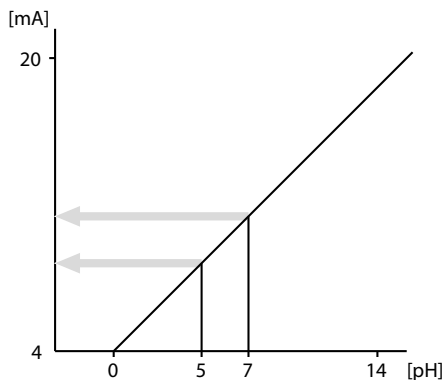

Example span pH 5 ... 7

Advantage: Higher resolution in range of interest

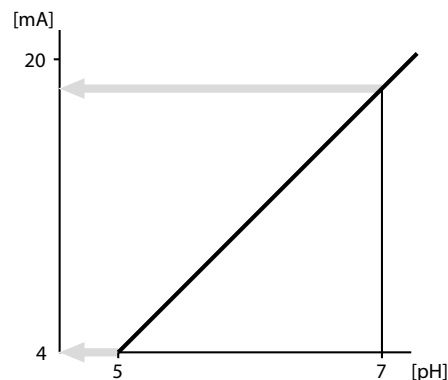


**Characteristic Curves**


**Linear Characteristic**

The process variable is represented by a linear output current curve.

Output 4 ... 20 mA, span pH 0 ... 14

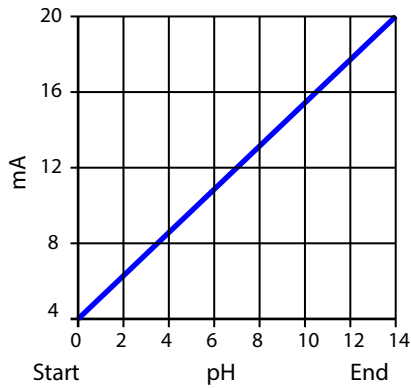

Output 4 ... 20 mA, span pH 5 ... 9

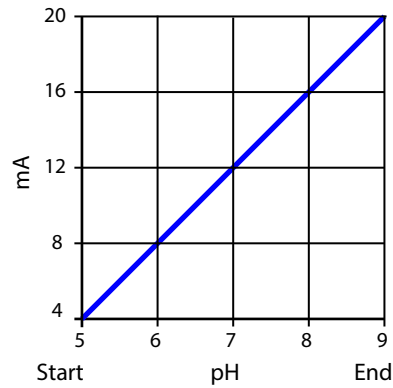


**Trilinear/Bilinear Curve**

Requires the input of two additional vertex points.


Trilinear: Vertex points **(1)** and **(2)** are different values.

Bilinear: Vertex points **(1)** and **(2)** are the same values.

Output 4 ... 20 mA, span pH 0 ... 14

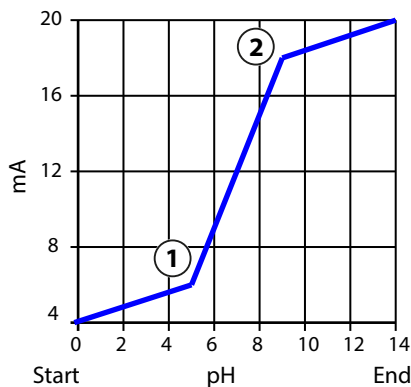

Output 4 ... 20 mA, span pH 5 ... 9

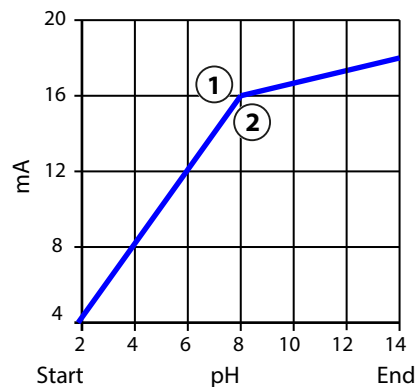


**Function/Logarithmic Curve**

Nonlinear output current characteristic: allows measurements over several decades, e.g., measuring very low values with a high resolution and high values with a low resolution. Requires the input of the value for 50 % output current.


Characteristic: Function with input of 50 % value **(1)**

Characteristic: Logarithmic

Output 4 ... 20 mA, span 1 ... 100  $\mu$ S/cm

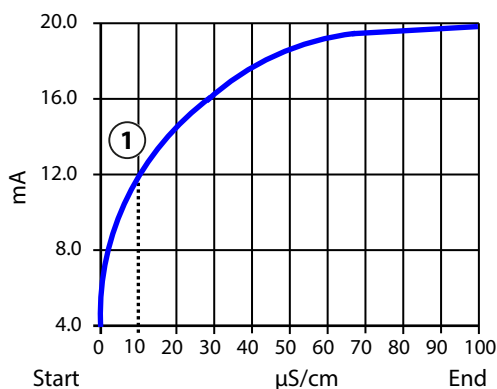

Output 4 ... 20 mA, span 1 ... 1000  $\mu$ S/cm

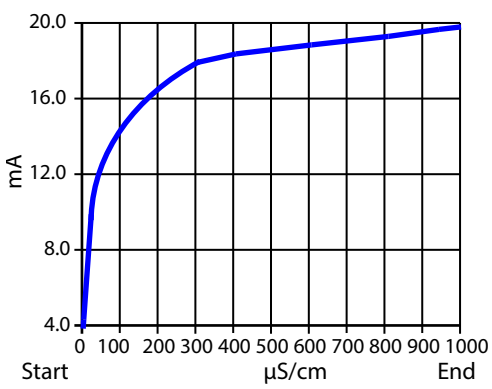

### Output Filter Time Interval

To smooth the current output, a low-pass filter with adjustable time interval can be switched on. When there is a jump at the input (100 %), the output level is at 63 % after the time interval has been reached. The time interval can be set from 0 to 120 sec. If the time interval is set to 0 sec, the current output follows the input.

**Note:** The filter only acts on the current output, not on the display, the limit values, or the controller!

### Current During Function Check (HOLD)

Depending on the parameter setting, the current outputs switch to one of the following states:

- Current measurement
- Last measured value (factory setting)
- Fixed value

### Message when the Current Range is Exceeded

As delivered, the "Failure" message is generated when the output current range is exceeded ( $< 3.8$  mA or  $> 20.5$  mA). This setting can be changed in the parameter settings for the respective measuring channel in the **Messages** menu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages

### 6.6.2 Relay Contacts

Up to three free relay contacts K1 ... K3 can be configured. Contacts K2 and K3 are occupied if the controller is used. → *PID Controller, p. 63*

Notes on wiring → *Relay Contacts: Protective Wiring, p. 29*

#### Use of Relay Contacts

The following uses are possible:

- Off
- Failure
- Maintenance required
- Out of specification
- Function check
- Limit
- Rinse contact
- Rinse contact (channel) (if using two channels)
- Parameter set B active
- USP output (with conductivity sensor only)
- Sensoface
- Sensoface (channel) (if using two channels)

The switching behavior can be adjusted (normally open or normally closed contact).

- N/O/normally open/make contact: the relay contact closes when it is activated.
- N/C/normally closed/break contact: the relay opens when it is activated.

ON/OFF delays can also be configured.

Settings can be changed in the **Relay Contacts** submenu:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts

**Usage: Failure**

01. **Inputs/Outputs** ▶ **Relay Contacts** .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. **Usage** : Failure
04. Set the contact parameters.

 Failure is active


- if a value has exceeded or fallen below “Failure Limit Hi” or “Failure Limit Lo” respectively
- if the device’s measuring range limits are exceeded
- in the event of other failure messages

That means that the equipment no longer operates properly or that process parameters have reached a critical value.

The relay contact is not activated for “Function Check” (HOLD).

**Usage: Maintenance Required**

01. **Inputs/Outputs** ▶ **Relay Contacts** .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. **Usage** : Maintenance required
04. Set the contact parameters.

 Maintenance required is active if messages appear that require maintenance. That means that the equipment is still operating properly but should be serviced, or that process parameters have reached a value requiring intervention. Typical example: The meter detected a worn sensor.

The relay contact is not activated for “Function Check” (HOLD).

**Usage: Out of Specification**

01. **Inputs/Outputs** ▶ **Relay Contacts** .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. **Usage** : Out of specification
04. Set the contact parameters.

 Out of specification is active

- if a value has exceeded or fallen below “Out of Specification Hi” or “Out of Specification Lo” respectively
- if the device has detected deviations from the permissible ambient or process conditions
- if faults are present indicating that the measurement uncertainty is probably greater than to be expected under normal operating conditions

The relay contact is not activated for “Function Check” (HOLD).

**Usage: Function Check**

01. Inputs/Outputs ▶ Relay Contacts .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. Usage : Function check
04. Set the contact parameters.



Function check (HOLD) is active:

- during calibration (only the corresponding channel)
- during maintenance (current source, relay test)
- during parameter setting at the operator level or the administrator level
- during an automatic rinse cycle.

The current outputs respond as configured:


Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Function Check

The measurement display is shown with orange backlighting:

Parameter Setting ▶ General ▶ Display ▶ Display Color : NE107 (Factory Setting)

**Usage: Limit**

01. Inputs/Outputs ▶ Relay Contacts .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. Usage : Limit
04. Set the contact parameters.

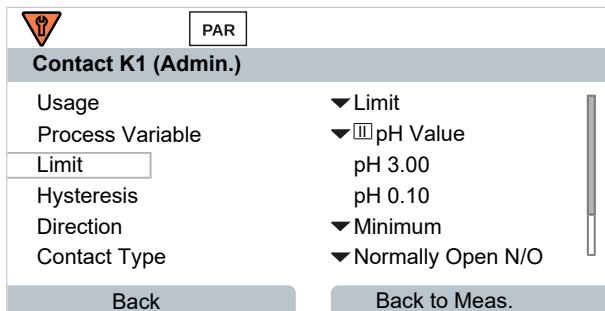

The hysteresis prevents small fluctuations in the measured value around the limit from constantly triggering a switching operation.

The hysteresis is configurable and can be activated with an ON/OFF delay time.


In the measurement display, an icon is used to indicate if the limit has been exceeded.

Measured value falls below limit

Measured value exceeds limit


**Effective direction:**

**Minimum**

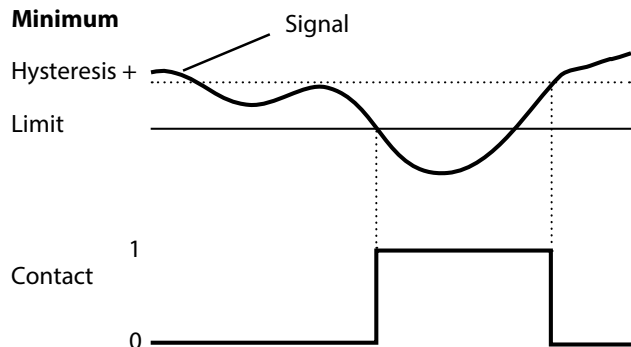

**Effective direction:**

**Maximum**

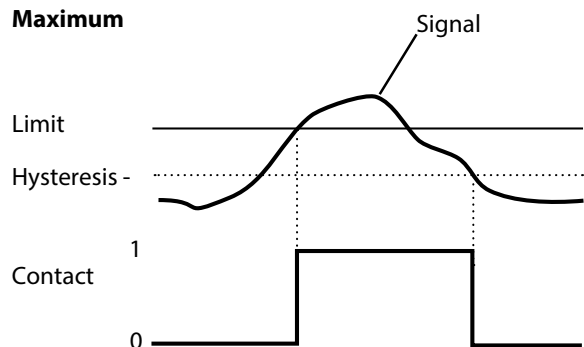

## Usage: Rinse Contact

### Notes for Configuration of the “Rinse Contact” Function

- The “Function Check” (HOLD) mode (e.g., during parameter setting) delays the execution of the “rinse contact” function.
- Up to 3 rinse functions (contacts K1 ... K3) can be configured independently of each other.
- The individual rinse functions are not synchronized with each other.

### Configuring the Rinse Contact

01. Inputs/Outputs ▶ Relay Contacts .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. Usage : Rinse contact
04. Select Contact Type (e.g., “N/O”).
05. Specify Rinsing Interval .
06. Specify Rinse Duration .
07. Specify Rinse/Meas. Lead Time .

**Note:** Function check (HOLD) is active during the defined “Lead Time...”

08. Logbook Entry : Off/on

### Usage: USP Output

Can be activated when using a conductivity sensor and the USP function → *USP Function, p. 84*


01. Inputs/Outputs ▶ Relay Contacts .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. Usage : USP output
04. Assign USP channel .
05. Set the contact parameters.

### Usage: Sensoface

Sensoface messages can be output via a relay contact.

If using two sensors, the Sensoface messages can be assigned to different contacts:

01. Inputs/Outputs ▶ Relay Contacts .
02. Select the desired contact with the *up/down arrow keys* and *enter*.
03. Usage : Sensoface Channel
04. Select Channel .

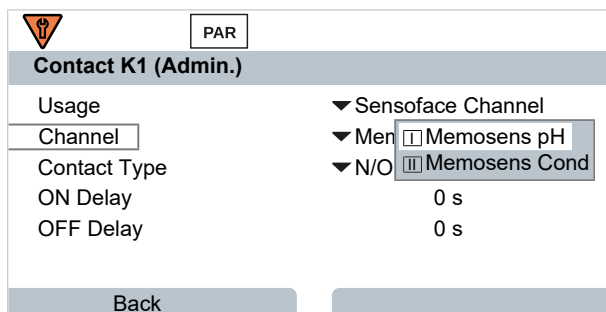

05. Set the contact parameters.

### 6.6.3 PID Controller

The PID controller can be configured as a pulse length or pulse frequency controller.

Controller Type	Pulse length or pulse frequency controller; see below.
Controlled Variable	Depending on the connected sensors.
Setpoint and Neutral Zone	Input of setpoint and neutral zone in percent of the respective controller variable.
Pulse Period or Maximum Pulse Frequency	0 ... 600 seconds or 0 ... 180 per minute
(P) Controller Gain	Specified in percent
(I) Reset Time	0 ... 9999 seconds. 0 s = reset time (integral action) deactivated.
(D) Rate Time	0 ... 9999 seconds. 0 s = rate time (derivative action) deactivated.
Feed Time Alarm after	0 ... 9999 seconds
Behavior during HOLD	Y = constant oder Y = 0 %


Settings can be changed in the **Relay Contacts** submenu:

**Parameter Setting** ▶ **Inputs and Outputs** ▶ **Relay Contacts** ▶ **Controller**

As soon as the "PID Linear" controller is selected, contacts K2 and K3 are occupied by the controller. The corresponding settings are displayed in the **Controller Contacts K2/K3** submenu; see the table.

#### Pulse Length Controller


The pulse length controller is used to control a valve as an actuator. It switches the contact on for a length of time depending on the controller output (Y). The cycle duration remains constant. The ON time does not fall below the minimum of 0.5 s, even if the controller output assumes corresponding values.

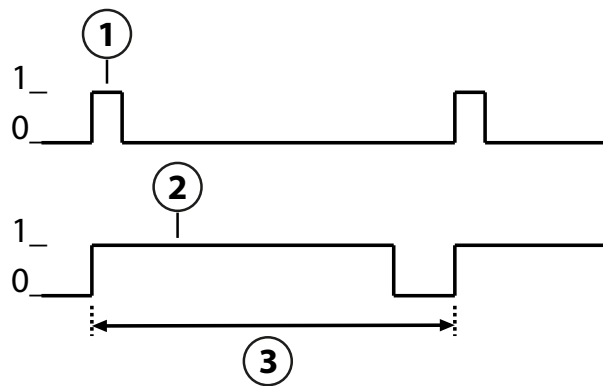

<b>1</b> ON time (Y = 20 %)	<b>3</b> Pulse period
<b>2</b> ON time (Y = 80 %)	

### Pulse Frequency Controller

The pulse frequency controller is used to control a frequency-controlled actuator (metering pump). It varies the frequency with which the contacts are switched on. The maximum pulse frequency [Imp/min] can be configured, and is dependent on the actuator. The ON time is constant. It is automatically calculated from the configured maximum pulse frequency.

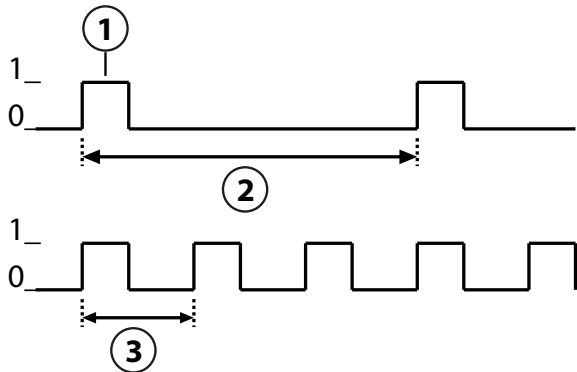

1 ON time	3 Pulse frequency (Y = 80 %)
2 Pulse frequency (Y = 20 %)	

### Adjustable Controlled Variables

Sensor Type	Controlled Variable
pH, ORP	pH value, ORP, temperature
Conductivity	Conductivity, temperature, with TAN option FW-E009: Concentration (liquid)
Oxygen	Saturation %air, saturation %O <sub>2</sub> , temperature

### 6.6.4 Control Inputs

Stratos Multi provides 2 digital optocoupler inputs (OK1, OK2).

The following functions (depending on the parameter setting) can be started via the control signals:

Input OK1 : off, parameter set selection, flow, function check total, or function check channel

- The function of optocoupler input OK1 is defined in the **System Control** :  
[Parameter Setting](#) ▶ [System Control](#) ▶ [Function Control](#) → *Function Control, p. 48*

Input OK2 : off, function check total, or functional check channel.

- Selection in the menu [Parameter Setting](#) ▶ [Inputs/Outputs](#) ▶ [Control Inputs](#) ▶ [Input OK2](#)

The switching level for the control signal must be specified:

[Parameter Setting](#) ▶ [Inputs/Outputs](#) ▶ [Control Inputs](#) ▶ [Inputs OK...](#)

Input Level : Active 10 ... 30 V or active < 2 V



## 6.7 Sensor Selection [I] [II]

**Note:** Function check (HOLD) is active.

Stratos Multi is factory-set to a pH value measurement with Memosens sensor. This measuring function is also provided by the ORP measurement. The measuring function can be changed to measure conductivity or oxygen in the **Parameter Setting** menu:

To prepare Stratos Multi for measurements, the operating mode of the used measuring channel must be set:

**Parameter Setting** ▶ **Sensor Selection [I] [II]**

**Sensor Selection [I]** (measuring channel I): Memosens sensor

**Sensor Selection [II]** (measuring channel II): Second Memosens sensor, analog sensor, or ISM sensor (TAN option FW-E053) via measuring module

### Automatic Process Variable Detection

If Memosens sensors are connected directly, the process variable can be set to "Auto". In this case, the sensor is automatically detected by the device, which sets itself to the correct process variable. This does not apply to the MK-MS095X Memosens module.

**NOTICE!** Parameters that are dependent on process variables (e.g., measurement display, current outputs, contacts, ...) are set separately; this step is not automatic.

If "Auto" is not used with a Memosens sensor, and in general when using analog sensors, the operating mode must be set to the used sensor. The parameters that are dependent on process variables can then be set when a sensor is not connected.

### Identifying a Memosens Sensor

A connected Memosens sensor is displayed as follows: sensor name, manufacturer, serial number, date of last adjustment

All relevant and typical sensor parameters are automatically transferred to the Stratos Multi.

## 6.8 pH Process Variable

**Note:** Function check (HOLD) is active.

**Note:** After changing the process variable or measuring mode, Stratos Multi retains its settings but needs to be reconfigured.

### Selecting a Memosens pH Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [I]

Selection of the Memosens pH sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Auto or pH  
 Mode: Memosens  
 Functionality: pH, ISFET, or pH/ORP (depending on sensor type)

### Selecting a Second Memosens pH Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of a second Memosens pH sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: pH  
 Mode: Memosens  
 Functionality: pH, ISFET, or pH/ORP (depending on sensor type)

### Adjustable Parameters for Memosens pH Sensors Parameter Setting ▶ [I] [II] Memosens pH

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data</i> , p. 69	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limits for monitoring slope and zero point. Enable/disable Sensocheck sensor monitoring. Set whether Sensocheck should generate Failure or Maintenance Required messages. Option to enter individual values before a message is triggered for response time, sensor wear, sensor operating time, and SIP counter; also CIP counter and autoclaving counter with pH/ORP sensors; also operating point and leakage current with ISFET sensors.
Cal Presettings	Presetting of calibration mode and corresponding parameters, configuration of drift check and calibration timer. → <i>Calibration Presettings</i> , p. 72	
TC Process Medium	→ <i>Temperature Compensation of Process Medium</i> , p. 73	
ORP / rH Value	With Memosens pH/ORP sensor: Selection of reference electrode: Ag/AgCl, KCl 1 mol, Ag/AgCl, KCl 3 mol, Hg,Tl/TlCl, KCl 3.5 mol, Hg/Hg <sub>2</sub> SO <sub>4</sub> , K <sub>2</sub> SO <sub>4</sub> sat Enable/disable ORP conversion to standard hydrogen electrode SHE. Calculate rH with or without factor.	
Delta Function	Display deviations from a preset value (delta value): Output value = measured value – delta value → <i>Delta Function</i> , p. 73	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages</i> , p. 74	

**Selecting a Digital ISM pH Sensor (TAN Option FW-E053)**

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an ISM Ex pH sensor connected to the MK-PH015X measuring module:

Module: MK-PH  
 Mode: ISM

**Adjustable Parameters for ISM pH Sensors** Parameter Setting ▶ [II] ISM pH

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 69</i>	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limit values for monitoring slope, zero point, ORP offset, Sensocheck, reference electrode/glass electrode, response time, sensor operating time, TTM maintenance timer, DLI lifetime indicator, CIP/SIP counters, autoclaving counter. Set whether to generate Failure or Maintenance Required messages if exceeded.
Cal Presettings	Presetting of calibration mode with corresponding parameters, configuration of calibration timer and ORP check.	
TC Process Medium	→ <i>Temperature Compensation of Process Medium, p. 73</i>	
ORP/rH Value	Selection of reference electrode: Ag/AgCl, KCl 1 mol, Ag/AgCl, KCl 3 mol, Hg,Tl/TlCl, KCl 3.5 mol, Hg/Hg <sub>2</sub> SO <sub>4</sub> , K <sub>2</sub> SO <sub>4</sub> sat	
	Enable/disable ORP conversion to standard hydrogen electrode SHE.	
	Calculate rH with or without factor.	
Delta Function	Display deviations from a preset value (delta value): Output value = measured value – delta value → <i>Delta Function, p. 73</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 74</i>	

More information on the use of ISM sensors → *Digital ISM Sensors (FW-E053), p. 216*

**Selecting an Analog pH Sensor**

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an Ex pH or Ex pH/ORP sensor connected to the MK-PH015X measuring module:

Module: MK-PH  
 Mode: Analog

**Adjustable Parameters for Analog Sensors**

Parameter Setting ▶ [II] Analog pH

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 69</i>	Sensor Type and Sensoface	Sensoface, temperature monitoring, and the details of sensor monitoring can be set, depending on the sensor type.
	Temperature Detection	Select temperature probe, set measuring and calibration temperature.
	Sensor Monitoring Details	Slope, zero point, set Sensocheck of reference and glass electrodes, and select response time.
Cal Presettings	Presetting of calibration mode and calibration timer with corresponding parameters. → <i>Calibration Presettings, p. 72</i>	
TC Process Medium	→ <i>Temperature Compensation of Process Medium, p. 73</i>	
ORP / rH Value	With pH/ORP sensor: Selection of reference electrode.	
	Enable/disable ORP conversion to standard hydrogen electrode SHE.	
	Calculate rH with or without factor.	

**Adjustable Parameters for Analog Sensors****Parameter Setting ▶ [II] Analog pH**

Delta Function	Display deviations from a preset value (delta value): Output value = measured value – delta value → <i>Delta Function, p. 73</i>
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 74</i>

**Selection of an Analog Pfaudler pH Sensor with TAN Option FW-E017 (Pfaudler Sensors)****Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]**

Selection of a Pfaudler pH sensor connected to the MK-PH015X measuring module:

Module:	MK-PH
Mode:	Analog

**Adjustable Parameters for Analog Pfaudler Sensors****Parameter Setting ▶ [II] Analog pH**

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 69</i>	Sensor Type	Select sensor type: Pfaudler Standard (enameled pH sensor) Pfaudler Diff. (enameled pH differential sensor) Glass El. Diff. (pH differential sensor with glass electrode)
	Sensoface	Adjust Sensoface.
	Temperature Detection	Select temperature probe, set measuring and calibration temperature.
	Sensor Monitoring Details	Slope, zero point, set Sensocheck of reference and glass electrodes. Select "Individual" monitoring and enter sensor values in accordance with sensor datasheet.
	Cal Presettings	Presetting of calibration mode and calibration timer with corresponding parameters. → <i>Calibration Presettings, p. 72</i>
TC Process Medium	→ <i>Temperature Compensation of Process Medium, p. 73</i>	
Delta Function	Display deviations from a preset value (delta value): Output value = measured value – delta value → <i>Delta Function, p. 73</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 74</i>	

More information on the use of Pfaudler sensors → *Pfaudler Sensors (FW-E017), p. 209*


### 6.8.1 Sensor Data

#### Memosens Sensors


Memosens sensors provide relevant sensor data automatically.

#### Analog Sensors

The sensor type must be selected if using analog sensors:

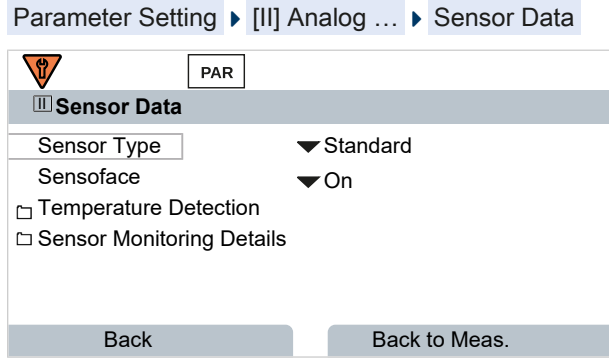

01. In **Temperature Detection**, select the used temperature probe and whether the temperature is to be measured automatically or manually during measurement and/or calibration.

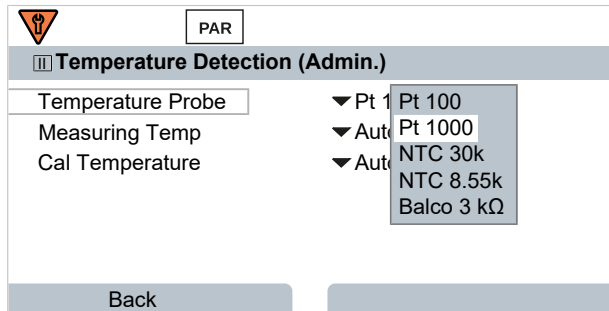

#### Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting > Inputs/Outputs > Current Outputs > Current Output I... > Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting > Inputs/Outputs > Relay Contacts > Contact K... → Usage: Sensoface, p. 62

Sensoface monitors the pH sensor on the basis of the following parameters: slope, zero point, glass impedance (if Sensoscheck is enabled), response time, calibration timer, wear

#### Enabling/Disabling Sensoface



Sensoface is enabled and disabled in the **Sensor Data** submenu:

Parameter Setting > [I] [II] [Sensor] > Sensor Data

**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.

## Adjusting Sensor Monitoring

01. **Sensor Data** ▶ **Sensor Monitoring Details** .
02. Open a sensor parameter, e.g., **Slope** .
03. Set **Monitoring** of the slope to automatic or individual.
04. If you select "Individual": The nominal slope and the min/max limits can be entered.
05. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message, but the parameter is still shown in the Diagnostics menu and on the sensor diagram.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.
06. Set the sensor monitoring details for other sensor data, e.g., zero point, Sensocheck, response time, sensor wear, or sensor operating time.
07. Using the **left softkey: Back**, confirm the sensor monitoring settings and adjust further parameters.  
or  
Using the **right softkey: Back to Meas.**, confirm the sensor monitoring settings and end the function check (HOLD).

## CIP/SIP Counters

CIP/SIP counters are available for the following pH sensor types:


	Memosens pH	Memosens pH/ORP	ISM pH/ORP <sup>1)</sup>
CIP counter		+	+
SIP counter	+	+	+

CIP/SIP cycles are used to clean or sterilize process-wetted parts in the process. Depending on the application, either one chemical (alkaline solution, water) or several chemicals (alkaline solution, water, acidic solution, water) are used.

- CIP temperature > 55 °C/131 °F
- SIP temperature > 115 °C/239 °F

The cleaning (cleaning in place) and sterilization (sterilization in place) cycles are counted to measure the load on the sensor, e.g., in biotechnology applications.

**Note:** If measurements are generally taken at high temperatures (> 55 °C/131 °F), the counters should be switched off.

When a CIP/SIP counter is switched on, a maximum number of cycles can be entered. As soon as the counter has reached the specified value, a Maintenance Required message is triggered and the NAMUR icon  is displayed; the measurement display is shown with blue backlighting (display color: NE107).



**Note:** A CIP or SIP cycle is only entered into the logbook 2 hours after the start to ensure that the cycle is complete.

**Note:** With Memosens sensors, an entry is also made in the sensor.

<sup>1)</sup> With TAN option FW-E053

## Adjusting CIP/SIP Counters

01. [Sensor Monitoring Details](#) ▶ [CIP Counter](#) / [SIP Counter](#)
02. [Monitoring](#) : Off or individual
03. If you select “Individual”: Enter the maximum number of CIP/SIP cycles.
04. In the [Message](#) menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with blue backlighting.

## Autoclaving Counter



An autoclaving counter is available for the following sensor types:

- Memosens pH/ORP
- ISM pH/ORP (with TAN option FW-E053)

Autoclaving cycles are counted to help measure the load on the sensor.

## Adjusting the Autoclaving Counter

01. [Sensor Monitoring Details](#) ▶ [Autoclaving Counter](#)
02. [Monitoring](#) : Off or individual
03. If you select “Individual”: Enter the maximum number of autoclaving cycles.
04. In the [Message](#) menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with blue backlighting.

After each autoclaving process, the autoclaving counter must be manually incremented in the device’s Maintenance menu:

[Maintenance](#) ▶ [\[I\]\[II\] \[Sensor\]](#) ▶ [Autoclaving Counter](#)

### 6.8.2 Calibration Presettings


The calibration presettings can be defined in the parameter settings or adjusted directly in the Calibration menu prior to the calibration.

**Calibration mode:** Presetting of calibration mode, e.g., Calimatic, Manual, Product Calibration, Data Entry, Temperature

If Calimatic automatic calibration is selected, the buffer set to be used must also be selected.


**Calibration points:** Selection of how many calibration points are to be used in the calibration


**Drift check:** Sets the sensitivity of the drift check (fine, standard, coarse)

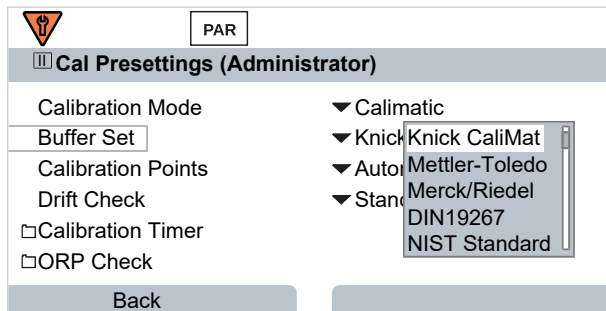

#### Calibration Timer

When a preset calibration interval expires, the calibration timer generates a message text to indicate the need for calibration. If "Auto" is selected, the interval is set to 168 h. If "Individual" is selected, you can select a custom interval.

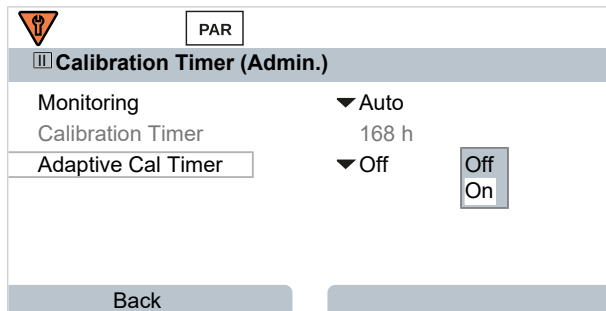

**Note:** If Sensoface is enabled, a neutral smiley is displayed once 80 % of the interval has expired. Once the entire interval has expired, a sad smiley is shown, a Maintenance Required message is generated, and the corresponding NAMUR icon  is displayed and the measurement display is shown with blue backlighting (display color: NE107). If the current outputs are configured accordingly, a 22-mA error signal is generated.

**Adaptive calibration timer:** The time until the next calibration is automatically shortened depending on the temperature and pH value.

Old sensor = timer expires faster.

The following measuring conditions shorten the adaptive calibration timer interval:

- Temperatures above 30 °C/86 °F
- pH ranges below pH 2 or above pH 12

The message test is displayed in the **Diagnostics** menu:

**Diagnostics** ▶ **Message List**

The calibration timer is reset after each calibration.

Settings can be changed in the **Cal Presettings** submenu:

**Parameter Setting** ▶ **[I] [II] [Sensor]** ▶ **Cal Presettings**



### 6.8.3 Temperature Compensation of Process Medium

**Note:** If temperature compensation of the process medium is enabled, "TC" is shown on the display in measuring mode.

**Note:** Function check (HOLD) is active. The current output and relay contacts behave in accordance with the parameter settings. Return to measuring mode to exit the function check, e.g., with the **right softkey: Back to Meas.**

The following are available for temperature compensation:

- Linear with input of a temperature coefficient TC
- Ultrapure water
- Table

#### Linear Temperature Compensation of Process Medium

If the medium's pH value changes in linear fashion with the temperature, the temperature coefficient TC can be determined for temperature compensation in %/K as follows:

$$TC = (pH_{25} - pH_T) \cdot 100 / (25 \text{ °C} - T) \text{ [%/K]}$$

TC	Temperature coefficient [%/K]
pH <sub>25</sub>	pH value at 25 °C
pH <sub>T</sub>	pH value at measuring temperature T
T	Measuring temperature [°C]

#### Table

When using process media with a known pH value temperature response, the pH output value can be corrected using a table. The percentage deviation from the measured value in % can be entered for temperatures between 0 and 95 °C in steps of 5 °C. The pH output value is then corrected by the corresponding percentage deviation from the measured value in %, depending on the measuring temperature. Table values are linearly interpolated. If the temperature falls below or exceeds the specified value (< 0 °C or > 95 °C), the last value in the table is used for calculation.

The table must be completed with the following values in steps of 5 °C:

$$((pH_{25} / pH_T) - 1) \cdot 100 \text{ [%]}$$

pH <sub>25</sub>	pH value at 25 °C
pH <sub>T</sub>	pH value at measuring temperature T

Settings can be changed in the **TC Process Medium** submenu:

Parameter Setting ▶ [I] [II] ... pH ▶ TC Process Medium

**Note:** If the delta function and TC correction are enabled at the same time, the TC correction is carried out first and the delta value is then deducted.

### 6.8.4 Delta Function

**Note:** If the delta function is enabled, "Δ" is shown on the display in measuring mode.

If a delta value is specified, the measuring system calculates the difference  
output value = measured value – delta value

The delta value can be set using the "+" or "-" signs. If using a negative sign, the delta value is added to the measured value.

The delta value is adjusted in the **Delta Function** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Delta Function

All outputs are controlled by the output value; the displays show the output value.

**Note:** If the delta function and TC correction are enabled at the same time, the TC correction is carried out first and the delta value is then deducted.

### 6.8.5 Messages

All values determined by the measuring module or sensor can generate messages.

Messages can be configured for the following process variables:

- pH value
- ORP (with pH/ORP sensor)
- rH value (with pH/ORP sensor)
- Temperature
- pH voltage

#### Configuring Messages

Process variable limits for the monitoring range can be selected in the **Messages** submenu:




Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The “failure” or “out of specification” icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the “Failure” and “Out of Specification” messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

#### Displaying Messages

01. Go to the Diagnostics menu if the “failure” , “maintenance required” , or “out of specification”  icons are flashing on the display: Menu Selection ▶ Diagnostics ▶ Message List

- ✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the **up/down arrow keys**.

The error message disappears from the display around 2 s after the error is cleared.

An overview of message texts with notes on troubleshooting can be found in the “Troubleshooting” chapter. → *Malfunction States, p. 143*

## 6.9 ORP Process Variable

**Note:** Function check (HOLD) is active.

**Note:** After changing the process variable or measuring mode, Stratos Multi retains its settings but needs to be reconfigured.

Configuration of a Memosens pH/ORP sensor (combination sensor) → *pH Process Variable, p. 66*

### Selecting a Memosens ORP Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [I]

Selection of a Memosens ORP sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Auto or pH  
 Mode: Memosens  
 Functionality: ORP

### Selecting a Second Memosens ORP Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of a second Memosens ORP sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: pH  
 Mode: Memosens  
 Functionality: ORP

### Adjustable Parameters for Memosens ORP Sensors Parameter Setting ▶ [I] Memosens ORP

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 76</i>	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limits for monitoring ORP offset. Option to enter individual limits before a message for sensor operating time and SIP counter is triggered.
Cal Presettings	Presetting of the calibration mode; configuration of the calibration timer and ORP check. → <i>Calibration Presettings, p. 77</i>	
ORP/rH Value	Selection of reference electrode.	
	Enable/disable ORP conversion to standard hydrogen electrode SHE.	
	If using a pH sensor connected via a module at the same time: Calculate rH with or without factor.	
Delta Function	Display deviations from a preset value (delta value): Output value = measured value – delta value → <i>Delta Function, p. 77</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 78</i>	

### Selecting an Analog ORP Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an Ex ORP sensor connected to the MK-PH015X measuring module:

Module: MK-PH  
 Mode: Analog

When using an analog ORP sensor, the menus are the same as for an analog pH sensor:

Parameter Setting ▶ [II] Analog pH

### 6.9.1 Sensor Data

Memosens sensors provide relevant sensor data automatically.

#### Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I... ▶ Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: Sensoface, p. 62

#### Enabling/Disabling Sensoface



Sensoface is enabled and disabled in the **Sensor Data** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Sensor Data

**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.

#### Adjusting Sensor Monitoring

01. **Sensor Data** ▶ **Sensor Monitoring Details** .
02. Open a sensor parameter, e.g., **ORP Offset** .
03. Set **Monitoring** of the ORP offset to automatic or individual.
04. If you select "Individual": The nominal ORP offset and the min/max limits can be entered.
05. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.
06. Set the sensor monitoring details for further sensor data such as sensor operating time or SIP counter.
07. Using the **left softkey: Back**, confirm the sensor monitoring settings and adjust further parameters.  
or  
Using the **right softkey: Back to Meas.**, confirm the sensor monitoring settings and end the function check (HOLD).

### 6.9.2 Calibration Presettings


The calibration presettings can be defined in the parameter settings or adjusted directly in the Calibration menu prior to the calibration.

**Calibration mode:** Presetting of the calibration mode, e.g., ORP data entry, ORP adjustment, ORP check, temperature

**Calibration timer:** When a preset calibration interval expires, the calibration timer generates a message text to indicate the need for calibration. If "Auto" is selected, the interval is set to 168 h. If "Individual" is selected, you can select a custom interval.

**Note:** If Sensoface is enabled, the smiley is "sad" as soon as the interval has expired. You can configure the current outputs so that a Sensoface message generates a 22-mA error signal.

**ORP check:** Settings for test period in seconds and test difference in millivolts

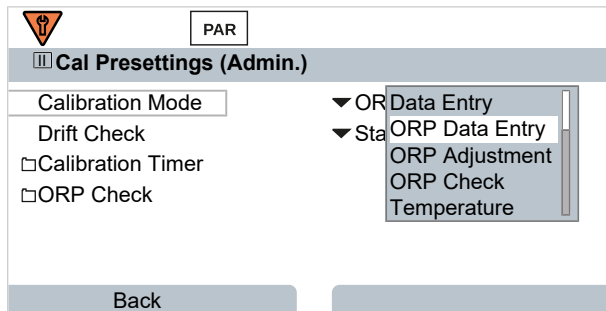

Settings can be changed in the **Cal Presettings** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ **Cal Presettings**

### 6.9.3 Delta Function

**Note:** If the delta function is enabled, "Δ" is shown on the display in measuring mode.

If a delta value is specified, the measuring system calculates the difference  
 output value = measured value – delta value

The delta value can be set using the "+" or "-" signs. If using a negative sign, the delta value is added to the measured value.

The delta value is adjusted in the **Delta Function** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ **Delta Function**

All outputs are controlled by the output value; the displays show the output value.

**Note:** If the delta function and TC correction are enabled at the same time, the TC correction is carried out first and the delta value is then deducted.

## 6.9.4 Messages

All values determined by the measuring module or sensor can generate messages.

Messages can be configured for the following process variables:

- ORP voltage
- Temperature

### Configuring Messages

Process variable limits for the monitoring range can be selected in the **Messages** submenu:




Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The “failure” or “out of specification” icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the “Failure” and “Out of Specification” messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

### Displaying Messages

01. Go to the Diagnostics menu if the “failure”  , “maintenance required”  , or “out of specification”  icons are flashing on the display: Menu Selection ▶ Diagnostics ▶ Message List

- ✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the **up/down arrow keys**.

The error message disappears from the display around 2 s after the error is cleared.

An overview of message texts with notes on troubleshooting can be found in the “Troubleshooting” chapter. → *Malfunction States, p. 143*

## 6.10 Conductivity (Contacting) Process Variable

**Note:** Function check (HOLD) is active.

**Note:** After changing the process variable or measuring mode, Stratos Multi retains its settings but needs to be reconfigured.

### Selecting a Memosens Conductivity Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [I]

Selection of a Memosens conductivity sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Auto or Conductivity  
 Mode: Memosens  
 Functionality: 2-electrode sensor or 4-electrode sensor (depending on sensor type)

### Selecting a Second Memosens Conductivity Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of a second Memosens conductivity sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: Conductivity  
 Mode: Memosens  
 Functionality: 2-electrode sensor or 4-electrode sensor (depending on sensor type)

### Adjustable Parameters for Memosens Conductivity Sensors

Parameter Setting ▶ [I] [II] Memosens Cond	
Input Filter	Pulse Suppression Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data</i> , p. 80	Sensoface Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details Option to enter individual limits for monitoring cell constants. Disable Sensocheck sensor monitoring or select whether Sensocheck should generate failure or maintenance required messages. Option to enter individual limits before a message for SIP counter, CIP counter, and sensor operating time is triggered.
Cal Presettings	Presetting of calibration mode with corresponding parameters. → <i>Calibration Presettings</i> , p. 83
TC Process Medium	→ <i>Temperature Compensation of Process Medium</i> , p. 83
Concentration	→ <i>Concentration (TAN Option FW-E009)</i> , p. 84
TDS	Enable/disable the TDS function. → <i>TDS Function</i> , p. 84
USP	Enable/disable USP function for monitoring ultrapure water and set the USP limit. → <i>USP Function</i> , p. 84
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages</i> , p. 84

### Selecting an Analog Conductivity Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an Ex conductivity sensor connected to the MK-COND025X measuring module:

Module: MK-COND  
 Mode: Analog

#### Adjustable Parameters for Analog Conductivity Sensors Parameter Setting ▶ [II] Analog Cond


Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 80</i>	Sensor Type	Select the used sensor type.
	Nominal Cell Constant	Enter when 2-el. or 4-el. sensor is selected.
	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensocheck	Enable or disable Sensocheck to generate Failure or Maintenance Required messages.
	Temperature Detection	Set measuring and calibration temperature. When 2-el. or 4-el. sensor is selected: Select temperature probe.
Cal Presettings	Presetting of calibration mode with corresponding parameters. → <i>Calibration Presettings, p. 83</i>	
TC Process Medium	→ <i>Temperature Compensation of Process Medium, p. 83</i>	
Concentration	→ <i>Concentration (TAN Option FW-E009), p. 84</i>	
TDS	Enable/disable the TDS function. → <i>TDS Function, p. 84</i>	
USP	Enable/disable USP function for monitoring ultrapure water and set the USP limit. → <i>USP Function, p. 84</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 84</i>	

### 6.10.1 Sensor Data

Memosens sensors provide relevant sensor data automatically.

The sensor type must be selected if using analog sensors:

Parameter Setting ▶ [II] Analog ... ▶ Sensor Data

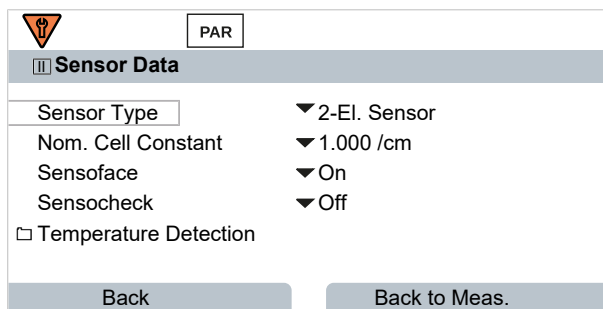

01. Select the **Sensor Type** .
02. Enter the sensor’s nominal cell constant.
03. In **Temperature Detection** , select the used temperature probe and whether the temperature is to be measured automatically or manually during measurement and/or calibration.



## Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I... ▶ Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: Sensoface, p. 62

Sensoface monitors the conductivity sensor on the basis of the following parameters:  
cell constant, polarization (if Sensocheck is enabled)

With Memosens sensors, also: number of CIP and SIP cycles compared to the specified "Sensor Monitoring Details".

### Enabling/Disabling Sensoface

Sensoface is enabled and disabled in the Sensor Data submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Sensor Data

**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.

### Adjusting Sensor Monitoring

**Note:** Function active for digital sensors.

01. Sensor Data ▶ Sensor Monitoring Details .


02. Open a sensor parameter, e.g., Cell Constant .


03. Set Monitoring of the cell constant to automatic or individual.

04. If you select "Individual": The nominal cell constant and the min/max limits can be entered.

05. In the Message menu item, select whether and how an exceeded limit is to be displayed:

Off No message.

Failure A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.

Maintenance A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

06. Set the sensor monitoring details for further sensor data, e.g., Sensocheck, sensor operating time, or CIP/SIP counter.

07. Using the **left softkey: Back**, confirm the sensor monitoring settings and adjust further parameters.  
or  
Using the **right softkey: Back to Meas.**, confirm the sensor monitoring settings and end the function check (HOLD).

## CIP/SIP Counters

CIP/SIP counters are available for the following conductivity sensor types:


- Memosens 2-electrode/4-electrode sensors

CIP/SIP cycles are used to clean or sterilize process-wetted parts in the process. Depending on the application, either one chemical (alkaline solution, water) or several chemicals (alkaline solution, water, acidic solution, water) are used.

- CIP temperature > 55 °C/131 °F
- SIP temperature > 115 °C/239 °F

The cleaning (cleaning in place) and sterilization (sterilization in place) cycles are counted to measure the load on the sensor, e.g., in biotechnology applications.

**Note:** If measurements are generally taken at high temperatures (> 55 °C/131 °F), the counters should be switched off.

When a CIP/SIP counter is switched on, a maximum number of cycles can be entered. As soon as the counter has reached the specified value, a Maintenance Required message is triggered and the NAMUR icon  is displayed; the measurement display is shown with blue backlighting (display color: NE107).

**Note:** A CIP or SIP cycle is only entered into the logbook 2 hours after the start to ensure that the cycle is complete.

**Note:** With Memosens sensors, an entry is also made in the sensor.

## Adjusting CIP/SIP Counters


01. **Sensor Monitoring Details** ▶ CIP Counter / SIP Counter


02. **Monitoring** : Off or individual

03. If you select "Individual": Enter the maximum number of CIP/SIP cycles.

04. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:

Off            No message.


Failure        A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.

Maintenance    A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

### 6.10.2 Calibration Presettings

The calibration presettings can be defined in the parameter settings or adjusted directly in the Calibration menu prior to the calibration.

**Calibration Mode:** Presetting of calibration mode, e.g., automatic, manual, product calibration, data entry, temperature

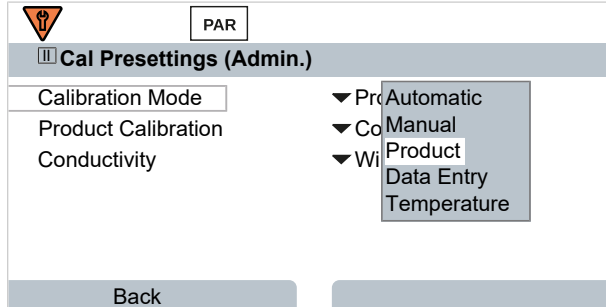

Further options are available depending on the calibration mode.

Automatic	Product calibration
Selection of calibration solution	Conductivity: Selection with/without temperature compensation
	Concentration: <sup>1)</sup> Selection of medium

Calibration presettings can be changed in the **Cal Presettings** submenu:

Parameter Setting ▶ [I] [II] ... Cond ▶ Cal Presettings

### 6.10.3 Temperature Compensation of Process Medium

**Note:** If temperature compensation of the process medium is enabled, "TC" is shown on the display in measuring mode.

The following are available for temperature compensation:

- Off
- Linear (enter temperature coefficient TC)
- EN 27888 (natural waters)
- Ultrapure water (with different trace impurities)

#### Trace Impurities in Ultrapure Water

NaCl	Neutral ultrapure water, for conductivity measurement in water processing downstream of gravel bed filter
HCl	Acidic ultrapure water, for conductivity measurement downstream of cation filter
NH <sub>3</sub>	Ammoniacal ultrapure water
NaOH	Alkaline ultrapure water

Settings can be changed in the **TC Process Medium** submenu:

Parameter Setting ▶ [I] [II] ... Cond ▶ TC Process Medium

<sup>1)</sup> First enable TAN option FW-E009. → *Concentration Determination (FW-E009)*, p. 204

### 6.10.4 Concentration (TAN Option FW-E009)

With TAN option FW-E009, the substance concentration in percent by weight (wt%) can be determined for  $H_2SO_4$ ,  $HNO_3$ , HCl, NaOH, NaCl, and Oleum from the measured conductivity and temperature values. A custom solution can also be specified.

The menu is only shown if the TAN option is activated.

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ Concentration

See also

→ *Concentration Determination (FW-E009), p. 204*

### 6.10.5 TDS Function

TDS (total dissolved solids) = weight of dissolved solids that influence conductivity

The TDS function provides a quick way of determining the evaporation residue of water. A TDS factor must be entered for this purpose.

The factor establishes a simple linear relationship between measured conductivity and evaporation residue. It is dependent on the composition of the medium and must be empirically determined by the user.

### 6.10.6 USP Function

#### Monitoring Ultrapure Water in the Pharmaceutical Industry

The conductivity of ultrapure water in the pharmaceutical industry can be monitored online in accordance with the guideline "USP" (U.S. Pharmacopeia), Annex 5, Section 645 "Water Conductivity". The conductivity is measured without temperature compensation and is compared with limits. The water is usable without any further testing when the conductivity is below the USP limit.

#### Configuring the USP Function



The USP value can be configured as a process variable USP% for output (display, current output, limit, measurement recorder)

Settings can be changed in the **USP** submenu:

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ USP

**Reduced limit:** The USP limit can be reduced down to 10 %.

**Monitoring:** Select whether and how an exceeded limit is to be displayed.

Off	No message, but the parameter is still shown in the Diagnostics menu.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

#### USP Function: Specifying a Relay Contact

The USP function can also be assigned to a relay contact:

Parameter setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → *Usage: USP Output, p. 62*

#### Display of the USP Function in the Diagnostics Menu

Diagnostics ▶ [I] [II] ... Cond(I) ▶ USP Function

Display of the USP limit, the reduced limit, and conductivity.

### 6.10.7 Messages

All values determined by the measuring module or sensor can generate messages.

Messages can be configured for the following process variables:

- Conductivity
- Resistivity
- Concentration (with TAN option FW-E009)
- Temperature
- Salinity

### Configuring Messages

Process variable limits for the monitoring range can be selected in the **Messages** submenu:




Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The “failure” or “out of specification” icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the “Failure” and “Out of Specification” messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

### Displaying Messages

01. Go to the Diagnostics menu if the “failure” , “maintenance required” , or “out of specification”  icons are flashing on the display: Menu Selection ▶ Diagnostics ▶ Message List
  - ✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.
02. You can scroll forward and backward using the **up/down arrow keys**.

The error message disappears from the display around 2 s after the error is cleared.

An overview of message texts with notes on troubleshooting can be found in the “Troubleshooting” chapter. → *Malfunction States, p. 143*

## 6.11 Conductivity (Inductive) Process Variable

**Note:** Function check (HOLD) is active.

**Note:** After changing the process variable or measuring mode, Stratos Multi retains its settings but needs to be reconfigured.

### Selecting a Digital Toroidal Conductivity Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [I]

Selection of a Memosens toroidal conductivity sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Auto or Conductivity (Induct.)  
 Mode: Memosens  
 Functionality: Condl

Selection of an SE680X-\*K digital toroidal conductivity sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Conductivity (Induct.)  
 Mode: Other Digital  
 Functionality: SE680K

### Selecting a Second Digital Toroidal Conductivity Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of a second Memosens conductivity sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: Conductivity (Induct.)  
 Mode: Memosens  
 Functionality: Condl

Selection of a second SE680X-\*K digital toroidal conductivity sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: Conductivity (Induct.)  
 Mode: Other Digital

### Adjustable Parameters for Digital or Memosens Sensors for Inductive Conductivity

Parameter Setting ▶ [I] [II] Digital/Memosens Condl

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data</i> , p. 88	Sensoface	Enable/disable display of the Sensoface icon.
	If "Other Digital" is selected: Sensocheck	Monitoring of primary and secondary coils. Enable or disable Sensocheck to generate Failure or Maintenance Required messages.
	If Memosens is selected: Sensor Monitoring Details	Option to enter individual limits for monitoring the cell factor. Sensocheck: Monitoring of primary and secondary coils. Enable or disable Sensocheck to generate Failure or Maintenance Required messages. Option to enter individual limits before a message for SIP counter, CIP counter, and sensor operating time is triggered.
Cal Presettings	Presetting of calibration mode with corresponding parameters. → <i>Calibration Presettings</i> , p. 90	
TC Process Medium	→ <i>Temperature Compensation of Process Medium</i> , p. 90	
Concentration	→ <i>Concentration (TAN Option FW-E009)</i> , p. 91	

**Adjustable Parameters for Digital or Memosens Sensors for Inductive Conductivity****Parameter Setting ▶ [I] [II] Digital/Memosens Condl**

TDS	Enable/disable the TDS function. → <i>TDS Function, p. 91</i>
USP	Enable/disable USP function for monitoring ultrapure water and set the USP limit. → <i>USP Function, p. 91</i>
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 92</i>

**Selecting an Analog Toroidal Conductivity Sensor****Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]**

Selection of an Ex toroidal conductivity sensor connected to the MK-CONDI035X measuring module:

Module: MK-CONDI

Mode: Analog

**Adjustable Parameters for Analog Toroidal Conductivity Sensors****Parameter Setting ▶ [II] Analog Condl**

Input Filter	Pulse Suppression	Enable/disable suppression of interference pulses.
Sensor Data → <i>Sensor Data, p. 88</i>	Sensor Type	Select the used sensor type. If "Other" is selected, enter further sensor data.
	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensocheck	Monitoring of primary and secondary coils. Enable or disable Sensocheck to generate Failure or Maintenance Required messages.
	Temperature Detection	Select temperature probe, set measuring and calibration temperature.
Cal Presettings	Presetting of calibration mode with corresponding parameters. → <i>Calibration Presettings, p. 90</i>	
TC Process Medium	→ <i>Temperature Compensation of Process Medium, p. 90</i>	
Concentration	→ <i>Concentration (TAN Option FW-E009), p. 91</i>	
TDS	Enable/disable the TDS function. → <i>TDS Function, p. 91</i>	
USP	Enable/disable USP function for monitoring ultrapure water and set the USP limit. → <i>USP Function, p. 91</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 92</i>	

### 6.11.1 Sensor Data

Memosens sensors provide relevant sensor data automatically.

The sensor type must be selected if using analog sensors:

Parameter Setting ▶ [I] Analog ... ▶ Sensor Data

Sensor Data	
Sensor Type	▼ Other
Sensor Coding	F0031
Nom. Cell Factor	1.980 /cm
Transfer Ratio	▼ 100.00
Sensoface	▼ On
Sensocheck	Off

Back      Back to Meas.

01. Select the **Sensor Type**

02. Enter the sensor coding, nominal cell factor, and transfer ratio.

03. In **Temperature Detection**, select the used temperature probe and whether the temperature is to be measured automatically or manually during measurement and/or calibration.

**Note:** The sensor coding for unknown sensor types can be requested from Knick (see the back page of this document for contact details)

#### Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I... ▶ Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: Sensoface, p. 62

Sensoface monitors the toroidal conductivity sensor on the basis of the following parameters: cell factor, zero point, and, if Sensocheck is enabled: primary/secondary coils and wires  
With Memosens sensors, also: number of CIP and SIP cycles compared to the specified "Sensor Monitoring Details".

#### Enabling/Disabling Sensoface

Sensoface is enabled and disabled in the **Sensor Data** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Sensor Data



**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.



## Adjusting Sensor Monitoring

**Note:** Function active for digital sensors.

01. **Sensor Data** ▶ **Sensor Monitoring Details** .
02. Open a sensor parameter, e.g., **Cell Constant** .
03. Set **Monitoring** of the cell constant to automatic or individual.
04. If you select "Individual": The nominal cell constant and the min/max limits can be entered.
05. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.
06. Set the sensor monitoring details for further sensor data, e.g., Sensocheck, sensor operating time, or CIP/SIP counter.
07. Using the **left softkey: Back**, confirm the sensor monitoring settings and adjust further parameters.  
or  
Using the **right softkey: Back to Meas.**, confirm the sensor monitoring settings and end the function check (HOLD).

## CIP/SIP Counters

CIP/SIP counters are available for the following conductivity sensor types:


- Memosens toroidal conductivity sensors

CIP/SIP cycles are used to clean or sterilize process-wetted parts in the process. Depending on the application, either one chemical (alkaline solution, water) or several chemicals (alkaline solution, water, acidic solution, water) are used.

- CIP temperature > 55 °C/131 °F
- SIP temperature > 115 °C/239 °F

The cleaning (cleaning in place) and sterilization (sterilization in place) cycles are counted to measure the load on the sensor, e.g., in biotechnology applications.



**Note:** If measurements are generally taken at high temperatures (> 55 °C/131 °F), the counters should be switched off.

When a CIP/SIP counter is switched on, a maximum number of cycles can be entered. As soon as the counter has reached the specified value, a Maintenance Required message is triggered and the NAMUR icon  is displayed; the measurement display is shown with blue backlighting (display color: NE107).

**Note:** A CIP or SIP cycle is only entered into the logbook 2 hours after the start to ensure that the cycle is complete.

**Note:** With Memosens sensors, an entry is also made in the sensor.


### Adjusting CIP/SIP Counters

01. **Sensor Monitoring Details** ▶ CIP Counter / SIP Counter
02. **Monitoring** : Off or individual
03. If you select “Individual”: Enter the maximum number of CIP/SIP cycles.
04. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
  - Off            No message.
  - Failure        A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with red backlighting.
  - Maintenance    A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with blue backlighting.

### 6.11.2 Calibration Presettings

The calibration presettings can be defined in the parameter settings or adjusted directly in the Calibration menu prior to the calibration.

**Calibration Mode:** Presetting of calibration mode, e.g., Automatic, Manual, Product Calibration, Zero Point, Installation Factor, Data Entry, Temperature

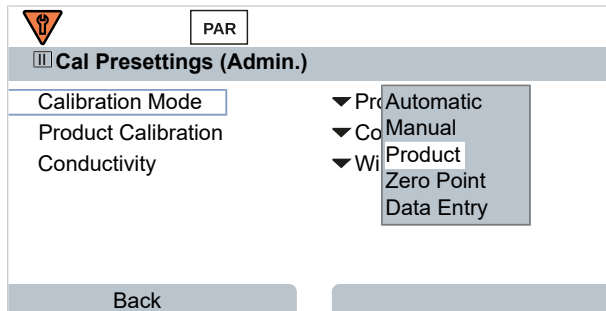

Further options are available depending on the calibration mode.

Automatic	Product Calibration	
Selection of calibration solution	Conductivity:	Selection with/without temperature compensation
	Concentration: <sup>1)</sup>	Selection of medium

Calibration presettings can be changed in the **Cal Presettings** submenu:

**Parameter Setting** ▶ **[I] [II] ... Cond** ▶ **Cal Presettings**

### 6.11.3 Temperature Compensation of Process Medium

**Note:** If temperature compensation of the process medium is enabled, “TC” is shown on the display in measuring mode.

The following are available for temperature compensation:

- Off
- Linear (enter temperature coefficient TC)
- EN 27888 (natural waters)
- Ultrapure water (with different trace impurities)

<sup>1)</sup> First enable TAN option FW-E009. → *Concentration Determination (FW-E009)*, p. 204

**Trace Impurities in Ultrapure Water**

NaCl	Neutral ultrapure water, for conductivity measurement in water processing downstream of gravel bed filter
HCl	Acidic ultrapure water, for conductivity measurement downstream of cation filter
NH <sub>3</sub>	Ammoniacal ultrapure water
NaOH	Alkaline ultrapure water

Settings can be changed in the **TC Process Medium** submenu:

Parameter Setting ▶ [I] [II] ... Cond ▶ TC Process Medium

**6.11.4 Concentration (TAN Option FW-E009)**

With TAN option FW-E009, the substance concentration in percent by weight (wt%) can be determined for H<sub>2</sub>SO<sub>4</sub>, HNO<sub>3</sub>, HCl, NaOH, NaCl, and Oleum from the measured conductivity and temperature values. A custom solution can also be specified.

The menu is only shown if the TAN option is activated.

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ Concentration

See also

→ *Concentration Determination (FW-E009), p. 204*

**6.11.5 TDS Function**

TDS (total dissolved solids) = weight of dissolved solids that influence conductivity

The TDS function provides a quick way of determining the evaporation residue of water. A TDS factor must be entered for this purpose.

The factor establishes a simple linear relationship between measured conductivity and evaporation residue. It is dependent on the composition of the medium and must be empirically determined by the user.

**6.11.6 USP Function****Monitoring Ultrapure Water in the Pharmaceutical Industry**

The conductivity of ultrapure water in the pharmaceutical industry can be monitored online in accordance with the guideline "USP" (U.S. Pharmacopeia), Annex 5, Section 645 "Water Conductivity". The conductivity is measured without temperature compensation and is compared with limits. The water is usable without any further testing when the conductivity is below the USP limit.

**Configuring the USP Function**



The USP value can be configured as a process variable USP% for output (display, current output, limit, measurement recorder)

Settings can be changed in the **USP** submenu:

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ USP

**Reduced limit:** The USP limit can be reduced down to 10 %.

**Monitoring:** Select whether and how an exceeded limit is to be displayed.

Off	No message, but the parameter is still shown in the Diagnostics menu.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

## USP Function: Specifying a Relay Contact

The USP function can also be assigned to a relay contact:

Parameter setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: USP Output, p. 62

## Display of the USP Function in the Diagnostics Menu

Diagnostics ▶ [I] [II] ... Cond(I) ▶ USP Function

Display of the USP limit, the reduced limit, and conductivity.

### 6.11.7 Messages

All values determined by the measuring module or sensor can generate messages.

Messages can be configured for the following process variables:

- Conductivity
- Resistivity
- Concentration (with TAN option FW-E009)
- Temperature
- Salinity

### Configuring Messages

Process variable limits for the monitoring range can be selected in the Messages submenu:




Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The "failure" or "out of specification" icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the "Failure" and "Out of Specification" messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

### Displaying Messages

01. Go to the Diagnostics menu if the "failure" , "maintenance required" , or "out of specification"  icons are flashing on the display: Menu Selection ▶ Diagnostics ▶ Message List

- ✓ All active messages are displayed in the Message List menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the *up/down arrow keys*.

The error message disappears from the display around 2 s after the error is cleared.


An overview of message texts with notes on troubleshooting can be found in the "Troubleshooting" chapter. → *Malfunction States, p. 143*

## 6.12 Dual Conductivity Measurement

A 2-channel conductivity measurement can be performed with two Memosens sensors or one Memosens and one analog sensor. In this case, a Memosens sensor is directly connected to the device, a second conductivity sensor via the MK-COND025X or MK-MS095X modules.

Parameter setting → *Conductivity (Contacting) Process Variable, p. 79*

### Layout of the Measuring Point

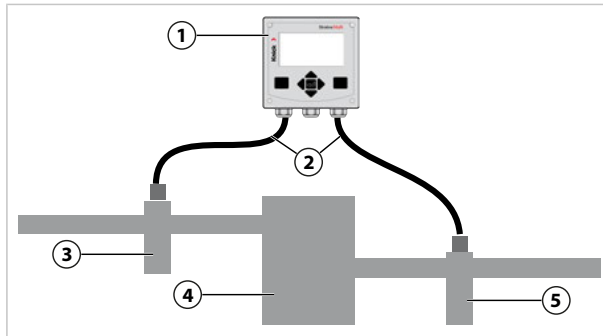

- |   |  |
|---|--|
| 1 Stratos Multi                             | 4 Cation exchanger                           |
| 2 Max. connection length 3 m                | 5 Outlet: Conductivity sensor B with fitting |
| 3 Inlet: Conductivity sensor A with fitting |  |

### Calculation Blocks (TAN Option FW-E020)

With TAN option FW-E020, "Calculation Blocks", the measured conductivity values can be converted into new variables. → *Calculation Blocks (FW-E020), p. 211*

### 6.13 Oxygen Process Variable

**Note:** Function check (HOLD) is active.

**Note:** After changing the process variable or measuring mode, Stratos Multi retains its settings but needs to be reconfigured.

**Note:** Oxygen measurements in low oxygen concentrations require TAN option FW-E015.

#### Selecting a Memosens Oxygen Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [I]

Selection of the Memosens oxygen sensor connected to the RS-485 interface (terminals 1 ... 5):

Process variable: Auto or oxygen  
 Mode: Memosens  
 Functionality: Amperometric

#### Selecting a Second Memosens Oxygen Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of a second Memosens oxygen sensor connected to the MK-MS095X measuring module:

Module: MK-MS  
 Process variable: Oxygen  
 Mode: Memosens  
 Functionality: Amperometric

#### Adjustable Parameters for Memosens Oxygen Sensors Parameter Setting ▶ [I] [II] Memosens Oxy

Input Filter	Pulse Suppression	Suppression of interference pulses: Off, Weak, Medium, Strong
	Input Filter	Setting in seconds
Sensor Data → <i>Sensor Data, p. 97</i>	Measure in	Liquids, Gases
	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limits for monitoring separate parameters. Disable Sensocheck sensor monitoring or select whether Sensocheck should generate Failure or Maintenance Required messages. Option to enter individual limits before a message for response time, sensor wear, sensor operating time, SIP counter is triggered.
Cal Presettings	Presetting of the calibration mode and calibration timer. → <i>Calibration Presettings, p. 100</i>	
Pressure Correction	Manual input of pressure during measurement and calibration.	
	With TAN option FW-E051: automatic pressure correction by external pressure transmitter. → <i>Pressure Correction, p. 100</i>	
Salinity Correction	Salinity, Chlorinity, Conductivity → <i>Salinity Correction, p. 101</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 101</i>	

**Selecting a Digital ISM Oxygen Sensor (TAN Option FW-E053)**

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an ISM Ex oxygen sensor connected to the MK-OXY045X measuring module:

Module: MK-OXY

Mode: ISM

**Adjustable Parameters for ISM Oxygen Sensors** Parameter Setting ▶ [II] ISM Oxy

Input Filter	Pulse Suppression	Suppression of interference pulses: Off, Weak, Medium, Strong
	Input Filter	Setting in seconds
Sensor Data → <i>Sensor Data</i> , p. 97	Measure in	Liquids, Gases
	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limit values for monitoring slope, zero point, Sensocheck impedance, response time, sensor operating time, TTM maintenance timer, DLI lifetime indicator, CIP/SIP counters, autoclaving counter, membrane body replacement, interior body replacement. Set whether to generate Failure or Maintenance Required messages if exceeded.
Cal Presettings	Presetting of the calibration mode and calibration timer. → <i>Calibration Presettings</i> , p. 100	
Pressure Correction	Manual input of pressure during measurement and calibration.	
	With TAN option FW-E051: automatic pressure correction by external pressure transmitter. → <i>Pressure Correction</i> , p. 100	
Salinity Correction	Salinity, Chlorinity, Conductivity → <i>Salinity Correction</i> , p. 101	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages</i> , p. 101	

More information on the use of ISM sensors → *Digital ISM Sensors (FW-E053)*, p. 216

## Selecting an Analog Oxygen Sensor

Parameter Setting ▶ Sensor Selection [I] [II] ▶ Sensor Selection [II]

Selection of an Ex oxygen sensor connected to the MK-OXY045X measuring module:

Module: MK-OXY

Mode: Analog

### Adjustable Parameters for Analog Oxygen Sensors Parameter Setting ▶ [II] Analog Oxy

Input Filter	Pulse Suppression	Suppression of interference pulses: Off, Weak, Medium, Strong
	Input Filter	Setting in seconds
Sensor Data → <i>Sensor Data, p. 97</i>	Measure in	Liquids, Gases
	Sensor Type	Standard or Other
	Temperature Detector	NTC 22kΩ, NTC 30kΩ
	Sensor Polarization	Automatic or individual If you select "Individual", separate values for polarization can be entered during measurement and calibration.
	Membrane Compensation	If "Other Sensor Type" is selected
	Sensoface	Enable/disable display of Sensoface messages and icons.
	Sensor Monitoring Details	Option to enter individual limits for monitoring zero point and slope. Disable Sensocheck sensor monitoring or select whether Sensocheck should generate Failure or Maintenance Required messages. Option to enter individual limits before a message for response time is triggered.
Cal Presettings	Presetting of the calibration mode and calibration timer. → <i>Calibration Presettings, p. 100</i>	
Pressure Correction	Manual input of pressure during measurement and calibration.	
	With TAN option FW-E051: automatic pressure correction by external pressure transmitter. → <i>Pressure Correction, p. 100</i>	
Salinity Correction	Salinity, Chlorinity, Conductivity → <i>Salinity Correction, p. 101</i>	
Messages	Enable/disable messages for the separate process variables, or specify individual limits. → <i>Messages, p. 101</i>	



### 6.13.1 Sensor Data

#### Display Example for an Analog Oxygen Sensor

01. Select whether to measure in liquids or gases.
02. If measuring in gases: Enter the relative humidity of the process medium.
03. If using an analog sensor: Select the sensor type and the used temperature probe.
04. If using an analog sensor: Select whether the polarization voltage should be selected automatically or individually during measurement and calibration.

**Note:** The preset polarization voltage of -675 mV is appropriate for most measurements.

Settings can be changed in the **Sensor Data** submenu:

Parameter Setting ▶ [I] [II] ... Oxy ▶ Sensor Data

#### Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I... ▶ Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: Sensoface, p. 62

Sensoface monitors the oxygen sensor for slope, zero point, response time, and sensor wear. Sensoface is displayed when Sensocheck has been enabled during parameter setting.

#### Enabling/Disabling Sensoface



Sensoface is enabled and disabled in the **Sensor Data** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Sensor Data

**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.

## Adjusting Sensor Monitoring

01. **Sensor Data** ▶ **Sensor Monitoring Details** .
02. Open a sensor parameter, e.g., **Slope** .
03. Set **Monitoring** of the slope to automatic or individual.
04. If you select "Individual": The nominal slope and the min/max limits can be entered.
05. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message, but the parameter is still shown in the Diagnostics menu and on the sensor diagram.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.
06. Set the sensor monitoring details for other sensor data, e.g., zero point, Sensocheck, response time, sensor wear, or sensor operating time.
07. Using the **left softkey: Back**, confirm the sensor monitoring settings and adjust further parameters.  
or  
Using the **right softkey: Back to Meas.**, confirm the sensor monitoring settings and end the function check (HOLD).

## CIP/SIP Counters

CIP/SIP counters are available for the following oxygen sensor types:


	Memosens Oxy	ISM Oxy <sup>1)</sup>
CIP counter		+
SIP counter	+	+

CIP/SIP cycles are used to clean or sterilize process-wetted parts in the process. Depending on the application, either one chemical (alkaline solution, water) or several chemicals (alkaline solution, water, acidic solution, water) are used.

- CIP temperature > 55 °C/131 °F
- SIP temperature > 115 °C/239 °F

The cleaning (cleaning in place) and sterilization (sterilization in place) cycles are counted to measure the load on the sensor, e.g., in biotechnology applications.

**Note:** If measurements are generally taken at high temperatures (> 55 °C/131 °F), the counters should be switched off.

When a CIP/SIP counter is switched on, a maximum number of cycles can be entered. As soon as the counter has reached the specified value, a Maintenance Required message is triggered and the NAMUR icon  is displayed; the measurement display is shown with blue backlighting (display color: NE107).



**Note:** A CIP or SIP cycle is only entered into the logbook 2 hours after the start to ensure that the cycle is complete.

**Note:** With Memosens sensors, an entry is also made in the sensor.

<sup>1)</sup> With TAN option FW-E053

## Adjusting CIP/SIP Counters

01. **Sensor Monitoring Details** ▶ **CIP Counter / SIP Counter**
02. **Monitoring** : Off or individual
03. If you select "Individual": Enter the maximum number of CIP/SIP cycles.
04. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

## Autoclaving Counter



An autoclaving counter is available for the following oxygen sensor types:

- ISM oxygen sensors (with TAN option FW-E053)

Autoclaving cycles are counted to help measure the load on the sensor.

## Adjusting the Autoclaving Counter

01. **Sensor Monitoring Details** ▶ **Autoclaving Counter**
02. **Monitoring** : Off or individual
03. If you select "Individual": Enter the maximum number of autoclaving cycles.
04. In the **Message** menu item, select whether and how an exceeded limit is to be displayed:
 

Off	No message.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If "Display Color NE107" is selected, the measurement display is shown with blue backlighting.

After each autoclaving process, the autoclaving counter must be manually incremented in the device's Maintenance menu:

**Maintenance** ▶ **[I][II] [Sensor]** ▶ **Autoclaving Counter**


### 6.13.2 Calibration Presettings

The calibration presettings can be defined in the parameter settings or adjusted directly in the Calibration menu prior to the calibration.

**Calibration Mode** : Presetting of calibration mode, e.g., in air, in water, data entry, product calibration, zero calibration, temperature


If you select "Product Calibration" mode, you must also select the measured value: Saturation %air, concentration (gas), partial pressure

**Calibration Timer** : When a preset calibration interval expires, the calibration timer generates a message text to indicate the need for calibration. If "Auto" is selected, the interval is set to 720 h. If "Individual" is selected, you can select a custom interval.

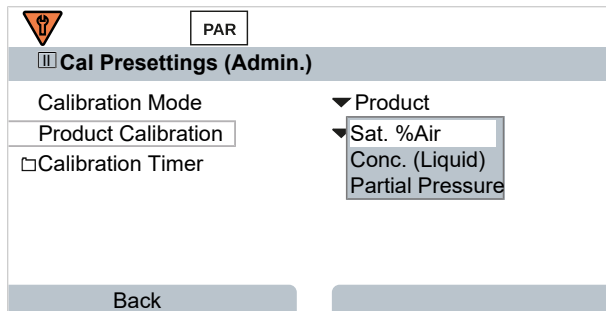

Settings can be changed in the **Cal Presettings** submenu:

Parameter Setting ▶ [I] [II] ... Oxy ▶ Cal Presettings

**Note:** If Sensoface is enabled, a neutral smiley is displayed once 80 % of the interval has expired. Once the entire interval has expired, a sad smiley is shown, a Maintenance Required message is generated, and the corresponding NAMUR icon  is displayed and the measurement display is shown with blue backlighting (display color: NE107). If the current outputs are configured accordingly, a 22-mA error signal is generated.

### 6.13.3 Pressure Correction

The pressure used for measurement or calibration can be manually specified (factory setting 1013 mbar).

With TAN option FW-E051, "Current Input", an external pressure transmitter can be connected to the current input (terminals 8 and 9). This enables automatic pressure correction. The start and end of the current input can be set in the ranges from 0/4 ... 20 mA.

Settings can be changed in the **Pressure Correction** submenu:

Parameter Setting ▶ [I] [II] ... Oxy ▶ Pressure Correction

#### Setting Automatic Pressure Correction (TAN Option FW-E051)

01. Open the **Ext. Pressure Transmitter** submenu.
02. Select "Absolute" or "Differential" pressure transmitter.
03. Select current input 0 ... 20 mA or 4 ... 20 mA.
04. Enter pressure values for current start and current end
05. Use the **left softkey: Back** to return to the **Pressure Correction** submenu.
06. Select an external or manual pressure correction in **Pressure during Meas.** and **Pressure during Cal.**

### 6.13.4 Salinity Correction

The solubility of oxygen in water depends on its salinity. The correction is made by either directly entering the salinity in g/kg, the chlorinity in g/kg, or the conductivity in  $\mu\text{S}/\text{cm}$ , and the temperature.

Settings can be changed in the **Salinity Correction** submenu:

Parameter Setting ▶ [I] [II] ... Oxy ▶ Salinity Correction

### 6.13.5 Messages

All values determined by the measuring module or sensor can generate messages.

Messages can be configured for the following process variables:

- Saturation %air
- Saturation %O<sub>2</sub>
- Concentration
- Partial pressure
- Temperature
- Process pressure

#### Configuring Messages

Process variable limits for the monitoring range can be selected in the **Messages** submenu:




Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The “failure” or “out of specification” icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the “Failure” and “Out of Specification” messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

#### Displaying Messages

01. Go to the Diagnostics menu if the “failure” , “maintenance required” , or “out of specification”  icons are flashing on the display: **Menu Selection ▶ Diagnostics ▶ Message List**

- ✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the **up/down arrow keys**.

The error message disappears from the display around 2 s after the error is cleared.

An overview of message texts with notes on troubleshooting can be found in the “Troubleshooting” chapter. → *Malfunction States*, p. 143

## 6.14 Flow

Stratos Multi can calculate flow for limit messages or to monitor an ion exchanger. A pulse generator is connected to control input OK1 for this purpose.

### Parameter Setting

Control input OK1 must first be assigned the "Flow" function.

01. System Control ▶ Function Control
02. Input OK1 : Select "Flow".
03. 2x *left softkey*: **Back**
04. Inputs/Outputs ▶ Control Inputs ▶ Flow
05. Enter the number of pulses per liter.
06. If required, enable monitoring of the minimum and maximum flow.

The flow measurement can process up to 100 pulses per second at the signal input of control input OK1.

---

### Flow Monitoring with a Connected External Flow Transmitter

---

Factory setting to generate a failure message

Minimum flow	5 liters/h
Maximum flow	25 liters/h

---

The flow messages can activate a relay contact and/or trigger a 22-mA message via a current output (user-defined).


## 6.15 HART Communication (TAN Option FW-E050)

**Note:** In order to use the TAN option FW-E050 HART with Stratos Multi, current output I1 must be set to 4 ... 20 mA. HART communication is not possible below 4 mA.

See also

→ *HART (FW-E050)*, p. 215

## 7 Calibration/Adjustment

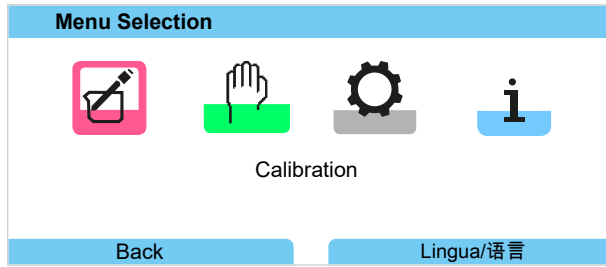

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

During calibration, Stratos Multi remains in calibration mode until stopped by personnel. When calibration mode is exited, a confirmation prompt is displayed to ensure that the system is ready for operation again.

### Adjustment


Adjustment involves the transfer of the calibration values obtained during calibration to Stratos Multi or the digital sensor. These calibration values are entered in the adjustment record of the Stratos Multi for the sensor, and directly in the sensor when using digital sensors:

Menu Selection ▶ Diagnostics ▶ I/II [Sensor] ▶ Cal/Adj Record [Process Variable]

**NOTICE!** Without adjustment, a measuring device will supply an imprecise or incorrect output value. For it to measure properly, Stratos Multi must be adjusted. When using analog sensors, adjustment is required following sensor replacement.

Adjustment may also be carried out later:

01. After completing calibration, press the **left softkey: Calibration**.  
 ✓ The “Calibration Was Successful” information window appears.
02. **Right softkey: Close**
03. Either: Exit the Calibration menu by pressing the **left softkey: Back** and then return to the menu
04. Or: Remain in the Calibration menu and activate calibration again.  
 ✓ A selection window appears.

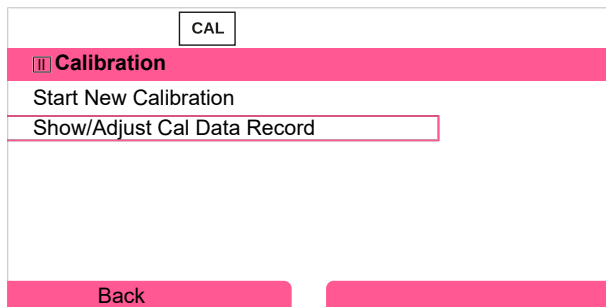

05. Select “Show/Adjust Cal Data Record”.  
 ✓ The calibration record is displayed.

### 06. Right softkey: Adjust

Assigning passcodes helps to ensure that only specialist personnel with access rights are allowed to carry out calibrations and adjustments.

The passcodes can be changed or disabled:

Parameter Setting ▶ System Control ▶ Passcode Entry → *Passcode Entry, p. 50*

## First Adjustment

**Note:** Function active for ISM pH/ORP sensors and amperometric ISM oxygen sensors.

When you open the Calibration menu, you can choose to save the current calibration as the first adjustment.

The adjustment record values are then shown as a reference in the [Statistics](#) Diagnostics menu.

→ *Statistics, p. 139*

## 7.1 Memosens Calibration/Adjustment

Menu Selection ▶ Calibration ▶ [I] [II] Memosens ...

**Note:** The calibration data is saved in the Memosens sensor. This means that Memosens sensors can be cleaned, reconditioned, calibrated, and adjusted away from the measurement location, e.g., in a laboratory. Sensors in the system are replaced on-site by adjusted sensors.

## 7.2 pH Process Variable Calibration/Adjustment

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

- Calibration: Detect deviations without readjustment of calibration data
- Adjustment: Detect deviations with readjustment of calibration data

**NOTICE!** When using analog sensors, adjustment is required following sensor replacement.

### pH Calibration/Adjustment Explanations

Each pH sensor has a separate zero point and a separate slope. Both values change as a result of aging and wear. The voltage supplied by the pH sensor is corrected by Stratos Multi for the zero point and the electrode slope of the pH sensor, and displayed as the pH value.

During calibration, the sensor's deviation is initially determined (zero point, slope). The sensor is immersed in buffer solutions with a precisely known pH value for this purpose. Stratos Multi measures the voltages of the sensors and the temperature of the buffer solution, using this information to calculate the sensor's zero point and slope.

### Calibration Values Determined During Calibration

Zero Point	The pH value at which the pH sensor supplies the voltage 0 mV. The zero point is different for each sensor and changes with age and wear.
Slope	The slope of a sensor is the voltage change per pH unit. With an ideal sensor, it is -59.2 mV/pH.
Temperature	The temperature of the process solution must be logged, since the pH measurement is temperature-dependent. Many sensors feature an integrated temperature detector.

There are limits that are calculated during calibration when monitoring glass and reference impedances. The following limits apply to standard glass electrodes:

- Temperature range: 0 ... 80 °C/32 ... 176 °F
- Impedance range: 50 ... 250 MΩ (at 25 °C/77 °F)



### 7.2.1 Calibration Methods


#### One-point calibration

The sensor is calibrated with just one buffer solution. A one-point calibration is useful and permissible if the measured values are close to the sensor zero point, such that the change in sensor slope is of negligible significance. The sensor's zero point is subsequently adjusted, while the slope remains unchanged.

#### Two-point calibration

The sensor is calibrated with two buffer solutions. This makes it possible to calculate the sensor's zero point and slope. The sensor's zero point and slope are subsequently adjusted. A two-point calibration is required in the following cases, for example:

- The sensor has been replaced
- The pH measured value covers a large range
- The pH measured value is far from the sensor zero point
- The pH value needs to be determined with high precision
- The sensor is subject to heavy wear

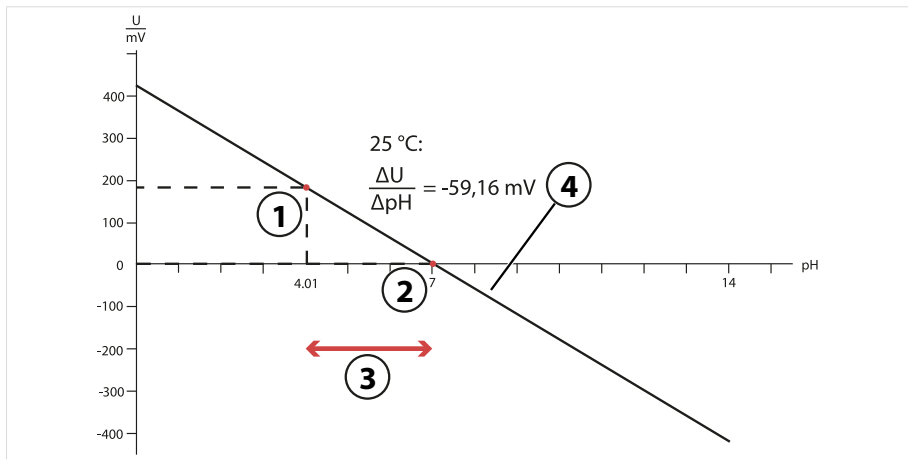


1 First point of first buffer solution	3 Recommended measuring range
2 Second point of second buffer solution	4 Result of ideal calibration at 25 °C/77 °F

#### Three-point calibration

The sensor is calibrated with three buffer solutions.

The zero point and slope are calculated using a line of best fit in accordance with DIN 19268. The sensor's zero point and slope are subsequently adjusted.

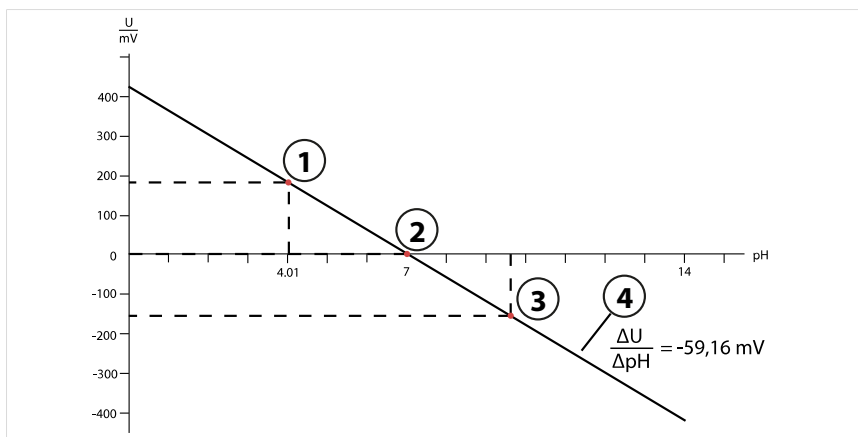

1 First point of first buffer solution	3 Third point of third buffer solution
2 Second point of second buffer solution	4 Rise

## 7.2.2 Temperature Compensation during Calibration

### Temperature Compensation during Calibration

The pH sensor's slope is temperature-dependent. The measured voltage must therefore be corrected by the temperature influence.

The buffer solution's pH value is temperature-dependent. During calibration, the temperature of the buffer solution must therefore be known so that the actual pH value can be obtained from the buffer table.

### Automatic Temperature Compensation

Stratos Multi measures the temperature of the buffer solution using the temperature detector integrated in the pH sensor.

If the sensor does not have an integrated temperature detector:

- Connect an external temperature probe and select it in the Parameter Setting menu.  
→ *Channel II Wiring Examples, p. 178*
- Set the manual temperature for calibration.

Settings can be changed in the **Temperature Detection** submenu:

Menu Selection ▶ Parameter Setting ▶ [II] Analog ... ▶ Sensor Data ▶ Temperature Detection

→ *Sensor Data, p. 69*

## 7.2.3 Calibration/Adjustment Methods

- Calimatic: Automatic buffer recognition
- Manual: Manual entry of buffer values
- Product: Calibration by sampling
- Data entry: Data entry of premeasured sensors
- Temperature: Temperature probe adjustment

## 7.2.4 Calibration Mode: Calimatic

### Calibration with Automatic Buffer Recognition

During automatic calibration with Knick Calimatic, the sensor is immersed in one, two, or three buffer solutions. On the basis of the sensor voltage and the measured temperature, Stratos Multi automatically detects the nominal buffer value. The buffer solutions can be used in any order, but they must be part of the buffer set defined during parameter setting. Calimatic accounts for the temperature dependence of the buffer value. All calibration data is converted to a reference temperature of 25 °C/77 °F.

### Calibration Procedure

**NOTICE!** Incorrect calibration results in incorrect output values. Use only new, undiluted buffer solutions that are part of the configured buffer set.

Calibration ▶ [I] [II] ... pH

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Calimatic" **Calibration Mode** and press **enter** to confirm.  
✓ Number of calibrations points and buffer set configured as in **Cal Presettings**.  
→ *Calibration Presettings, p. 72*
02. If required, change the number of calibration points and the buffer set.
03. Take the sensor out of the medium and rinse it in deionized water.

**⚠ CAUTION! Risk of electrostatic discharge.** Do not wipe the sensor or dab it dry.

04. Immerse the sensor in the first buffer solution.

05. Start calibration with the **right softkey: Next**.

✓ Calibration with first buffer is carried out.

The following parameters are displayed: Sensor Voltage, Calibration Temperature, Nominal Buffer Value, and Response Time.

The time for the measuring voltage to stabilize can be shortened with the **left softkey: Exit** (without drift check: reduced accuracy of calibration values). The response time indicates how long the sensor needs until the measuring voltage is stable. If the sensor voltage or the measured temperature fluctuate considerably, the calibration procedure is aborted after around 2 minutes. In this case, calibration needs to be restarted. Return the sensor to the process once this has been successfully completed. Make sure that the temperature of the sensor and the temperature of the buffer solution are not too far apart. The ideal temperature is 25 °C/77 °F.

06. For one-point calibration: Exit calibration by pressing the **softkey**.

07. For two-point calibration: Rinse the sensor well with deionized water.

08. Immerse the sensor in the second buffer solution.

09. Start calibration with the **right softkey: Next**.


✓ Calibration with second buffer is carried out.

10. Proceed as for one-point calibration.

11. For three-point calibration, the process uses the third buffer accordingly.

**Result**

✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

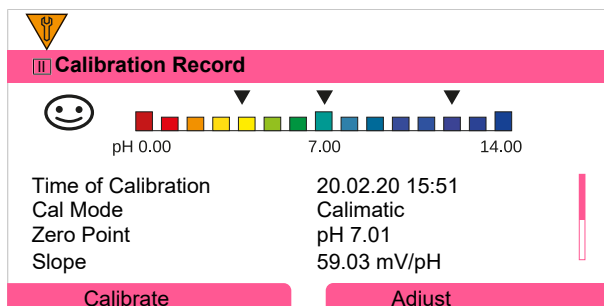

## 7.2.5 Calibration Mode: Manual

During calibration with manual entry of buffer values, the sensor is immersed in one, two, or three buffer solutions. Stratos Multi displays the measured temperature. The temperature-corrected buffer values must then be manually entered. For this purpose, take the buffer value that goes with the displayed temperature from the buffer table (e.g., on the bottle). Intermediate values must be interpolated. All calibration data is converted to a reference temperature of 25 °C/77 °F.

### Calibration Procedure

**NOTICE!** Incorrect calibration results in incorrect output values. Use only new, undiluted buffer solutions that are part of the configured buffer set.

Calibration ▶ [I] [II] ... pH

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Manual" **Calibration Mode** and press **enter** to confirm.
  - ✓ Number of calibration points configured as in **Cal Presettings**. → *Calibration Presettings, p. 72*
02. If required, change the number of calibration points.
03. Enter the first buffer value.
04. Continue with the **right softkey: Next**.
05. Take the sensor out of the medium and rinse it well in deionized water.

**▲ CAUTION! Risk of electrostatic discharge.** Do not wipe the sensor or dab it dry.

06. Immerse the sensor in the first buffer solution.
07. Start calibration with the **right softkey: Next**.
  - ✓ Calibration with first buffer is carried out.  
The following parameters are displayed: Sensor Voltage, Calibration Temperature, Nominal Buffer Value, and Response Time.

The time for the measuring voltage to stabilize can be shortened with the **left softkey: Exit** (without drift check: reduced accuracy of calibration values). The response time indicates how long the sensor needs until the measuring voltage is stable. If the sensor voltage or the measured temperature fluctuate considerably, the calibration procedure is aborted after around 2 minutes. In this case, calibration needs to be restarted. Return the sensor to the process once this has been successfully completed. Make sure that the temperature of the sensor and the temperature of the buffer solution are not too far apart. The ideal temperature is 25 °C/77 °F.

08. For one-point calibration: Exit calibration by pressing the **softkey**.
09. For two-point calibration: Rinse the sensor well with deionized water.
10. Immerse the sensor in the second buffer solution.
11. Enter the second temperature-corrected buffer value.
12. Start calibration with the **right softkey: Next**.
  - ✓ Calibration with second buffer is carried out.
13. Proceed as for one-point calibration.
14. For three-point calibration, the process uses the third buffer accordingly.

### Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.2.6 Calibration Mode: Product

### Calibration by Sampling

If the sensor cannot be removed – e.g., for sterility reasons – its zero point can be calibrated by “sampling”. The currently measured value of the process is saved in the device for this purpose. A sample is taken directly afterward at the measuring point. The sample’s pH value is measured in the laboratory. The reference value is entered in the device. Stratos Multi calculates the sensor’s zero point from the difference between the measured and reference values. The slope is not changed in the process.

### Calibration Procedure


**NOTICE!** The sample’s pH value is temperature-dependent. The reference measurement should be carried out at the sample temperature shown on the display. The sample should be transported in a vacuum flask. The sample’s pH value may also be falsified if volatile substances escape.

Calibration ▶ [I] [II] ... pH

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select “Product” **Calibration Mode** and press **enter** to confirm.
02. Prepare for sampling.
03. Start with the **right softkey: Next**.

Product calibration is performed in 2 steps.

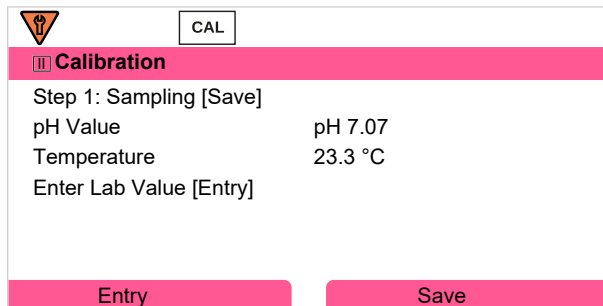


Step 1:

04. Take sample.
  - ✓ The measured value and temperature at the time of sampling are displayed.
05. Save with the **right softkey: Save**.
  - ✓ An information window is shown.
06. **Right softkey: Close**
07. As required, exit calibration by pressing the **left softkey: Back**.

**Note:** The icon  indicates that product calibration has not yet been completed.

Step 2: Lab value has been measured.

08. Open the Product Calibration menu again.

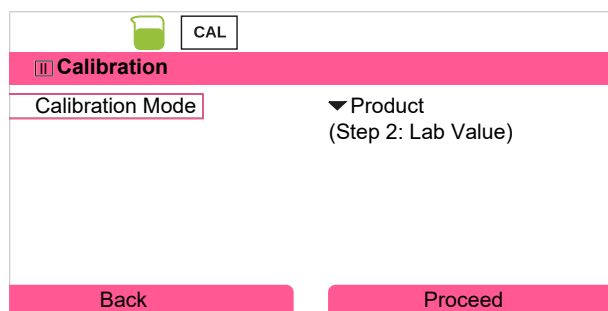

09. **Right softkey: Proceed**

10. Enter the lab value and press **enter** to confirm.

11. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

Exception: Sample value can be determined and entered on site:

12. Take sample.

- ✓ The measured value and temperature at the time of sampling are displayed.

13. **Left softkey: Entry**

14. Enter the lab value and press **enter** to confirm.

15. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

### 7.2.7 Calibration Mode: Data Entry

Calibration by entering the calibration values for the zero point and the slope of a premeasured sensor.

#### Calibration Procedure

Calibration ▶ [I] [II] ... pH

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Data Entry" **Calibration Mode** and press **enter** to confirm.

02. Remove the sensor and install the premeasured sensor.

03. Continue with the **right softkey: Next**.

04. Enter the zero point and slope measured values.

05. With TAN option FW-E017 and when using a Pfaudler pH sensor, you can also enter the  $\text{pH}_{\text{is}}$  value for the isothermal intersection point. → *Pfaudler Sensors (FW-E017), p. 209*

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.2.8 Calibration Mode: ISFET Zero Point

### Setting the ISFET Operating Point

When using Memosens ISFET sensors for pH measurement, the individual operating point of the sensor first needs to be determined, and should be in the pH 6.5...pH 7.5 range. The sensor is immersed in a buffer solution with a pH value of 7.00 for this purpose.

### Calibration Procedure

Calibration ▶ [I] [II] ... pH-ISFET

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select the "ISFET Zero" Calibration Mode for setting the operating point for the first sensor calibration and press **enter** to confirm.
02. Press the **right softkey: Next**.
03. Adjust the buffer value if necessary: Default pH 7.00
04. Take the sensor out of the medium and rinse it well in deionized water.

**▲ CAUTION! Risk of electrostatic discharge.** Do not wipe the sensor or dab it dry.

05. Immerse the sensor in buffer solution.
06. Start calibration with the **right softkey: Next**.
  - ✓ The ISFET operating point is calculated.
07. Finally, confirm the ISFET operating point with the **right softkey: Adjust**.

A pH calibration, e.g., Calimatic 2-point calibration, can be performed afterward.

**Note:** The operating point only needs to be determined once for each ISFET sensor.

## 7.2.9 Calibration Mode: Temperature

### Adjustment of the Temperature Probe

This function is used to adjust the individual temperature probe tolerances or cable lengths for the purpose of increasing the accuracy of the temperature measurement.

The adjustment requires an accurate measurement of the process temperature using a calibrated reference thermometer. The measurement error of the reference thermometer should be less than 0.1 K. Adjustment without an accurate measurement may result in falsification of the displayed measured value.

When using Memosens sensors, the adjustment value is saved in the sensor.

### Calibration Procedure

Calibration ▶ [I] [II] [Sensor]

01. Select "Temperature" Calibration Mode and press **enter** to confirm.
02. Enter the measured process temperature and press **enter** to confirm.
  - ✓ The temperature offset is displayed.
03. Adjust the temperature probe with the **right softkey: Save**.

The current adjustment and temperature offset data can be displayed in the Diagnostics menu:

Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log

### 7.3 ORP Process Variable Calibration/Adjustment

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

- Calibration: Detect deviations without readjustment of calibration data
- Adjustment: Detect deviations with readjustment of calibration data

**NOTICE!** When using analog sensors, adjustment is required following sensor replacement.

#### Calibration/Adjustment Methods

- ORP data entry
- ORP adjustment
- ORP check
- Temperature probe adjustment

#### 7.3.1 Calibration Mode: ORP Data Entry

Calibration by entering the ORP offset of a premeasured sensor.

##### Calibration Procedure

Calibration ▶ [I] [III] [ORP Sensor]

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "ORP Data Entry" Calibration Mode and press **enter** to confirm.
02. Remove the sensor and install the premeasured sensor.
03. Continue with the **right softkey: Next**.
04. Enter the ORP offset value.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

#### 7.3.2 Calibration Mode: ORP Adjustment

The sensor is immersed in an ORP buffer solution for ORP adjustment. Stratos Multi displays the measured temperature and the ORP. The temperature-corrected buffer values must then be manually entered. For this purpose, take the buffer value that goes with the displayed temperature from the buffer table (e.g., on the bottle). Intermediate values must be interpolated. All calibration data is converted to a reference temperature of 25 °C/77 °F.

##### Calibration Procedure

Calibration ▶ [I] [III] [ORP Sensor]

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "ORP Adjustment" Calibration Mode and press **enter** to confirm.
02. Continue with the **right softkey: Next**.
03. Take the sensor out of the medium and rinse it well in deionized water.

**⚠ CAUTION! Risk of electrostatic discharge.** Do not wipe the sensor or dab it dry.

04. Immerse the sensor in the ORP buffer solution and wait for the ORP measured value to stabilize.




05. Start calibration with the **right softkey: Next**.

- ✓ When the drift check is complete, the measured temperature and ORP are displayed.

The time for the measuring voltage to stabilize can be shortened with the **left softkey: Exit** (without drift check: reduced accuracy of calibration values). The response time indicates how long the sensor needs until the measuring voltage is stable. If the sensor voltage or the measured temperature fluctuate considerably, the calibration procedure is aborted after around 2 minutes. In this case, calibration needs to be restarted. Return the sensor to the process once this has been successfully completed. Make sure that the temperature of the sensor and the temperature of the buffer solution are not too far apart. The ideal temperature is 25 °C/77 °F.

06. Enter the ORP setpoint (printed on bottle) of the buffer solution in the

Calibration Mode ▶ ORP Adjustment ▶ Redox Buffer submenu and press **enter** to confirm.

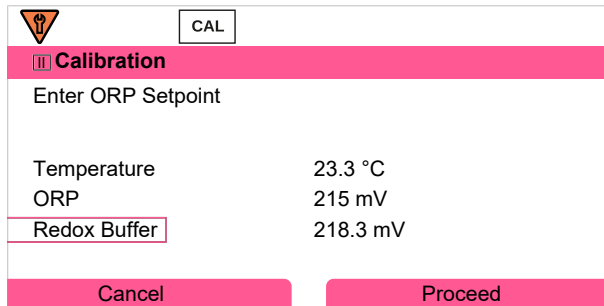

07. Exit calibration with the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

### 7.3.3 Calibration Mode: ORP Check

The sensor is immersed in a solution with a known ORP value for the ORP check. The test period and the permissible test difference are specified during parameter setting:

Parameter Setting ▶ [I] [II] [ORP Sensor] ▶ Cal Presettings

#### Calibration Procedure

Calibration ▶ [I] [II] [ORP Sensor]

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select “ORP Check” Calibration Mode and press **enter** to confirm.

02. Take the sensor out of the medium and rinse it well in deionized water.

**▲ CAUTION! Risk of electrostatic discharge.** Do not wipe the sensor or dab it dry.

03. Immerse the sensor in the ORP solution and wait for the ORP measured value to stabilize.

04. Start ORP check with the **right softkey: Next**.

- ✓ When the drift check is complete, the measured temperature and ORP are displayed.
- ✓ If the specified test difference was not exceeded, the message “ORP Check Successful” appears. If the specified test difference was exceeded, the message “ORP Check Unsuccessful” appears.

05. ORP adjustment should be carried out in the event of an unsuccessful ORP check.

### 7.3.4 Calibration Mode: Temperature

#### Adjustment of the Temperature Probe

This function is used to adjust the individual temperature probe tolerances or cable lengths for the purpose of increasing the accuracy of the temperature measurement.

The adjustment requires an accurate measurement of the process temperature using a calibrated reference thermometer. The measurement error of the reference thermometer should be less than 0.1 K. Adjustment without an accurate measurement may result in falsification of the displayed measured value.

When using Memosens sensors, the adjustment value is saved in the sensor.

#### Calibration Procedure

Calibration ▶ [I] [II] [Sensor]

01. Select "Temperature" Calibration Mode and press **enter** to confirm.
02. Enter the measured process temperature and press **enter** to confirm.  
✓ The temperature offset is displayed.
03. Adjust the temperature probe with the **right softkey: Save**.

The current adjustment and temperature offset data can be displayed in the Diagnostics menu:

Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log

## 7.4 Conductivity (Contacting) Process Variable Calibration/Adjustment

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

- Calibration: Detect deviations without readjustment of calibration data
- Adjustment: Detect deviations with readjustment of calibration data

**NOTICE!** When using analog sensors, adjustment is required following sensor replacement.

### Explanations Regarding Calibration/Adjustment with 2-/4-Electrode Sensors

Each conductivity sensor has an individual cell constant. Depending on the sensor design, the cell constant may vary over a wide range. Because the conductivity value is calculated from the measured conductance and the cell constant, the device must know the cell constant. During calibration or sensor adjustment, either the known (printed) cell constant of the used conductivity sensor is entered in the device, or it is determined automatically by measuring a calibration solution with known conductivity.

### Notes on Calibration

- Use only fresh calibration solutions.
- The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell constant, wait for temperature equalization of the temperature probe and calibration solution before calibration.

Since the cell constant is subject to production-related fluctuations, it is recommended that the removed sensor be calibrated with a calibration solution (e.g., saturated NaCl). The cell constants of the sensors are dependent on the installation geometry – especially in the case of fringe-field sensors:

- If the sensor is installed in a free space (minimum distances exceeded), the cell constant specified in the specifications can be entered directly.  
"Data Entry" Calibration Mode . → *Calibration Mode: Data Entry, p. 120*
- If the installation space is tight (minimum distances are not reached), the sensor must be adjusted in its installed state, as the resulting cell constant has changed.  
"Product" Calibration Mode . → *Calibration Mode: Product, p. 118*

### 7.4.1 Temperature Compensation during Calibration

The conductivity value of the calibration solution is temperature-dependent. During calibration, the temperature of the calibration solution must therefore be known so that the actual value can be obtained from the conductivity table.

#### Automatic Temperature Compensation

During automatic logging of the calibration temperature, Stratos Multi measures the temperature of the calibration solution using the temperature detector integrated in the Memosens sensor.

If the sensor does not have an integrated temperature detector:

- Connect an external temperature probe and select it in the Parameter Setting menu.  
→ *Channel II Wiring Examples, p. 178*
- Set the manual temperature for calibration.

Settings can be changed in the **Temperature Detection** submenu:

Menu Selection ▶ Parameter Setting ▶ [II] Analog ... ▶ Sensor Data ▶ Temperature Detection

## 7.4.2 Calibration/Adjustment Methods

- Automatic calibration: Automatic with standard calibration solution
- Manual: Manual entry of a calibration solution
- Product: Product calibration (calibration with sampling)
- Data entry: Data entry of premeasured sensors
- Temperature: Temperature probe adjustment

## 7.4.3 Calibration Mode: Automatic

### Automatic Calibration with Standard Calibration Solution

During automatic calibration, the conductivity sensor is immersed in a standard calibration solution (NaCl or KCl, set during parameter setting in the **Cal Presettings** submenu). On the basis of the measured conductance and temperature, Stratos Multi automatically calculates the cell constant. The temperature dependence of the calibration solution is accounted for.

### Notes on Calibration

- Use only fresh calibration solutions. The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell constant, wait for temperature equalization of the temperature probe and calibration solution before calibration.
- If the measured conductance or temperature fluctuate greatly, the calibration procedure is aborted after approx. 2 min. Repeat calibration if an error message appears.

### Calibration Procedure

Calibration ▶ [I] [II] ... Cond

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Automatic" **Calibration Mode** and press **enter** to confirm.
  - ✓ Display of calibration solution as configured in **Cal Presettings**.
02. Change the calibration solution, if required.
03. Take the sensor out of the medium and rinse it well in deionized water.
04. Immerse the sensor in the calibration solution.
05. Start calibration with the **right softkey: Next**.
  - ✓ Calibration is performed.  
The following parameters are displayed: Calibration temperature, solution table value (conductivity depending on calibration temperature), and response time.

### Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.4.4 Calibration Mode: Manual

### Manual Calibration Specifying a Calibration Solution

During calibration with manual entry of the conductivity value of the calibration solution, the sensor is immersed in a calibration solution. Stratos Multi calculates a conductivity/calibration temperature pair value. The temperature-corrected conductivity value of the calibration solution must then be entered. For this purpose, take the conductivity value that goes with the displayed temperature from the calibration solution TC table. Conductivity intermediate values must be interpolated.

Stratos Multi automatically calculates the cell constant.

### Notes on Calibration

- Use only fresh calibration solutions. The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell constant, wait for temperature equalization of the temperature probe and calibration solution before calibration.
- If the measured conductance or temperature fluctuate greatly, the calibration procedure is aborted after approx. 2 min. Repeat calibration if an error message appears.

### Calibration Procedure

Calibration ▶ [I] [II] ... Cond

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Manual" **Calibration Mode** and press **enter** to confirm.
02. Take the sensor out of the medium, rinse it well in deionized water, and dry it.
03. Immerse the sensor in the calibration solution.
04. Start calibration with the **right softkey: Next**.
  - ✓ Calibration is performed.
  - The following parameters are displayed: Calibration temperature and response time.
05. Enter conductivity.
06. Continue with the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.4.5 Calibration Mode: Product

### Calibration by Sampling

If the sensor cannot be removed – e.g., for sterility reasons – its cell constant can be determined by “sampling”. The currently measured value (conductivity or concentration <sup>1)</sup>) of the process from Stratos Multi is stored for this purpose. Right after this, take a sample from the process. The value of this sample is measured under process conditions (same temperature!) wherever possible. The calculated value is entered in the measuring system. Stratos Multi calculates the conductivity sensor’s cell constant from the deviation between the process measured value and the sample value.

### Product Calibration without TC Compensation (With Conductivity)

A sample is taken from the process. The sample’s measured value is determined in the laboratory at the temperature at which the sample was taken (“Sample Temperature”, see display). It may be necessary to thermostat the sample in the laboratory accordingly. Temperature compensation of the reference measuring devices must be disabled (TC = 0 %/K).

### Product Calibration with TC Compensation $T_{ref} = 25\text{ °C}/77\text{ °F}$ (With Conductivity)

A sample is taken from the process. During measurement in the laboratory (TC linear), the same values for reference temperature and temperature coefficient must be set in both the reference measuring device and Stratos Multi. In addition, the measuring temperature should match the sample temperature (see display) as closely as possible. The sample should be transported in a vacuum flask (Dewar) to ensure this.

**NOTICE!** Product calibration is only possible if the process medium is stable (no chemical reactions that affect conductivity). At higher temperatures, evaporation may falsify results.

### Calibration Procedure

Calibration ▶ [I] [II] ... Cond

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select “Product” Calibration Mode and press **enter** to confirm.
02. Prepare for sampling.
03. Start with the **right softkey: Next**.

Product calibration is performed in 2 steps.

Step 1:

04. Take sample.
  - ✓ The measured value and temperature at the time of sampling are displayed.
05. Save with the **right softkey: Save**.
  - ✓ An information window is shown.
06. **Right softkey: Close**


<sup>1)</sup> First enable TAN option FW-E009. → *Concentration Determination (FW-E009)*, p. 204

07. As required, exit calibration by pressing the **left softkey: Back**.

**Note:** The icon  indicates that product calibration has not yet been completed.

Step 2: Lab value has been measured.

08. Open the Product Calibration menu again.

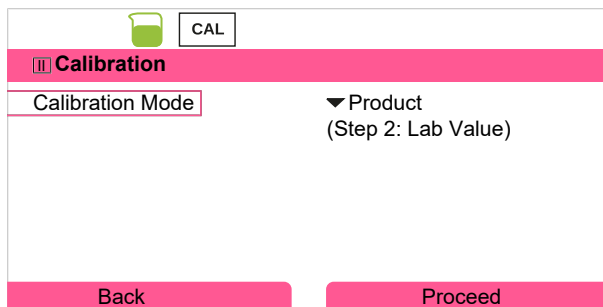

09. **Right softkey: Proceed**

10. Enter the lab value and press **enter** to confirm.

11. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

Exception: Sample value can be determined and entered on site:

12. Take sample.

- ✓ The measured value and temperature at the time of sampling are displayed.

13. **Left softkey: Entry**

14. Enter the lab value and press **enter** to confirm.

15. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

### 7.4.6 Calibration Mode: Data Entry

Entry of values for the cell constant of a sensor, related to 25 °C/77 °F.

#### Calibration Procedure

Calibration ▶ [I] [II] ... Cond

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Data Entry" Calibration Mode and press **enter** to confirm.
02. Remove the sensor and install the premeasured sensor.
03. Continue with the **right softkey: Next**.
04. Enter the cell constant of the premeasured sensor.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

### 7.4.7 Calibration Mode: Temperature

#### Adjustment of the Temperature Probe

This function is used to adjust the individual temperature probe tolerances or cable lengths for the purpose of increasing the accuracy of the temperature measurement.

The adjustment requires an accurate measurement of the process temperature using a calibrated reference thermometer. The measurement error of the reference thermometer should be less than 0.1 K. Adjustment without an accurate measurement may result in falsification of the displayed measured value.

When using Memosens sensors, the adjustment value is saved in the sensor.

#### Calibration Procedure

Calibration ▶ [I] [II] [Sensor]

01. Select "Temperature" Calibration Mode and press **enter** to confirm.
02. Enter the measured process temperature and press **enter** to confirm.
  - ✓ The temperature offset is displayed.
03. Adjust the temperature probe with the **right softkey: Save**.

The current adjustment and temperature offset data can be displayed in the Diagnostics menu:

Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log



## 7.5 Conductivity (Inductive) Process Variable Calibration/Adjustment

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

- Calibration: Detect deviations without readjustment of calibration data
- Adjustment: Detect deviations with readjustment of calibration data

**NOTICE!** When using analog sensors, adjustment is required following sensor replacement.

### Explanations Regarding Calibration/Adjustment with Toroidal Sensors

Each inductive (toroidal) conductivity sensor has an individual cell factor. The cell factor may vary depending on the sensor design. Because the conductivity value is calculated from the measured conductance and the cell factor, the measuring system must know the cell factor. During calibration or sensor adjustment, either the known (printed) cell factor of the used toroidal conductivity sensor is entered in the measuring system, or it is determined automatically by measuring a calibration solution with known conductivity.

### Notes on Calibration

- Use only fresh calibration solutions.
- The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell factor, wait for temperature equalization of the temperature probe and calibration solution before calibration.

Since the cell factor is subject to production-related fluctuations, it is recommended that the removed sensor be calibrated with a calibration solution (e.g., saturated NaCl).

- If the installation space is tight (minimum distances are not reached), the sensor must be adjusted in its installed state, as the resulting cell factor has changed.

**Calibration mode:** "Product Calibration".

### 7.5.1 Temperature Compensation during Calibration

The conductivity value of the calibration solution is temperature-dependent. During calibration, the temperature of the calibration solution must therefore be known so that the actual value can be obtained from the conductivity table.

#### Automatic Temperature Compensation

During automatic logging of the calibration temperature, Stratos Multi measures the temperature of the calibration solution using the temperature detector integrated in the Memosens sensor.

If the sensor does not have an integrated temperature detector:

- Connect an external temperature probe and select it in the Parameter Setting menu.  
→ *Channel II Wiring Examples, p. 178*
- Set the manual temperature for calibration.

Settings can be changed in the **Temperature Detection** submenu:

Menu Selection ▶ Parameter Setting ▶ [II] Analog ... ▶ Sensor Data ▶ Temperature Detection

### 7.5.2 Calibration/Adjustment Methods

- Automatic: Automatic with standard calibration solution
- Manual: Manual entry of a calibration solution
- Product: Product calibration (calibration with sampling)
- Zero point: Zero point correction
- Installation factor: Entry of an installation factor (with Memosens sensors)
- Data entry: Data entry of premeasured sensors
- Temperature: Temperature probe adjustment

### 7.5.3 Calibration Mode: Automatic

#### Automatic Calibration with Standard Calibration Solution

During automatic calibration, the conductivity sensor is immersed in a standard calibration solution (NaCl or KCl, set during parameter setting). On the basis of the measured conductance and temperature, Stratos Multi automatically calculates the cell factor. The temperature dependence of the calibration solution is accounted for.

#### Notes on Calibration

- Use only fresh calibration solutions. The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell factor, wait for temperature equalization of the temperature probe and calibration solution before calibration.
- If the measured conductance or temperature fluctuate greatly, the calibration procedure is aborted after approx. 2 min. Repeat calibration if an error message appears.

#### Calibration Procedure

Calibration ▶ [I] [II] ... Condl

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Automatic" **Calibration Mode** and press **enter** to confirm.
  - ✓ Display of calibration solution as configured in **Cal Presettings**.
02. Change the calibration solution, if required.
03. Take the sensor out of the medium, rinse it well in deionized water, and dry it.
04. Immerse the sensor in the calibration solution.
05. Start calibration with the **right softkey: Next**.
  - ✓ Calibration is performed.  
The following parameters are displayed: Calibration temperature, solution table value (conductivity depending on calibration temperature), and response time.

#### Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.5.4 Calibration Mode: Manual

### Manual Calibration Specifying a Calibration Solution

During calibration with manual entry of the conductivity value of the calibration solution, the sensor is immersed in a calibration solution. Stratos Multi calculates a conductivity/calibration temperature pair value. The temperature-corrected conductivity value of the calibration solution must then be entered. For this purpose, take the conductivity value that goes with the displayed temperature from the calibration solution TC table. Conductivity intermediate values must be interpolated.

Stratos Multi automatically calculates the cell factor.

### Notes on Calibration

- Use only fresh calibration solutions. The used calibration solution must be configured.
- The accuracy of the calibration is crucially dependent on a precise acquisition of the calibration solution temperature. On the basis of the measured or entered temperature, Stratos Multi calculates the setpoint of the calibration solution from a stored table.
- Note the response time of the temperature probe.
- To determine the exact cell factor, wait for temperature equalization of the temperature probe and calibration solution before calibration.
- If the measured conductance or temperature fluctuate greatly, the calibration procedure is aborted after approx. 2 min. Repeat calibration if an error message appears.

### Calibration Procedure

Calibration ▶ [I] [II] ... Condi

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Manual" **Calibration Mode** and press **enter** to confirm.
02. Take the sensor out of the medium and rinse it well in deionized water.
03. Immerse the sensor in the calibration solution.
04. Start calibration with the **right softkey: Next**.
  - ✓ Calibration is performed.
  - The following parameters are displayed: Calibration temperature and response time.
05. Enter conductivity.
06. Continue with the **right softkey: Next**.

#### Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.5.5 Calibration Mode: Product

### Calibration by Sampling

If the sensor cannot be removed – e.g., for sterility reasons – its cell factor can be determined by “sampling”. The currently measured value (conductivity or concentration <sup>1)</sup>) of the process from Stratos Multi is stored for this purpose. Right after this, take a sample from the process. The value of this sample is measured under process conditions (same temperature!) wherever possible. The calculated value is entered in the measuring system. Stratos Multi calculates the conductivity sensor’s cell factor from the deviation between the process measured value and the sample value.

### Product Calibration without TC Compensation (With Conductivity)

A sample is taken from the process. The sample’s measured value is determined in the laboratory at the temperature at which the sample was taken (“Sample Temperature”, see display). It may be necessary to thermostat the sample in the laboratory accordingly. Temperature compensation of the reference measuring devices must be disabled (TC = 0 %/K).

### Product Calibration with TC Compensation $T_{ref} = 25\text{ °C}/77\text{ °F}$ (With Conductivity)

A sample is taken from the process. During measurement in the laboratory (TC linear), the same values for reference temperature and temperature coefficient must be set in both the reference measuring device and Stratos Multi. In addition, the measuring temperature should match the sample temperature (see display) as closely as possible. The sample should be transported in a vacuum flask (Dewar) to ensure this.

**NOTICE!** Product calibration is only possible if the process medium is stable (no chemical reactions that affect conductivity). At higher temperatures, evaporation may falsify results.

### Calibration Procedure

Calibration ▶ [I] [II] ... Condi

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select “Product” Calibration Mode and press **enter** to confirm.
02. Prepare for sampling.
03. Start with the **right softkey: Next**.

Product calibration is performed in 2 steps.

Step 1:


04. Take sample.
  - ✓ The measured value and temperature at the time of sampling are displayed.
05. Save with the **right softkey: Save**.
  - ✓ An information window is shown.
06. **Right softkey: Close**
07. As required, exit calibration by pressing the **left softkey: Back**.

<sup>1)</sup> First enable TAN option FW-E009. → *Concentration Determination (FW-E009)*, p. 204

**Note:** The icon  indicates that product calibration has not yet been completed.

Step 2: Lab value has been measured.

08. Open the Product Calibration menu again.

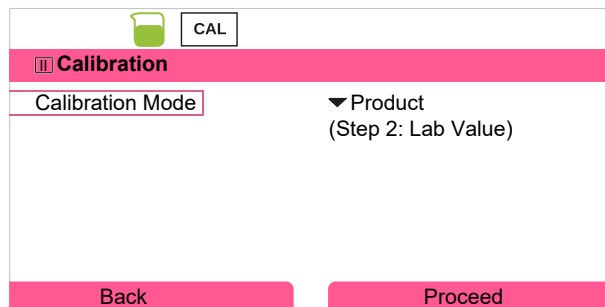

09. **Right softkey: Proceed**

10. Enter the lab value and press **enter** to confirm.

11. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

Exception: Sample value can be determined and entered on site:

12. Take sample.

- ✓ The measured value and temperature at the time of sampling are displayed.

13. **Left softkey: Entry**

14. Enter the lab value and press **enter** to confirm.

15. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.5.6 Calibration Mode: Zero Point

### Calibration Procedure

Calibration ▶ [I] [II] ... Condi

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Zero Point" **Calibration Mode** and press **enter** to confirm.

02. Take the sensor out of the medium, rinse it in deionized water, and dry it. The sensor should be dry, since zero calibration is performed in air.

03. Press the **right softkey: Next**.

- ✓ Zero correction is carried out. The permissible zero offset is dependent on the sensor type.

04. Press the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

**Valid for toroidal conductivity with Memosens sensors:**

The calibration values are displayed following successful zero calibration.

05. Press the **right softkey: Next**.

✓ The message "Adjustment Successful" is shown.

**7.5.7 Calibration Mode: Installation Factor**

When using a Memosens sensor in a tight space, the installation factor is entered.

**Calibration Procedure**

Calibration ▶ [I] [II] ... Condl

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Install. Factor" Calibration Mode and press **enter** to confirm.

02. Enter the installation factor.

03. Continue with the **right softkey: Save**.

✓ The message "Adjustment Successful" is shown.

**7.5.8 Calibration Mode: Data Entry**

Entry of values for the cell factor and zero point of a sensor, related to 25 °C/77 °F.

If concentration measurement is activated (TAN option FW-E009), the concentration is also shown in this menu and directly adjusted with the cell factor. This makes direct calibration to the concentration value possible.

**Calibration Procedure**

Calibration ▶ [I] [II] ... Condl

When you access calibration, the calibration values selected in the calibration presettings are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Data Entry" Calibration Mode and press **enter** to confirm.

02. Remove the sensor and install the premeasured sensor.

03. Continue with the **right softkey: Next**.

04. Enter the cell factor of the premeasured sensor.

Result

✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.5.9 Calibration Mode: Temperature

### Adjustment of the Temperature Probe

This function is used to adjust the individual temperature probe tolerances or cable lengths for the purpose of increasing the accuracy of the temperature measurement.

The adjustment requires an accurate measurement of the process temperature using a calibrated reference thermometer. The measurement error of the reference thermometer should be less than 0.1 K. Adjustment without an accurate measurement may result in falsification of the displayed measured value.

When using Memosens sensors, the adjustment value is saved in the sensor.

### Calibration Procedure

Calibration ▶ [I] [II] [Sensor]

01. Select "Temperature" Calibration Mode and press **enter** to confirm.
02. Enter the measured process temperature and press **enter** to confirm.
  - ✓ The temperature offset is displayed.
03. Adjust the temperature probe with the **right softkey: Save**.

The current adjustment and temperature offset data can be displayed in the Diagnostics menu:

Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log

## 7.6 Oxygen Process Variable Calibration/Adjustment

**Note:** During calibration, the function check (HOLD) operating state is active for each of the calibrated measuring channels. The outputs respond as configured.

- Calibration: Detect deviations without readjustment of calibration data
- Adjustment: Detect deviations with readjustment of calibration data

**NOTICE!** When using analog sensors, adjustment is required following sensor replacement.

### Oxygen Calibration/Adjustment Explanations

Every oxygen sensor has an individual slope and an individual zero point. Both values change, for example, as a result of aging and wear. For a sufficiently accurate oxygen measurement, the sensor data should be regularly adjusted.

The “slope” is the sensor current value with atmospheric oxygen saturation, 25 °C/77 °F and 1013 mbar/14.69 psi: nA/100 %. Only the “nA” measurement symbol appears on the display. This is technically not a “slope” but rather a calibration point. The value is provided with the intention of enabling the sensor to be compared with the datasheet values.

If the electrolyte, the membrane body, or both are replaced during maintenance of amperometric sensors, this change must be confirmed manually in the Maintenance menu:

Maintenance ▶ [I] [II] ... Oxy ▶ Membrane Body Replacement

→ Channel I/II Maintenance Functions, p. 140

Calibration is required after each membrane body replacement. This entry impacts on the accuracy of the calibration.

### Recommendations for Calibration

For best performance, you should always calibrate in air. Compared to water, air is a calibration medium which is easy to handle, stable, and thus safe. In the most cases, however, the sensor must be removed for a calibration in air. In certain processes the sensor cannot be removed for calibration. Here, calibration must be performed directly in the process medium (e.g., with aeration).

For applications where concentration is measured, calibration in air has proved to be useful.

### Common Combination: Process Variable / Calibration Mode

Measurement	Calibration
Saturation:	Water
Concentration:	Air

If there is a temperature difference between the calibration and the measured media, keep the sensor in the respective medium for an equalization period before and after calibration in order to obtain stable measured values.

The type of calibration pressure detection is preset during parameter setting:

Parameter Setting ▶ [I] [II] ... Oxy ▶ Pressure Correction → Pressure Correction, p. 100

**Note:** Amperometric sensors must be sufficiently polarized prior to calibration/adjustment. Follow the information on the sensor in the sensor user manual to ensure that the calibration is neither falsified nor unstable.

#### 7.6.1 Calibration/Adjustment Methods

- In air/water: Automatic calibration in water/air
- Data entry: Data entry of premeasured sensors
- Product: Product calibration by entering saturation %air, concentration, or partial pressure
- Zero point: Zero correction
- Temperature: Temperature probe adjustment



## 7.6.2 Calibration Mode: In Air

### Automatic Calibration in Air

The slope is corrected using the saturation value (100 % Air), similar to the air saturation of water. Since this analogy only applies to water-vapor saturated air (100 % relative humidity) and often the calibration air is less humid, the relative humidity of the calibration air must also be specified. If you do not know the exact value of the relative humidity of the calibration air, you can take the following reference values for a sufficiently precise calibration:

- Ambient air: 50 % rel. humidity (average)
- Bottled gas (synthetic air): 0 % rel. humidity

### Calibration Procedure

**Note:** The sensor membrane must be dry. Be sure to keep temperature and pressure constant during calibration. If there is a temperature difference between calibration and measured media, the sensor requires some equalization time before and after calibration.

Calibration ▶ [I] [II] ... Oxy

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "In Air" **Calibration Mode** and press **enter** to confirm.
02. Take the sensor out of the medium and clean it.
03. Carefully dab the membrane dry with a paper tissue.
04. Expose the sensor to air with a known water vapor saturation and press **enter** to confirm.
  - ✓ Display of selected calibration medium (air)
05. Enter relative humidity, e.g.: Ambient air: 50 %, Bottled gas: 0 %
06. **Enter Cal Pressure** : Enter the calibration pressure if "Manual" was configured.
07. Start with the **right softkey: Next**
  - ✓ Drift check is carried out.
  - The following parameters are displayed: Sensor Current, Calibration Pressure, and Response Time.
08. Exit calibration with the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.6.3 Calibration Mode: In Water

### Automatic Calibration in Water

The slope is corrected using the saturation value (100 %) related to saturation with air.

### Calibration Procedure

**Note:** Ensure sufficient sensor incident flow. (see the specifications of the oxygen sensor.) The calibration medium must be in equilibrium with air. Oxygen exchange between water and air is very slow. Therefore, it takes a relatively long time until water is saturated with atmospheric oxygen. If there is a temperature difference between calibration medium and measured medium, you must keep the sensor in the respective medium for several minutes before and after calibration.

Calibration ▶ [I] [II] ... Oxy

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "In Water" **Calibration Mode** and press **enter** to confirm.
02. Take the sensor out of the medium and clean it.
03. Carefully dab the membrane dry with a paper tissue.
04. Expose the sensor to the calibration medium (air-saturated water), ensure sufficient incident flow, and press **enter** to confirm.
  - ✓ Display of selected calibration medium (air-saturated water)
05. **Enter Cal Pressure**: Enter the calibration pressure if "Manual" was configured.
06. Start with the **right softkey: Next**.
  - ✓ Drift check is carried out.  
The following parameters are displayed: Sensor Current, Calibration Pressure, and Response Time.

The time for the sensor signal to stabilize can be shortened with the **left softkey: Exit** (without drift check: reduced accuracy of calibration values). The response time indicates how long the sensor needs until the sensor signal is stable. If the sensor signal or the measured temperature fluctuate considerably or the sensor is inadequately polarized, the calibration procedure is aborted after around 2 minutes. In this case, calibration needs to be restarted. Return the sensor to the process once this has been successfully completed. Make sure that the temperature of the sensor and the temperature of the calibration solution are not too far apart. The ideal temperature is 25 °C/77 °F.

07. Exit calibration with the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

#### 7.6.4 Calibration Mode: Data Entry

Entry of values for slope and zero point of the sensor, related to 25 °C/77 °F, 1013 mbar/14.69 psi.

Slope = sensor current at 100 % atmospheric oxygen, 25 °C/77 °F, 1013 mbar/14.69 psi

##### Calibration Procedure

Calibration ▶ [I] [II] ... Oxy

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Data Entry" **Calibration Mode** and press **enter** to confirm.
02. Remove the sensor and install the premeasured sensor.
03. Continue with the **right softkey: Next**.
04. Enter the zero point and slope measured values, and press **enter** to confirm.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.6.5 Calibration Mode: Product

### Calibration by Sampling

If the sensor cannot be removed – e.g., for sterility reasons – its slope can be determined by “sampling”. The current “Saturation” measured value is saved in the device for this purpose. A sample is taken directly afterward at the measuring point. The reference value is entered in the device. Stratos Multi calculates the sensor’s correction values from the difference between the measured and reference values, and corrects the zero point in the event of small saturation values, the slope in the event of large values.

### Calibration Procedure

**NOTICE!** Measure the reference value at temperature and pressure conditions similar to those of the process.

Calibration ▶ [I] [II] ... Oxy

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.


01. Select “Product” Calibration Mode and press **enter** to confirm.
  - ✓ Process variables saturation, concentration, and partial pressure configured as in Cal Presettings.

02. Change the process variable, if required.

03. Prepare for sampling.

04. Start with the **right softkey: Next**.

Product calibration is performed in 2 steps.

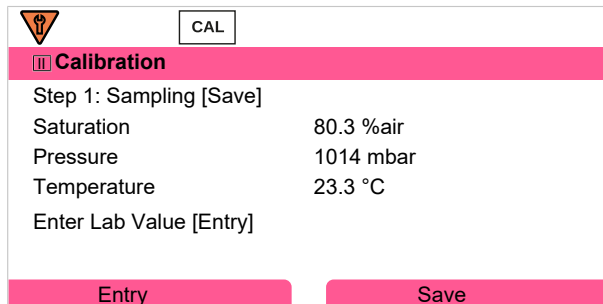

Step 1: Sampling [Save]	
Saturation	80.3 %air
Pressure	1014 mbar
Temperature	23.3 °C
Enter Lab Value [Entry]	


Step 1:

05. Take sample.
  - ✓ The measured value and temperature at the time of sampling are displayed.
06. Save with the **right softkey: Save**.
  - ✓ An information window is shown.
07. **Right softkey: Close**
08. As required, exit calibration by pressing the **left softkey: Back**.

**Note:** The icon  indicates that product calibration has not yet been completed.

Step 2: Lab value has been measured.

09. Open the Product Calibration menu again.

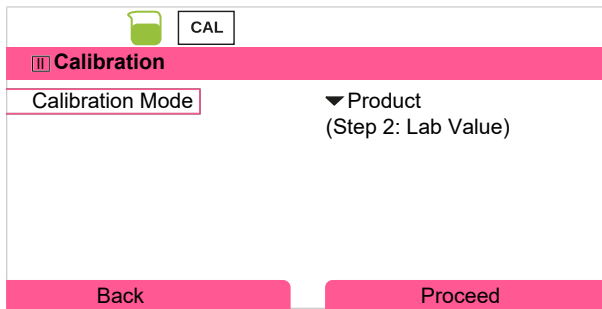

10. **Right softkey: Proceed**

11. Enter the lab value and press **enter** to confirm.

12. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

Exception: Sample value can be determined and entered on site:

13. Take sample.

- ✓ The measured value and temperature at the time of sampling are displayed.

14. **Left softkey: Entry**

15. Enter the lab value and press **enter** to confirm.

16. Confirm with the **right softkey: Next** or repeat calibration with the **left softkey: Cancel**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.6.6 Calibration Mode: Zero Point

### Zero Correction

For trace measurements below 500 ppb, the zero point should be calibrated. (TAN option FW-E015, "Oxygen Measurement in Low Oxygen Concentrations")

If a zero correction is performed, the sensor should remain for at least 10 to 60 minutes in the calibration medium (media containing CO<sub>2</sub>; at least 120 min) to obtain stable, non-drifting values. During zero correction, a drift check is not performed.

### Calibration Procedure

Calibration ▶ [I] [II] ... Oxy

When you access calibration, the calibration values selected in the calibration presets are used. These settings can still be changed in the Calibration menu. If you do not want to perform calibration, use the left **softkey** to go back one level and abort the calibration.

01. Select "Zero Point" Calibration Mode and press **enter** to confirm.
02. Press the **right softkey: Next**.
  - ✓ Zero correction is carried out. The measured sensor current is displayed.
03. Enter the input current for the zero point.
04. Press the **right softkey: Next**.

Result

- ✓ The calibration record is displayed. By pressing the **right softkey: Adjust**, the calibration values obtained during calibration for calculation of the process variables are applied to the device. When using a Memosens sensor, the calibration values are saved in the sensor.

## 7.6.7 Calibration Mode: Temperature

### Adjustment of the Temperature Probe

This function is used to adjust the individual temperature probe tolerances or cable lengths for the purpose of increasing the accuracy of the temperature measurement.

The adjustment requires an accurate measurement of the process temperature using a calibrated reference thermometer. The measurement error of the reference thermometer should be less than 0.1 K. Adjustment without an accurate measurement may result in falsification of the displayed measured value.

When using Memosens sensors, the adjustment value is saved in the sensor.

### Calibration Procedure

Calibration ▶ [I] [II] [Sensor]

01. Select "Temperature" Calibration Mode and press **enter** to confirm.
02. Enter the measured process temperature and press **enter** to confirm.
  - ✓ The temperature offset is displayed.
03. Adjust the temperature probe with the **right softkey: Save**.

The current adjustment and temperature offset data can be displayed in the Diagnostics menu:


Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log

## 8 Diagnostics

### 8.1 Favorites Menu

Diagnostic functions can be accessed directly from measuring mode using the right *softkey*. For this purpose, the right *softkey* (1) must be assigned the function Favorites Menu :


Parameter Setting ▶ System Control ▶ Function Control → *Function Control*, p. 48

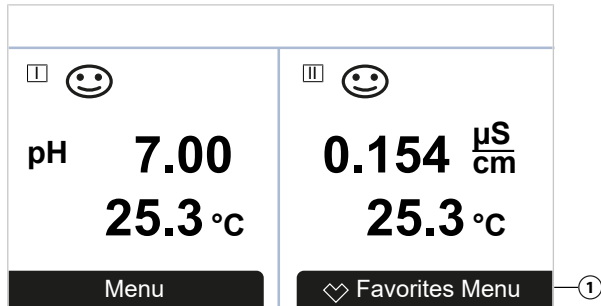

The "Favorites" are set in the Diagnostics menu.

Set a favorite:

01. From within measuring mode, press the *left softkey: Menu*.

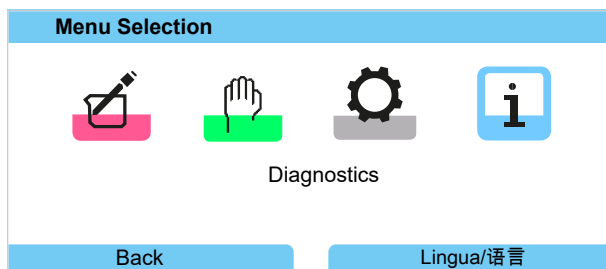


02. Using the right *arrow key*, select the **Diagnostics** menu and confirm with *enter*.

03. Select the desired submenu.

04. *Right softkey: Set Favorite*

- ✓ A heart icon appears to the left of the menu line. The softkey function changes to **Delete Favorite**.

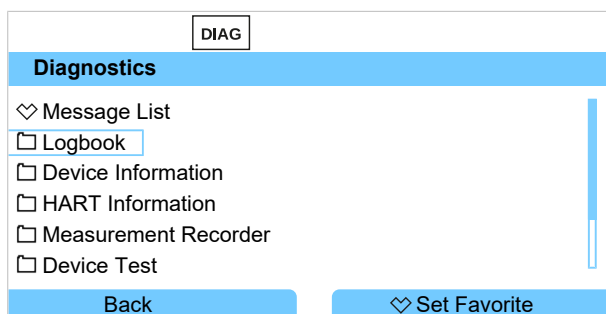


Delete a favorite:

05. Open the **Diagnostics** menu and select the Favorites menu.

06. *Right softkey: Delete Favorite*

- ✓ The heart icon disappears. The softkey function changes to **Set Favorite**.

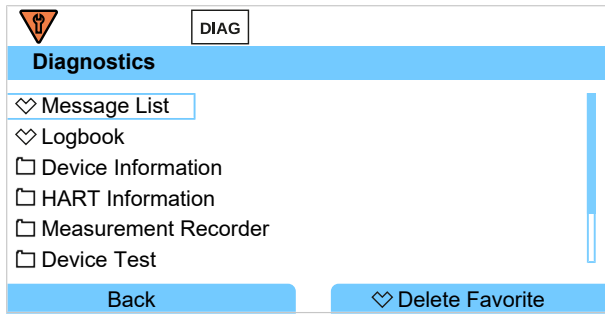

## 8.2 Diagnostic Functions

The diagnostic functions are matched to NAMUR recommendation NE 107.

### 8.2.1 Overview of Diagnostic Functions

In diagnostics mode, you can access the following submenus without interrupting the measurement:

Submenus	Description
Message List	Displays currently active messages in plain text. → <i>Messages, p. 135</i>
Logbook	Shows the last 100 events with date and time, e.g., calibrations, warning and failure messages, power failure, etc. With TAN option FW-E104, at least 20,000 entries can be recorded on a memory card (Data Card). → <i>Logbook, p. 136</i>
HART Information	With enabled HART function (TAN option FW-E050) → <i>HART (FW-E050), p. 215</i>
Device Information	Displays device information: Device type, serial number, hardware/firmware version → <i>Device Information, p. 137</i>
Measurement Recorder	With enabled measurement recorder (TAN option FW-E103): Graphical display of recorded measured values → <i>Measurement Recorder (FW-E103), p. 218</i>
Device Test	Display device diagnostics, perform a display or keypad test → <i>Device Test, p. 137</i>
Meas. Point Description	Display tag number and notes. → <i>Measuring Point Description, p. 138</i>
[I] [II] [Sensor]	Depending on sensor type, e.g., sensor information, sensor monitor, sensor diagram, calibration/adjustment record → <i>Channel I/II Diagnostic Functions, p. 138</i>

### 8.2.2 Messages

All values determined by the measuring module or sensor can generate messages.

#### Configuring Messages

Process variable limits for the monitoring range can be selected in the **Messages** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Messages ▶ Messages [Process Variable] ▶ Monitoring

- Max. Device Limits: Messages are generated when the process variable is outside the measuring range. The “failure” or “out of specification” icons are shown; the corresponding relay contact is enabled. The current outputs can signal a 22-mA message (user-defined).
- Variable Limits: Upper and lower limits at which a message is generated can be defined for the “Failure” and “Out of Specification” messages.

**Note:** If display color NE107 is selected in Parameter Setting (factory setting), measured values are backlit in accordance with their NAMUR color when NAMUR messages are available.

Parameter Setting ▶ General ▶ Display

### Displaying Messages

01. Go to the Diagnostics menu if the “failure” , “maintenance required” , or “out of specification”  icons are flashing on the display: **Menu Selection** ▶ **Diagnostics** ▶ **Message List**

✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the **up/down arrow keys**.






The error message disappears from the display around 2 s after the error is cleared.

An overview of message texts with notes on troubleshooting can be found in the “Troubleshooting” chapter. → *Malfunction States, p. 143*

### 8.2.3 Logbook

The logbook shows the last 100 events with message number, date, and time directly on the device, e.g., calibrations, NAMUR messages, power failure. Messages that occur during the function check (HOLD) operating state are not saved.

Access in: **Diagnostics** ▶ **Logbook**

DIAG					
Logbook					
F240	12/11/19	08:33		<input type="checkbox"/>	Cal Mode is Active
F240	12/11/19	08:21		<input type="checkbox"/>	Cal Mode is Active
F032	12/11/19	08:13		<input type="checkbox"/>	Sensor Identified
F029	12/11/19	08:13		<input type="checkbox"/>	No Sensor Connected
F029	12/11/19	08:05		<input type="checkbox"/>	No Sensor Connected
F227	12/11/19	08:05			Power Supply ON

Back

You can scroll forward and backward in the logbook using the **up/down arrow keys**.

When using the Data Card and TAN option FW-E104, 20,000 entries or more can be stored on the card, depending on the memory load.


Select whether to record Failure and/or Maintenance Required messages in the logbook in the system control:

**Parameter Setting** ▶ **System Control** ▶ **Logbook** → *Logbook, p. 49*

Logbook entries can also be deleted here.



### 8.2.4 Device Information

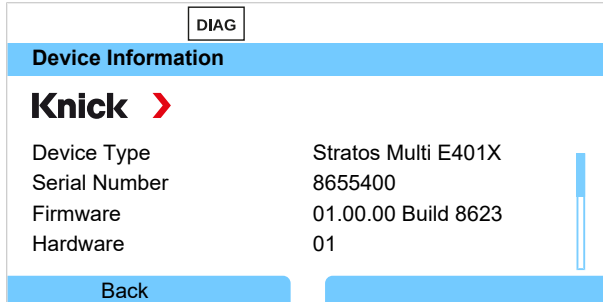

The following device information is displayed for the basic unit and any inserted module:

- Device type
- Serial number
- Firmware versions
- Hardware versions
- Bootloader

Access in: [Diagnostics](#) ▶ [Device Information](#)


### 8.2.5 Device Test

#### Device Diagnostics

Stratos Multi periodically performs a self-test in the background.

The results can be viewed in [Diagnostics](#) ▶ [Device Test](#) ▶ [Device Diagnostics](#)

If a memory card is inserted, the card type and available memory are also displayed.

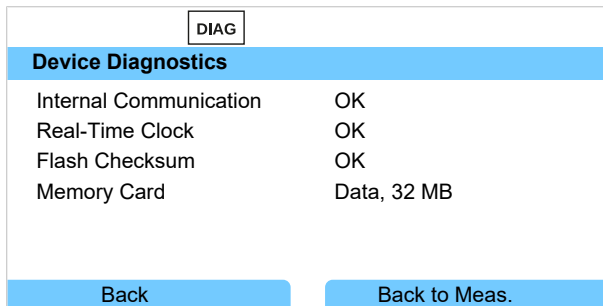

#### Display Test

If you select [Diagnostics](#) ▶ [Device Test](#) ▶ [Display Test](#), the device performs a display test. The display changes color from red to green to blue.

#### Keypad Test

You can test the device keypad by selecting [Diagnostics](#) ▶ [Device Test](#) ▶ [Keypad Test](#).

01. Press all keys one after the other.
  - ✓ A green checkmark shows that a key functions properly.
02. Press the *left softkey* twice to exit.

## 8.2.6 Measuring Point Description

Diagnostics ▶ Meas. Point Description

Display of tag number and notes

Entry in menu Parameter Setting ▶ System Control ▶ Meas. Point Description

→ *Measuring Point Description, p. 48*

## 8.2.7 Channel I/II Diagnostic Functions

The submenus vary depending on the sensor type. Key functions are set out below.

### Sensor Information

**Note:** Function active for digital sensors.

The Sensor Information submenu shows data from the currently connected digital sensor, e.g., manufacturer, order no., serial no., firmware and hardware version, last calibration, operating time:

Diagnostics ▶ [I] [II] [Sensor] ▶ Sensor Information

### Sensor Monitor

For diagnostic purposes, the raw measured values for the sensor type are displayed in the sensor monitor.

Diagnostics ▶ [I] [II] [Sensor] ▶ Sensor Monitor

### Sensor Diagram

**Note:** Function active for pH and oxygen sensors.


The sensor diagram clearly indicates the status of the parameters in the connected sensor, including the calibration timer.

Inactive parameters are shown in gray and set to 100 % (e.g., disabled calibration timer).

The parameter values should lie between the outer (100 %) and inner (50 %) polygon. A warning signal flashes if a value drops below the inner polygon (<50 %).

Access in: Diagnostics ▶ [I] [II] [Sensor] ▶ Sensor Diagram

Display example:

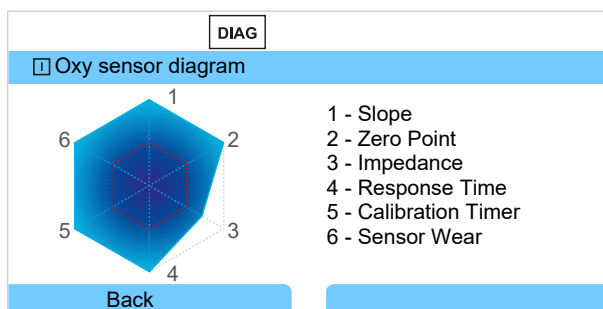

### Calibration/Adjustment Record

The calibration/adjustment record shows the data from the last calibration/adjustment performed on the currently connected sensor.

Access in: Diagnostics ▶ [I] [II] [Sensor] ▶ Cal/Adj Record [Process Variable]

### Temp. Offset Log

The temp. offset log shows the data from the last temperature equalization performed on the currently connected sensor.

Access in: Diagnostics ▶ [I] [II] [Sensor] ▶ Temp. Offset Log

### Sensor Wear Monitor

**Note:** Function active for digital sensors.

The sensor wear monitor shows the sensor operating time and the maximum temperature during the operating time, as well as wear and the forecast remaining time. When using oxygen sensors, the number of membrane replacements and calibrations is also displayed:


Diagnosics ▶ [I] [II] [Sensor] ▶ Sensor Wear Monitor

DIAG	
<b>Sensor Wear Monitor</b>	
Operating Time	68 d
Wear	9.5 %
Remaining Lifetime	661 d
Max. Temperature	32 °C

Back      Back to Meas.

### Load Matrix

**Note:** Function active for ISM pH/ORP sensors and amperometric ISM oxygen sensors.

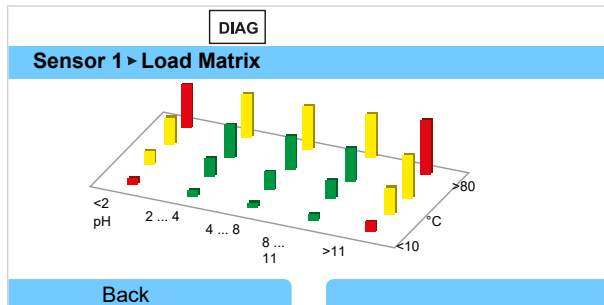

#### Bar Color

- Green:            The area that puts the least load on the sensor.
- Yellow:         The area that puts more load on the sensor.
- Red:             The area that puts the most load on the sensor.

The bar height indicates the duration of the load.

See also

→ *Digital ISM Sensors (FW-E053), p. 216*

#### Statistics

**Note:** Function active for ISM pH/ORP sensors and amperometric ISM oxygen sensors.

The statistics data provides information on the sensor product life cycle: Data from the first adjustment and the three most recent calibrations/adjustments is displayed. This data can be used to assess the performance of the sensor over its service life.


Use the **right softkey** to switch between a graphical display and a list.

See also

→ *Digital ISM Sensors (FW-E053), p. 216*


→ *Calibration/Adjustment, p. 103*

## 9 Maintenance Functions

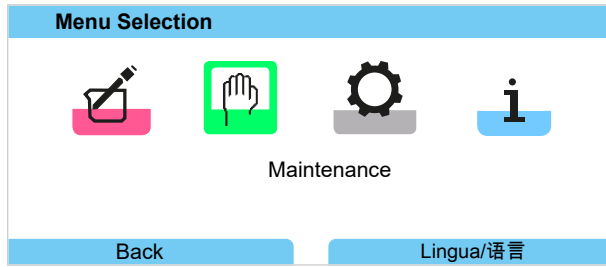

**Note:** Function check (HOLD) is active. The current output and relay contacts behave in accordance with the parameter settings. Return to measuring mode to exit the function check, e.g., with the *right softkey: Back to Meas.*

### 9.1 Overview of Maintenance Functions

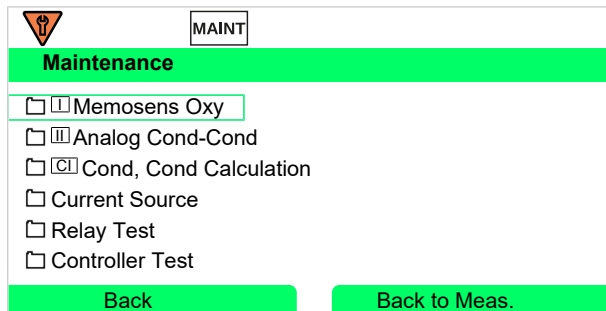

The Maintenance menu provides various functions for checking the device function:

Submenus	
Open/Close Memory Card	Only if Data Card is inserted → <i>Memory Card, p. 162</i>
[I] [II] [Sensor]	Depending on sensor type, e.g.: sensor monitor → <i>Channel I/II Maintenance Functions, p. 140</i>
[CI] [CII] Cond, Cond Calculation	When using the Cond/Cond calculation block to calculate pH value upstream and downstream of an ion exchanger: Confirm ion exchanger replacement. → <i>Calculation Blocks (FW-E020), p. 211</i>
Current Source	Function test: manual control of current outputs in full range → <i>Current Source, p. 142</i>
Relay Test	Function test of relay contacts → <i>Relay Test, p. 142</i>
Controller Test	Function test: manual control of the PID controller (if configured) → <i>Controller Test, p. 142</i>

### 9.2 Channel I/II Maintenance Functions

	Memosens/Analog pH/Cond/Condi	Memosens Oxy	ISM Oxy <sup>1)</sup>	ISM pH <sup>1)</sup>
Sensor Monitor	+	+	+	+
Autoclaving Counter	+ <sup>2)</sup>		+	+
Membrane Body Replacement		+	+	
Interior Body Replacement			+	

<sup>1)</sup> With TAN option FW-E053

<sup>2)</sup> Only with Memosens pH/ORP

### 9.2.1 Sensor Monitor

Maintenance ▶ [I] [II] Sensor ▶ Sensor Monitor

Display of the currently measured values (sensor monitor) with function check (HOLD mode activated) enabled:

Since the instrument is in function check (HOLD) mode, certain media can be used to validate the sensor and check the measured values without affecting the signal outputs.

### 9.2.2 Autoclaving Counter

If the autoclaving counter has been enabled in the Parameter Setting menu

Sensor Data ▶ Sensor Monitoring Details, it must be manually incremented in the Maintenance menu after each autoclaving process:

01. Maintenance ▶ [I] [II] [Sensor] ▶ Autoclaving Counter
02. **Right softkey: Cycles+1**
03. A confirmation prompt appears: Select "Yes" with the **left arrow key**.
04. Close the window by pressing the **right softkey**.

### 9.2.3 Electrolyte Replacement/Membrane Body Replacement

If the electrolyte or the membrane body of a Memosens oxygen sensor are replaced during maintenance of a sensor, this must be confirmed manually in the Maintenance menu:

01. Maintenance ▶ [I] [II] Memosens Oxy ▶ Membrane Body Replacement  
✓ A text window appears: Membrane Body or Electrolyte Replaced?
02. **Left arrow key: Yes**
03. Confirm with **enter**.

The counter automatically resets on confirmation of the completed check.

### 9.2.4 Replacing the Membrane Body/Interior Body

If the membrane body or the interior body of an ISM oxygen sensor are replaced during maintenance of a sensor, this must be confirmed manually in the Maintenance menu:

01. Maintenance ▶ [II] ISM Oxy ▶ Membrane Body Replacement / Interior Body Replacement
02. **Enter the date and serial number using the arrow keys.**
03. In each case, press **enter** to confirm.
04. **Right softkey: Apply**

The maximum permitted number of membrane body/interior body replacements can be specified in Parameter Setting:

Parameter Setting ▶ [II] ISM Oxy ▶ Sensor Data ▶ Sensor Monitoring Details

## 9.3 Manual Function Check

### 9.3.1 Current Source

For testing purposes, the output current can be manually specified (range 0 ... 22 mA):

Maintenance ▶ Current Source

01. Select the current output.
02. Enter a valid current value for the respective output using the **arrow keys**.
03. Confirm with **enter**.
  - ✓ For checking purposes, the actual output current is shown in the bottom right corner of the display.

### 9.3.2 Relay Test

Maintenance ▶ Relay Test

When you access this menu, the function of the relay contacts is checked. The relays can be set to manual to check the wiring.

### 9.3.3 Controller Test

If a controller function has been assigned to relay contacts K1 and K2, a manual test of the controller can be carried out in the **Controller Test** submenu:

Maintenance ▶ Controller Test

01. Use the **arrow keys** to select a suitable value for the controller output.
02. The controller output can be changed with the **up/down arrow keys**.
03. Confirm with **enter**.
  - ✓ Control systems can be tested and smoothly started up.

The controller is adjusted in the **Relay Contacts** submenu:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts → *PID Controller, p. 63*

## 10 Troubleshooting




### 10.1 Malfunction States

Messages and errors are displayed with the corresponding NAMUR icon and the measurement display of the corresponding channel changes color.

The message is logged, with time and date, in the logbook. → *Logbook, p. 136*

If messages are set to current outputs or relay contacts, these are activated after the user-defined delay has expired.


#### Displaying Messages

01. Go to the Diagnostics menu if the “failure” , “maintenance required” , or “out of specification”  icons are flashing on the display: **Menu Selection** ▶ **Diagnostics** ▶ **Message List**




✓ All active messages are displayed in the **Message List** menu item with the following information: Error number, type (failure, maintenance required, out of specification), channel, message text.

02. You can scroll forward and backward using the **up/down arrow keys**.

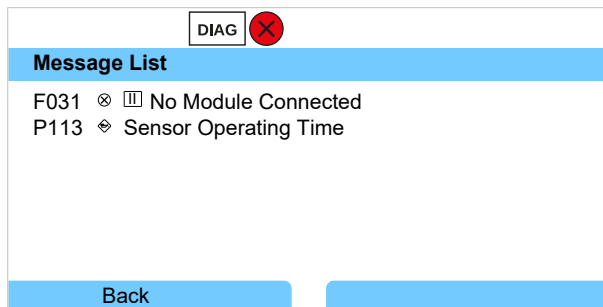The error message disappears from the display around 2 s after the error is cleared.



### 10.2 Error Messages

Error type		Display color in accordance with NE107
	Failure	Red
	Maintenance required	Blue
	Out of specification	Yellow
Info	Info text, appears directly in the relevant menu	
par	User-defined error type: failure or maintenance required	

**General Error Messages**

<b>Error</b>	<b>Possible Causes</b>	<b>Remedy</b>
Display is blank.	No power supply.	Check the power supply or provide a suitable power supply for the device.
	Display auto-off enabled.	Press any key to wake the display following a possible auto-off.
No measurement, no error message.	Sensor or module incorrectly connected.	Check the sensor connection/install the module properly.
	Measurement display not configured.	Configure the measurement display: <a href="#">Parameter Setting</a> ▶ <a href="#">General</a> ▶ <a href="#">Measurement Display</a>

<b>Error No.</b>	<b>Type</b>	<b>Message Text</b>	<b>Notes/Solution</b>
F008	⊗	Adjustment Data	Error in the adjustment data: Switch device off (approx. 10 s). If the message persists, send in the device.
F009	⊗	Firmware Error	Error in the firmware: Switch device off (approx. 10 s). Reload the firmware. → <i>Firmware Update (FW-E106)</i> , p. 220 If the message persists, send in the device.
F029	⊗	No Sensor Connected	The sensor is not recognized: - Check connections. - Check cables. Replace as required. - Check sensor. Replace as required.
F030	⊗	Wrong Sensor Connected	The connected digital sensor does not match the configuration: - Connect correct sensor. - Adjust the process variable. → <i>Sensor Selection [I] [II]</i> , p. 65
F031	⊗	No Module Connected	No module is recognized. Possible causes: - No module installed. - Wrong module selected. - Module faulty. Install the module properly and select it in the parameter settings.
F033	Info	Sensor Removed	The sensor cannot be found. Possible causes: - Sensor was removed. - Connections/cables faulty. Connect an appropriate sensor and adjust the configuration as necessary.
F038	⊗	Sensor Defective	Faulty sensor. Replace the sensor.
F191	Info	Meas. Recorder Inconsistent	The measurement recorder's memory is defective and cannot be read: Deleting the measurement recorder's data.
F200	⊗	Configuration Data Loss	Data error in the configuration: Reset to factory settings and fully reconfigure.
F202	⊗	System Failure	Internal system error: Switch device off (approx. 10 s). If the message persists, send in the device.
F203	⊗	Inconsistent Parameter Setting	The configuration of the measuring channel operating mode is inconsistent: Check and correct the configuration.
F210	⊕	Device Diagnostics: Self Test	Error on the self test (RAM): Switch device off (approx. 10 s). If the message persists, send in the device.
F212	⊕	Time/Date	The time and date still need to be set. <a href="#">Parameter Setting</a> ▶ <a href="#">System Control</a> ▶ <a href="#">Time/Date</a>
F229	Info	Wrong Passcode	An incorrect passcode was entered. → <i>Passcode Entry</i> , p. 50
F236	⊕	HART not Available, Current too Low	HART is not available with currents smaller than 4 mA: Set current output I1 to 4-20 mA. <a href="#">Parameter Setting</a> ▶ <a href="#">Inputs/Outputs</a> ▶ <a href="#">Current Outputs</a> ▶ <a href="#">Current Output I1</a> ▶ <a href="#">Output</a>








**Current Output/Relay Contacts**

<b>Error No.</b>	<b>Type</b>	<b>Message Text</b>	<b>Notes/Solution</b>
B070	⊗	Current I1 Span	Current output 1: The selected span is too small/too big: <a href="#">Parameter Setting</a> ▶ <a href="#">Inputs/Outputs</a> ▶ <a href="#">Current Outputs</a> ▶ <a href="#">Current Output I1</a> Check start/end.
B071	⊗	Current I1 < 0/4 mA	Current output 1: The current is below the permissible limit.
B072	⊗	Current I1 > 20 mA	Current output 1: The current is above the permissible limit.
B073	⊗	Current I1 Load Error	Current output 1: The current loop has been interrupted (open circuit) or the load is too high: Deactivate or short-circuit unused current outputs.
B074	⊗	Current I1 Parameter	Current output 1: Check the configuration.
B075	⊗	Current I2 Span	Current output 2: The selected span is too small/too big: <a href="#">Parameter Setting</a> ▶ <a href="#">Inputs/Outputs</a> ▶ <a href="#">Current Outputs</a> ▶ <a href="#">Current Output I2</a> Check start/end.
B076	⊗	Current I2 < 0/4 mA	Current output 2: The current is below the permissible limit.
B077	⊗	Current I2 > 20 mA	Current output 2: The current is above the permissible limit.
B078	⊗	Current I2 Load Error	Current output 2: The current loop has been interrupted (open circuit) or the load is too high: Deactivate or short-circuit unused current outputs.
B079	⊗	Current I2 Parameter	Current output 2: Check the configuration.
B080	⊗	Current I3 Span	Current output 3: The selected span is too small/too big: <a href="#">Parameter Setting</a> ▶ <a href="#">Inputs/Outputs</a> ▶ <a href="#">Current Outputs</a> ▶ <a href="#">Current Output I3</a> Check start/end.
B081	⊗	Current I3 < 0/4 mA	Current output 3: The current is below the permissible limit.
B082	⊗	Current I3 > 20 mA	Current output 3: The current is above the permissible limit.
B083	⊗	Current I3 Load Error	Current output 3: The current loop has been interrupted (open circuit) or the load is too high: Deactivate or short-circuit unused current outputs.
B084	⊗	Current I3 Parameter	Current output 3: Check the configuration.
B085	⊗	Current I4 Span	Current output 4: The selected span is too small/too big: <a href="#">Parameter Setting</a> ▶ <a href="#">Inputs/Outputs</a> ▶ <a href="#">Current Outputs</a> ▶ <a href="#">Current Output I4</a> Check start/end.
B086	⊗	Current I4 < 0/4 mA	Current output 4: The current is below the permissible limit.
B087	⊗	Current I4 > 20mA	Current output 4: The current is above the permissible limit.
B088	⊗	Current I4 Load Error	Current output 4: The current loop has been interrupted (open circuit) or the load is too high: Deactivate or short-circuit unused current outputs.
B089	⊗	Current I4 Parameter	Current output 4: Check the configuration.




 









 
 

**pH, ORP**







Error No.	Type	Message Text	Notes/Solution
P001	⊗	Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
P008	⊗	Adjustment Data	Error in the adjustment data: Switch device off (approx. 10 s). If the message persists, send in the device.
P009	⊗	Firmware Error	Error in the firmware: Switch device off (approx. 10 s). Reload the firmware. → <i>Firmware Update (FW-E106)</i> , p. 220 If the message persists, send in the device.
P010	⊗	pH Range	Measuring range exceeded. Possible causes: Sensor not or incorrectly connected, sensor faulty, cable faulty, incorrect temperature detector selected, temperature detector faulty. With MK-PH015 module without connection to solution ground: No jumper between terminals B and C. → <i>pH Analog Wiring Examples</i> , p. 178
P011	⊗	pH LO_LO	Value below configured monitoring limit
P012	⚠	pH LO	Value below configured monitoring limit
P013	⚠	pH HI	Value above configured monitoring limit
P014	⊗	pH HI_HI	Value above configured monitoring limit
P015	⊗	Temperature Range	Measuring range exceeded. Possible causes: Sensor not or incorrectly connected, cable faulty, incorrect temperature probe selected.
P016	⊗	Temperature LO_LO	Value below configured monitoring limit
P017	⚠	Temperature LO	Value below configured monitoring limit
P018	⚠	Temperature HI	Value above configured monitoring limit
P019	⊗	Temperature HI_HI	Value above configured monitoring limit
P020	⊗	ORP Range	Measuring range exceeded. Possible causes: no ORP sensor connected, sensor incorrectly connected, sensor faulty, cable faulty. On pH measurement with MK-PH015 module: No jumper between terminals B and C. → <i>pH Analog Wiring Examples</i> , p. 178
P021	⊗	ORP LO_LO	Value below configured monitoring limit
P022	⚠	ORP LO	Value below configured monitoring limit
P023	⚠	ORP HI	Value above configured monitoring limit
P024	⊗	ORP HI_HI	Value above configured monitoring limit
P025	⊗	rH Range	Measuring range exceeded. Possible causes: no pH/ORP combo sensor connected, sensor incorrectly connected, cable faulty.
P026	⊗	rH LO_LO	Value below configured monitoring limit
P027	⚠	rH LO	Value below configured monitoring limit
P028	⚠	rH HI	Value above configured monitoring limit
P029	⊗	rH HI_HI	Value above configured monitoring limit
P045	⊗	pH Voltage Range	Measuring range exceeded. Possible causes: Sensor not or incorrectly connected, sensor faulty, cable faulty.
P046	⊗	pH Voltage LO_LO	Value below configured monitoring limit
P047	⚠	pH Voltage LO	Value below configured monitoring limit
P048	⚠	pH Voltage HI	Value above configured monitoring limit
P049	⊗	pH Voltage HI_HI	Value above configured monitoring limit

Error No.	Type	Message Text	Notes/Solution
P060		Sensoface: Slope	 Incorrect adjustment or worn/faulty sensor: Calibrate/adjust sensor, check for correct buffer solutions and temperature. Replace the sensor as required.
			 Sensor soon worn: Replace the sensor soon.
P061		Sensoface: Zero Point	 Incorrect adjustment or worn/faulty sensor: Calibrate/adjust sensor, check for correct buffer solutions and temperature. Replace the sensor as required.
			 Sensor soon worn: Replace the sensor soon.
P062		Sad Sensoface  Reference Impedance	Reference impedance outside limits. Possible causes: Sensor cable faulty, sensor faulty. With MK-PH015 module without connection to solution ground: No jumper between terminals B and C. → <i>pH Analog Wiring Examples, p. 178</i>
P063		Sad Sensoface  Glass Impedance	Glass impedance outside limits. Possible causes: Sensor cable faulty, sensor faulty: As required, calibrate/adjust sensor or replace.
P064		Sad Sensoface  Response Time	Response time too long. Possible causes: Sensor worn out. Adjustment not carried out properly (unsteady): Repeat calibration/adjustment. Replace the sensor as required.
P065		Sad Sensoface  Calibration Timer	Calibration timer has expired: Check calibration timer setting, perform calibration/adjustment.
P069		Sad Sensoface  Calimatic	Check calibration. As required, recalibrate/readjust sensor or replace.
P070		Sad Sensoface  Wear	Sensor is worn (100 %): Replace the sensor.
P071		Sad Sensoface  Leakage Current	ISFET sensor faulty: Replace the sensor.
P072		Sad Sensoface  Operating Point	ISFET sensor: Operating point out of range. Readjust ISFET zero point, replace sensor as required.
P074		Sad Sensoface  Zero Offset ORP	ORP zero offset is too large: Readjust ORP, replace sensor as required.
P090		Error in Buffer Table	The conditions for the buffer table were not adhered to: Check and, as necessary, correct the configuration. → <i>pH Buffer Table: Entry of Individual Buffer Set (FW-E002), p. 202</i>
P110		CIP Counter	Configured number of CIP cycles exceeded: As required, calibrate/adjust sensor or replace.
P111		SIP Counter	Configured number of SIP cycles exceeded: As required, calibrate/adjust sensor or replace.
P113		Sensor Operating Time	Sensor operating time exceeded: Replace the sensor.
P120		Wrong Sensor (Sensor Check)	If sensor check is active: An impermissible sensor is connected to the device: Connect correct sensor or disable function.
P121		Sensor Error (Factory Settings)	The digital sensor indicates an error. The sensor no longer works properly. Replace the sensor.
P122		Sensor Memory (Cal Data)	The digital sensor indicates an error. The calibration data are defective: Recalibrate/readjust sensor.
P123		New Sensor, Adjustment Required	A new digital sensor was connected. It must now be adjusted.
P124		Sensor Date	The date of the sensor is implausible. e.g., calibration data "from the future": Check and, as necessary, adjust the configuration.

Error No.	Type	Message Text	Notes/Solution
P201		Cal: Temperature	The calibration temperature is impermissible: Check the calibration temperature. Note the information in the Calibration chapter. → <i>pH Process Variable Calibration/Adjustment, p. 104</i>
P202	Info	Cal: Buffer Unknown	Calibration error with automatic Calimatic calibration: Buffer not recognized. Possible causes: Incorrect buffer set selected. Buffer corrupted. Sensor faulty: Check calibration. Note the information in the Calibration chapter. → <i>Calibration Mode: Calimatic, p. 106</i>
P203	Info	Cal: Identical Buffers	Calibration error with automatic Calimatic calibration: The same buffer was used. The sensor or the sensor cable may be faulty.
P204	Info	Cal: Buffers Interchanged	Calibration error during manual calibration: Buffer order differs from specified order. Repeat calibration and adhere to the specified order. → <i>Calibration Mode: Manual, p. 108</i>
P205	Info	Cal: Sensor Unstable	The drift criterion was not adhered to during calibration. Possible causes: improper calibration, sensor cable/connection faulty, sensor worn. Check the sensor and calibration and repeat as required. Otherwise, replace the sensor.
P206		Cal: Slope	Slope out of permissible range: Repeat calibration/adjustment or replace sensor.
P207		Cal: Zero Point	Zero point out of permissible range: Repeat calibration/adjustment or replace sensor.
P208		Cal: Sensor Failure	Replace the sensor.


### Calculation Block pH/pH

Error No.	Type	Message Text	Notes/Solution
A001		Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
A010		pH Diff Range	pH value difference. Max/min device limits exceeded: - Check both pH values. - Check sensor/cable connections.
A011		pH Diff LO_LO	Value below configured monitoring limit
A012		pH Diff LO	Value below configured monitoring limit
A013		pH Diff HI	Value above configured monitoring limit
A014		pH Diff HI_HI	Value above configured monitoring limit
A015		Temperature Diff Range	Temperature value difference. Max/min device limits exceeded: - Check both temperature values. - Check sensor/cable connections.
A016		Temperature Diff LO_LO	Value below configured monitoring limit
A017		Temperature Diff LO	Value below configured monitoring limit
A018		Temperature Diff HI	Value above configured monitoring limit
A019		Temperature Diff HI_HI	Value above configured monitoring limit
A020		ORP Diff Range	ORP value difference. Max/min device limits exceeded: - Check both ORP values. - Check sensor/cable connections.
A021		ORP Diff LO_LO	Value below configured monitoring limit
A022		ORP Diff LO	Value below configured monitoring limit
A023		ORP Diff HI	Value above configured monitoring limit
A024		ORP Diff HI_HI	Value above configured monitoring limit

Error No.	Type	Message Text	Notes/Solution
A045		pH Voltage Diff Range	pH voltage difference. Max/min device limits exceeded: - Check both pH voltage values. - Check sensor/cable connections.
A046		pH Voltage Diff LO_LO	Value below configured monitoring limit
A047		pH Voltage Diff LO	Value below configured monitoring limit
A048		pH Voltage Diff HI	Value above configured monitoring limit
A049		pH Voltage Diff HI_HI	Value above configured monitoring limit
A200		Param. Calculation block	Check the configuration: <a href="#">Parameter Setting</a> ▶ <a href="#">System Control</a> ▶ <a href="#">Calculation Blocks</a>























### Conductivity (Contacting)

Error No.	Type	Message Text	Notes/Solution
C001		Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
C008		Adjustment Data	Error in the adjustment data: Switch device off (approx. 10 s). If the message persists, send in the device.
C009		Firmware Error	Error in the firmware: Switch device off (approx. 10 s). Reload the firmware. → <i>Firmware Update (FW-E106)</i> , p. 220 If the message persists, send in the device.
C010		Conductivity Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell constant set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
C011		Conductivity LO_LO	Value below configured monitoring limit
C012		Conductivity LO	Value below configured monitoring limit
C013		Conductivity HI	Value above configured monitoring limit
C014		Conductivity HI_HI	Value above configured monitoring limit
C015		Temperature Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect temperature probe selected. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
C016		Temperature LO_LO	Value below configured monitoring limit
C017		Temperature LO	Value below configured monitoring limit
C018		Temperature HI	Value above configured monitoring limit
C019		Temperature HI_HI	Value above configured monitoring limit
C020		Resistivity Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell constant set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
C021		Resistivity LO_LO	Value below configured monitoring limit
C022		Resistivity LO	Value below configured monitoring limit
C023		Resistivity HI	Value above configured monitoring limit
C024		Resistivity HI_HI	Failure: Value above configured monitoring limit

Error No.	Type	Message Text	Notes/Solution
C025		Concentration Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell constant set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
C026		Concentration LO_LO	Value below configured monitoring limit
C027		Concentration LO	Value below configured monitoring limit
C028		Concentration HI	Value above configured monitoring limit
C029		Concentration HI_HI	Value above configured monitoring limit
C040		Salinity Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, incorrect cell constant set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
C041		Salinity LO_LO	Value below configured monitoring limit
C042		Salinity LO	Value below configured monitoring limit
C043		Salinity HI	Value above configured monitoring limit
C044		Salinity HI_HI	Value above configured monitoring limit
C045		Conductance Range	Value above range limit. Possible causes: Sensor not/incorrectly connected, incorrect sensor for range, cable faulty (short circuit).
C060		Sad Sensoface Polarization	The sensor is polarized. Sensor is not suitable for the range or the process medium. Connect a suitable sensor.
C062		Sad Sensoface Cell Constant	Incorrect cell constant set, incorrect adjustment: Repeat calibration/adjustment. Replace the sensor as required.
C070		TDS Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, incorrect cell constant set.
C071		TDS LO_LO	Value below configured monitoring limit
C072		TDS LO	Value below configured monitoring limit
C073		TDS HI	Value above configured monitoring limit
C074		TDS HI_HI	Value above configured monitoring limit
C090	par	USP Limit	The configured USP limit was exceeded.
C091	par	Reduced USP Limit	The configured reduced USP limit was exceeded.
C110		CIP Counter	Configured number of CIP cycles exceeded: As required, calibrate/adjust sensor or replace.
C111		SIP Counter	Configured number of SIP cycles exceeded: As required, calibrate/adjust sensor or replace.
C113		Sensor Operating Time	Sensor operating time exceeded: Replace the sensor.
C120		Wrong Sensor	If sensor check is active: An impermissible sensor is connected to the device: Connect correct sensor or disable function.
C121		Sensor Error (Factory Settings)	The digital sensor indicates an error. The sensor no longer works properly. Replace the sensor.
C122		Sensor Memory (Cal Data)	The digital sensor indicates an error. The calibration data are defective: Recalibrate/readjust sensor.
C123		New Sensor, Adjustment Required	A new digital sensor was connected. It must now be adjusted.
C124		Sensor Date	The date of the sensor is implausible.e.g., calibration data "from the future": Check and, as necessary, adjust the configuration.

Error No.	Type	Message Text	Notes/Solution
C204	Info	Cal: Sensor Unstable	The drift criterion was not adhered to during calibration. Possible causes: Improper calibration. Sensor cable/connection faulty. Sensor worn out. Check the sensor and calibration and repeat as required. Otherwise, replace the sensor.
C205	Info	Cal: Sensor Failure	Replace the sensor.

### Cond/Cond Calculation Block

Error No.	Type	Message Text	Notes/Solution
E001		Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
E010		Conductivity Diff Range	Conductivity value difference. Max/min device limits exceeded: - Check both conductivity values. - Check sensor/cable connections.
E011		Conductivity Diff LO_LO	Value below configured monitoring limit
E012		Conductivity Diff LO	Value below configured monitoring limit
E013		Conductivity Diff HI	Value above configured monitoring limit
E014		Conductivity Diff HI_HI	Value above configured monitoring limit
E015		Temperature Diff Range	Temperature value difference. Max/min device limits exceeded: - Check both temperature values. - Check sensor/cable connections.
E016		Temperature Diff LO_LO	Value below configured monitoring limit
E017		Temperature Diff LO	Value below configured monitoring limit
E018		Temperature Diff HI	Value above configured monitoring limit
E019		Temperature Diff HI_HI	Value above configured monitoring limit
E020		Resistivity Diff Range	Resistivity difference. Max/min device limits exceeded: - Check both resistance values. - Check sensor/cable connections.
E021		Resistivity Diff LO_LO	Value below configured monitoring limit
E022		Resistivity Diff LO	Value below configured monitoring limit
E023		Resistivity Diff HI	Value above configured monitoring limit
E024		Resistivity Diff HI_HI	Value above configured monitoring limit
E030		RATIO Range	Ratio. Min/max device limits exceeded: - Check both conductivity values.
E031		RATIO LO_LO	Value below configured monitoring limit
E032		RATIO LO	Value below configured monitoring limit
E033		RATIO HI	Value above configured monitoring limit
E034		RATIO HI_HI	Value above configured monitoring limit
E035		PASSAGE Range	Passage. Min/max device limits exceeded: - Check both conductivity values.
E036		PASSAGE LO_LO	Value below configured monitoring limit
E037		PASSAGE LO	Value below configured monitoring limit
E038		PASSAGE HI	Value above configured monitoring limit
E039		PASSAGE HI_HI	Value above configured monitoring limit
E045		REJECTION Range	Rejection. Min/max device limits exceeded: - Check both conductivity values.

Error No.	Type	Message Text	Notes/Solution
E046	⊗	REJECTION LO_LO	Value below configured monitoring limit
E047	⚠	REJECTION LO	Value below configured monitoring limit
E048	⚠	REJECTION HI	Value above configured monitoring limit
E049	⊗	REJECTION HI_HI	Value above configured monitoring limit
E050	⊗	DEVIATION Range	Deviation. Min/max device limits exceeded: - Check both conductivity values.
E051	⊗	DEVIATION LO_LO	Value below configured monitoring limit
E052	⚠	DEVIATION LO	Value below configured monitoring limit
E053	⚠	DEVIATION HI	Value above configured monitoring limit
E054	⊗	DEVIATION HI_HI	Value above configured monitoring limit
E055	⊗	Remaining Capacity Range	The remaining capacity of the ion exchanger cannot be calculated.
E056	⊗	Degassed Conductivity	Min/max device limits exceeded: - Check both conductivity values.
E057	⚠	Ion Exchanger Remaining Capacity	Remaining capacity of the ion exchanger < 20 %: Check ion exchanger; as required, replace the filter or the ion exchanger.
	⊗		Remaining capacity of the ion exchanger 0 %: Replace the ion exchanger. Replacement of the ion exchanger must be confirmed in the Maintenance menu: <a href="#">Maintenance</a> ▶ <a href="#">[CI] [CII] Cond-Cond Calculation</a>
E060	⊗	pH Range	pH range outside the permitted range of the VGB guideline: - Check both conductivity values. - Check choice of alkalizing agent. - Check ion exchanger. - Check both sensors/cables.
E061	⊗	pH LO_LO	Value below configured monitoring limit
E062	⚠	pH LO	Value below configured monitoring limit
E063	⚠	pH HI	Value above configured monitoring limit
E064	⊗	pH HI_HI	Value above configured monitoring limit
E200	⚠	Param. Calculation Block	Check the configuration: <a href="#">Parameter Setting</a> ▶ <a href="#">System Control</a> ▶ <a href="#">Calculation Blocks</a>



**Conductivity (Inductive)**

Error No.	Type	Message Text	Notes/Solution
T001	⊗	Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
T008	⊗	Adjustment Data	Error in the adjustment data: Switch device off (approx. 10 s). If the message persists, send in the device.
T009	⊗	Firmware Error	Error in the firmware: Switch device off (approx. 10 s). Reload the firmware. → <i>Firmware Update (FW-E106)</i> , p. 220 If the message persists, send in the device.
T010	⊗	Conductivity Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell factor set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
T011	⊗	Conductivity LO_LO	Value below configured monitoring limit
T012	⚠	Conductivity LO	Value below configured monitoring limit
T013	⚠	Conductivity HI	Value above configured monitoring limit
T014	⊗	Conductivity HI_HI	Value above configured monitoring limit
T015	⊗	Temperature Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect temperature probe selected. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
T016	⊗	Temperature LO_LO	Value below configured monitoring limit
T017	⚠	Temperature LO	Value below configured monitoring limit
T018	⚠	Temperature HI	Value above configured monitoring limit
T019	⊗	Temperature HI_HI	Value above configured monitoring limit
T020	⊗	Resistivity range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell factor set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
T021	⊗	Resistivity LO_LO	Value below configured monitoring limit
T022	⚠	Resistivity LO	Value below configured monitoring limit
T023	⚠	Resistivity HI	Value above configured monitoring limit
T024	⊗	Resistivity HI_HI	Value above configured monitoring limit
T025	⊗	Concentration range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell factor set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
T026	⊗	Concentration LO_LO	Value below configured monitoring limit
T027	⚠	Concentration LO	Value below configured monitoring limit
T028	⚠	Concentration HI	Value above configured monitoring limit
T029	⊗	Concentration HI_HI	Value above configured monitoring limit
T040	⊗	Salinity Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell factor set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>

Error No.	Type	Message Text	Notes/Solution
T041	⊗	Salinity LO_LO	Value below configured monitoring limit
T042	⚠	Salinity LO	Value below configured monitoring limit
T043	⚠	Salinity HI	Value above configured monitoring limit
T044	⊗	Salinity HI_HI	Value above configured monitoring limit
T045	⊗	Conductance Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, incorrect sensor for range, cable faulty (short circuit).
T060	⚡	Sad Sensoface 😞 Primary Coil	Sensor faulty: Replace the sensor.
T061	⚡	Sad Sensoface 😞 Secondary Coil	Sensor faulty: Replace the sensor.
T063	⚡	Sad Sensoface 😞 Zero Point	Adjust the sensor zero point.
T064	⊗ ⚡	Sad Sensoface 😞 Cell Factor	Incorrect cell factor set, incorrect adjustment: Repeat calibration/ adjustment. Replace the sensor as required.
T070	⊗	TDS Range	Measuring range exceeded. Possible causes: Sensor not/incorrectly connected, cable incorrectly connected/faulty, range incorrectly specified, incorrect cell factor set. <a href="#">Parameter Setting</a> ▶ <a href="#">[II] Analog Cond</a> ▶ <a href="#">Sensor Data</a>
T071	⊗	TDS LO_LO	Value below configured monitoring limit
T072	⚠	TDS LO	Value below configured monitoring limit
T073	⚠	TDS HI	Value above configured monitoring limit
T074	⊗	TDS HI_HI	Value above configured monitoring limit
T090	par	USP Limit	Configured USP limit was exceeded.
T091	par	Reduced USP Limit	The configured reduced USP limit was exceeded.
T110	⚡	CIP Counter	Configured number of CIP cycles exceeded: As required, calibrate/adjust sensor or replace.
T111	⚡	SIP Counter	Configured number of SIP cycles exceeded: As required, calibrate/adjust sensor or replace.
T113	⚡	Sensor Operating Time	Sensor operating time exceeded: Replace the sensor.
T120	⊗	Wrong Sensor	If sensor check is active: An impermissible sensor is connected to the device: Connect correct sensor or disable function.
T121	⊗	Sensor Error (Factory Settings)	The digital sensor indicates an error. The sensor no longer works prop- erly. Replace the sensor.
T122	⚡	Sensor Memory (Cal Data)	The digital sensor indicates an error. The calibration data are defective: Recalibrate/readjust sensor.
T123	⚡	New Sensor, Adjustment Required	A new digital sensor was connected. It must now be adjusted
T124	⚡	Sensor Date	The date of the sensor is implausible.e.g., calibration data "from the future". Check and, as necessary, adjust the configuration.
T205	Info	Cal: Sensor Unstable	The drift criterion was not adhered to during calibration. Possible causes: improper calibration, sensor cable/connection faulty, sensor worn. Check the sensor and calibration and repeat as required. Otherwise, replace the sensor.

**Oxygen**


Error No.	Type	Message Text	Notes/Solution
D001	⊗	Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
D008	⊗	Adjustment Data	Error in the adjustment data: Switch device off (approx. 10 s). If the message persists, send in the device.
D009	⊗	Firmware Error	Error in the firmware: Switch device off (approx. 10 s). Reload the firmware. → <i>Firmware Update (FW-E106)</i> , p. 220
D010	⊗	Saturation %Air Range	Max/min limits of range exceeded or sensor not/incorrectly connected, cable faulty.
D011	⊗	Saturation %Air LO_LO	Value below configured monitoring limit
D012	⚠	Saturation %Air LO	Value below configured monitoring limit
D013	⚠	Saturation %Air HI	Value above configured monitoring limit
D014	⊗	Saturation %Air HI_HI	Value above configured monitoring limit
D015	⊗	Temperature Range	Max/min limits of range exceeded or sensor not/incorrectly connected, cable faulty.
D016	⊗	Temperature LO_LO	Value below configured monitoring limit
D017	⚠	Temperature LO	Value below configured monitoring limit
D018	⚠	Temperature HI	Value above configured monitoring limit
D019	⊗	Temperature HI_HI	Value above configured monitoring limit
D020	⊗	Concentration Range	Max/min limits of range exceeded, sensor not/incorrectly connected, cable faulty.
D021	⊗	Concentration LO_LO	Value below configured monitoring limit
D022	⚠	Concentration LO	Value below configured monitoring limit
D023	⚠	Concentration HI	Value above configured monitoring limit
D024	⊗	Concentration HI_HI	Value above configured monitoring limit
D025	⊗	Partial Pressure Range	Max/min limits of range exceeded, sensor not/incorrectly connected, cable faulty.
D045	⊗	Saturation %O2 Range	Max/min limits of range exceeded, sensor not/incorrectly connected, cable faulty.
D046	⊗	Saturation %O2 LO_LO	Value below configured monitoring limit
D047	⚠	Saturation %O2 LO	Value below configured monitoring limit
D048	⚠	Saturation %O2 HI	Value above configured monitoring limit
D049	⊗	Saturation %O2 HI_HI	Value above configured monitoring limit
D060	⊗	Sad Sensoface 😞 Slope	- Readjust sensor. - Check/refill electrolyte. - Replace sensor.
D061	⚠	Neutral Sensoface 😐 Zero Point	- Readjust sensor. - Check/refill electrolyte. - Replace sensor.
D062	par	Sad Sensoface 😞 Sensocheck	- Readjust configured sensor. - Replace sensor.
D063	⚠	Sad Sensoface 😞 Response Time	- Check/refill electrolyte. - Replace sensor.

Error No.	Type	Message Text	Notes/Solution
D064		Sad Sensoface 😞 Cal Timer	Calibration timer has expired: - Check the calibration timer settings. - Carry out calibration/adjustment.
D070	par	Sad Sensoface 😞 Wear	Sensor is worn (100 %): - Readjust sensor. - Check/refill electrolyte. - Replace sensor.
D080		Sensor Current Range	- Check polarization voltage: Parameter Setting ▶ [I] [II] ... Oxy ▶ Sensor Data - Refill electrolyte. - Recalibrate/readjust.
D110		CIP Counter	Configured number of CIP cycles exceeded: As required, recalibrate/ readjust sensor or replace.
D111		SIP Counter	Configured number of SIP cycles exceeded: As required, recalibrate/ readjust sensor or replace.
D112		Autoclaving Counter	Configured number of autoclaving cycles exceeded: As required, recalibrate/readjust sensor or replace.
D113		Sensor Operating Time	Sensor operating time exceeded. Replace the sensor.
D114		Membrane Body Replacement	Replacement of the membrane body required. Replacement of the membrane body must be confirmed in the Maintenance menu. → <i>Channel I/II Maintenance Functions, p. 140</i>
D120		Wrong Sensor	If sensor check is active: An impermissible sensor is connected to the device. - Replace sensor. - Change the process variable.
D121		Sensor Error (Factory Settings)	The digital sensor indicates an error. The sensor no longer works properly. Replace the sensor.
D122		Sensor Memory (Cal Data)	The digital sensor indicates an error. The calibration data is defective: Recalibrate/readjust sensor.
D123		New Sensor, Adjustment Required	A new digital sensor was connected. It must now be adjusted.
D124		Sensor Date	The date of the sensor is implausible, e.g., calibration data "from the future": Check and, as necessary, adjust the configuration.
D200		Temp O2 Conc/Sat	The temperature is outside the valid range for oxygen concentration/ saturation.
D201		Cal: Temperature	The calibration temperature is impermissible: Check the calibration temperature. Note the information in the Calibration chapter. → <i>Oxygen Process Variable Calibration/Adjustment, p. 128</i>
D205	Info	Cal: Sensor Unstable	The drift criterion was not adhered to during calibration. Possible causes: improper calibration, sensor cable/connection faulty, sensor worn. Check the sensor and calibration and repeat as required. Otherwise, replace the sensor.

**Oxy/Oxy Calculation Block**

Error No.	Type	Message Text	Notes/Solution
H001	⊗	Configuration Data Loss	Data error in the configuration: Fully reconfigure the device.
H010	⊗	Saturation %Air Diff Range	Saturation value difference. Max/min device limits exceeded: - Check both saturation values. - Check sensor/cable connections.
H011	⊗	Saturation %Air Diff LO_LO	Value below configured monitoring limit
H012	⚠	Saturation %Air Diff LO	Value below configured monitoring limit
H013	⚠	Saturation %Air Diff HI	Value above configured monitoring limit
H014	⊗	Saturation %Air Diff HI_HI	Value above configured monitoring limit
H015	⊗	Temperature Diff Range	Temperature value difference. Max/min device limits exceeded: - Check both temperature values. - Check sensor/cable connections.
H016	⊗	Temperature Diff LO_LO	Value below configured monitoring limit
H017	⚠	Temperature Diff LO	Value below configured monitoring limit
H018	⚠	Temperature Diff HI	Value above configured monitoring limit
H019	⊗	Temperature Diff HI_HI	Value above configured monitoring limit
H020	⊗	Conc. (Liquid) Diff Range	Concentration value difference. Max/min device limits exceeded: - Check both concentration values. - Check sensor/cable connections.
H021	⊗	Conc. (Liquid) Diff LO_LO	Value below configured monitoring limit
H022	⚠	Conc. (Liquid) Diff LO	Value below configured monitoring limit
H023	⚠	Conc. (Liquid) Diff HI	Value above configured monitoring limit
H024	⊗	Conc. (Liquid) Diff HI_HI	Value above configured monitoring limit
H045	⊗	Saturation %O2 Diff Range	Saturation value difference. Max/min device limits exceeded: - Check both saturation values. - Check sensor/cable connections.
H046	⊗	Saturation %O2 Diff LO_LO	Value below configured monitoring limit
H047	⚠	Saturation %O2 Diff LO	Value below configured monitoring limit
H048	⚠	Saturation %O2 Diff HI	Value above configured monitoring limit
H049	⊗	Saturation %O2 Diff HI_HI	Value above configured monitoring limit
H090	⊗	Conc. (Gas) Diff Range	Concentration value difference. Max/min device limits exceeded: - Check both concentration values. - Check sensor/cable connections.
H091	⊗	Conc. (Gas) Diff LO_LO	Value below configured monitoring limit
H092	⚠	Conc. (Gas) Diff LO	Value below configured monitoring limit
H093	⚠	Conc. (Gas) Diff HI	Value above configured monitoring limit
H094	⊗	Conc. (Gas) Diff HI_HI	Value above configured monitoring limit
H200	↔	Param. Calculation Block	Check the configuration: <a href="#">Parameter Setting</a> ▶ <a href="#">System Control</a> ▶ <a href="#">Calculation Blocks</a>

### 10.3 Sensocheck and Sensoface

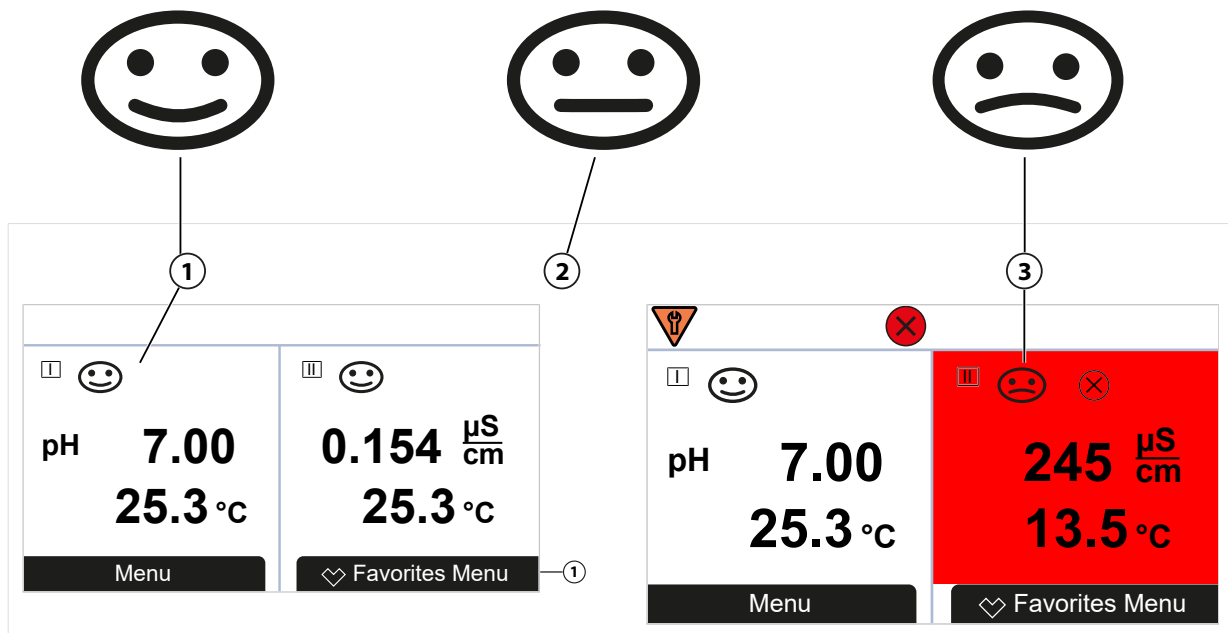

1 Happy Sensoface                      2 Neutral Sensoface                      3 Sad Sensoface

The Sensoface icons provide the user with diagnostic information on wear and required maintenance of the sensor. In measuring mode, an icon (happy, neutral, or sad smiley) is shown on the display to reflect the continuous monitoring of the sensor parameters.

You can configure the current outputs so that a Sensoface message generates a 22-mA error signal:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I... ▶ Behavior During Messages

The Sensoface message can also be output via a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... → Usage: Sensoface, p. 62

#### Enabling/Disabling Sensoface

Sensoface is enabled and disabled in the **Sensor Data** submenu:

Parameter Setting ▶ [I] [II] [Sensor] ▶ Sensor Data

**Note:** After a calibration, a smiley is always displayed for confirmation, even if Sensoface is disabled.



Sensoface messages can be assigned to a relay contact:

Parameter Setting ▶ Inputs/Outputs ▶ Relay Contacts ▶ Contact K... ▶ Usage



If you select **Sensoface**, all Sensoface messages are output via the selected contact.

If you select **Sensoface (Channel)**, you can output the Sensoface messages from a specific channel via the selected contact.



**Sensoface Criteria****pH**

Sensoface	Slope	Zero Point <sup>1)</sup>
 Happy	53.3 ... 61 mV/pH	pH 6 ... 8
 Sad	< 53.3 mV/pH or > 61 mV/pH	< pH 6 or > pH 8





**Conductivity (Contacting)**

Sensoface	Cell Constant	
	Analog Sensors	Memosens
 Happy	0.005 cm <sup>-1</sup> ... 19.9999 cm <sup>-1</sup>	0.5x nom. cell constant ... 2x nom. cell constant
 Sad	< 0.005 cm <sup>-1</sup> or > 19.9999 cm <sup>-1</sup>	< 0.5x nom. cell constant or > 2x nom. cell constant

**Conductivity (Inductive)**

Sensoface	Cell Factor		Zero Point
	Analog Sensors	Memosens	
 Happy	0.1 cm <sup>-1</sup> ... 19.9999 cm <sup>-1</sup>	0.5x nom. cell factor ... 2x nom. cell factor	-0.25 mS ... 0.25 mS
 Sad	< 0.1 cm <sup>-1</sup> or > 19.9999 cm <sup>-1</sup>	< 0.5 x nom. cell factor or > 2 x nom. cell factor	< -0.25 mS or > 0.25 mS

**Oxygen**

Sensoface	Slope		
	Standard Sensor (SE7*6)	Trace Sensor 01 (SE7*7 ...)	Trace Sensor 001
 Happy	-110 nA ... -30 nA	-525 nA ... -225 nA	-8000 nA ... -2500 nA
 Sad	< -110 nA or > -30 nA	< -525 nA or > -225 nA	< -8000 nA or > -2500 nA
Sensoface	Zero Point		
	Standard Sensor (SE7*6)	Trace Sensor 01 (SE7*7 ...)	Trace Sensor 001
 Happy	-1 nA ... 1 nA	-1 nA ... 1 nA	-3 nA ... 3 nA
 Sad	< -1 nA or > 1 nA	< -1 nA or > 1 nA	< -3 nA or > 3 nA

**Note:** The worsening of a Sensoface criterion leads to the devaluation of the Sensoface indicator (Smiley gets "sad"). An improvement of the Sensoface indicator can only take place after calibration or removal of the sensor defect.

<sup>1)</sup> Applies to standard sensors with zero point pH 7

## Sensocheck

Process Variable	Sensocheck Function
pH:	Automatic monitoring of glass and reference electrode
Oxygen:	Monitoring membrane/electrolyte
Conductivity:	Information on sensor condition

### Enable/Disable Sensocheck

Sensocheck is enabled and disabled in the **Sensor Data** submenu:

With Memosens:

**Parameter Setting** ▶ **[I] [II] Memosens ...** ▶ **Sensor Data** ▶ **Sensor Monitoring Details** ▶ **Sensocheck**

You can enable or disable Sensocheck in the **Monitoring** menu item.

In the **Message** menu item, select whether a Sensocheck message is output as a Failure or Maintenance Required message.

With analog sensors:

**Parameter Setting** ▶ **[I] [II] [Sensor]** ▶ **Sensor Data** ▶ **Sensocheck**

In the **Sensocheck** menu item, you can disable Sensocheck or choose to output a Sensocheck message as a Failure or Maintenance Required message.



## **11 Decommissioning**

### **11.1 Disposal**

The local codes and regulations must be observed when disposing of the product.

### **11.2 Returns**

If required, send the product in a clean condition and securely packed to your local contact.

→ *knick.de*

## 12 Accessories

### 12.1 Memory Card

Memory cards are used to save data or make firmware changes in conjunction with the Stratos Multi E401X. The device's measurement data, configuration data, and firmware can be saved.


Settings can be changed in **System Control** :

Menu Selection ▶ Parameter Setting ▶ System Control ▶ Memory Card

#### Inserting/Removing the Memory Card

**⚠ WARNING! Explosion hazard** While switched on, the device must not be opened during operation in hazardous locations. Before inserting or removing the ZU1080-S-X-... memory card, make sure that the device has been disconnected from the power.


01. Deactivate any Data Card currently in use; see below.
02. Switch off the power supply to the device.
03. Loosen the 4 screws on the front.
04. Open the front unit.
05. Take the memory card out of its packaging.
06. Insert the memory card with the connections at the front into the memory card slot on the front unit.

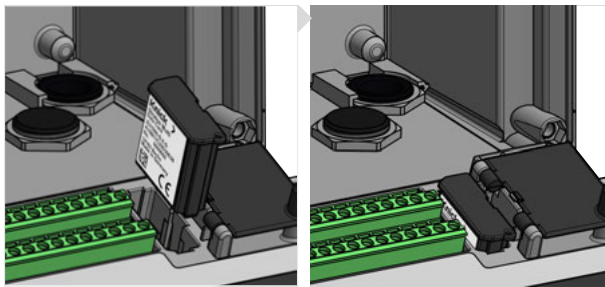

07. Close the housing and successively tighten the enclosure screws in a diagonal pattern.
  - ✓ After switching on, the display shows an icon indicating the memory card type.

#### Deactivating the Data Card

**Note:** When using a Data Card: Before disconnecting the supply voltage and before removing, the memory card must be deactivated to prevent data being exposed to potential loss.

01. Open the **Maintenance** menu.
02. **Open/Close Memory Card** :
03. Terminate access to the memory card using the **right softkey: Close**.
  - ✓ The Data Card icon on the display is marked with an [x] .
04. Switch off the power supply to the device.
05. Remove the memory card; see above.

### Reactivating the Data Card

If the Data Card is not removed after being deactivated, the Data Card icon on the display remains marked with an [x]. The Data Card must be reactivated for further use:

01. Open the **Maintenance** menu.
02. **Open/Close Memory Card** :
03. Reactivate the memory card using the **right softkey: Open**.
  - ✓ The Data Card icon reappears on the display and the memory card can be used again.

**Note:** If using a different memory card, e.g., an FW Update Card, these steps can be omitted.

### Connection to PC

Connect the memory card to the computer via a micro USB cable.






**Note:** Outside hazardous locations, the ZU1080-S-X-\* memory card may be connected to a normal computer.



1 Micro USB port

2 Stratos Multi system connection

## Memory Card Types and Icons

Symbol	Card Type (Original Accessory)	Purpose
	Data Card ZU1080-S-X-D	Data recording (e.g., configuration, parameter sets, logbook, measurement recorder data). The icon flashes to indicate active data transmission. The Data Card can be used in combination with the following TAN options:  FW-E102 Parameter Sets 1-5 FW-E103 Measurement Recorder FW-E104 Logbook
	FW Update Card ZU1080-S-X-U	Firmware update to expand functionality (TAN option FW-E106) In this case, the previous firmware is replaced by a new version. General data cannot be stored on this memory card.
	FW Repair Card ZU1080-S-X-R	Free firmware repair in the event of device errors. The TAN option FW-E106 is not required here. General data cannot be stored on this memory card.
	Custom FW Update Card ZU1080-S-X-S	Customer-specific FW versions Firmware update to expand functionality (TAN option FW-E106) A Custom FW Update Card can also be used to save older versions of the firmware. General data cannot be stored on this memory card.
	Custom FW Repair Card ZU1080-S-X-V	Customer-specific FW repair versions When using custom cards, the firmware version can be selected, e.g., in order to standardize the firmware of all available devices to a version that has been proven in use.

### Firmware Update with FW Update Card

A firmware update with FW Update Card requires TAN option FW-E106.

→ *Firmware Update (FW-E106)*, p. 220

### Firmware Repair with FW Update Card

**Note:** The firmware update add-on function need not be active for troubleshooting with the FW Repair Card.

01. Switch off the power supply to the device.
02. Open the housing.
03. Insert the FW Repair Card into the memory card slot in the front unit.
04. Close the housing.
05. Switch on the power supply.
06. The automatic update process starts.

## 13 Specifications

### 13.1 Power

Power supply, terminals 17, 18	80 V (- 15 %) ... 230 (+ 10 %) V AC; approx. 15 VA; 45 ... 65 Hz 24 V (- 15 %) ... 60 (+ 10 %) V DC; 10 W
	Overvoltage category II, protection class II, pollution degree 2
Test voltage	Type test 3 kV AC 1 min after moisture pre-treatment Routine test 1.4 kV for 2 s

### 13.2 Sensor Inputs (Intrinsically Safe)

Explosion protection	See control drawings for entity parameters
<b>Sensor input 1</b>	For Memosens, galvanically isolated
Data In/Out	Asynchronous interface RS-485, 9600 Bd
Power supply	3.08 V (3.02 ... 3.22 V)/6 mA, $R_i < 1 \Omega$ , short-circuit-proof
<b>Sensor input 2</b>	For measuring module or analog/ISM <sup>1)</sup> measuring module, galvanically isolated
Data In/Out	Asynchronous interface RS-485, 9600 Bd
Power supply	3.08 V (3.02 ... 3.22 V)/6 mA, $R_i < 1 \Omega$ , short-circuit-proof

### 13.3 Inputs and Outputs (SELV, PELV)

<b>Input OK1, OK2</b>	Galvanically isolated (optocoupler) Switching between parameter sets A/B, flow measurement, function check
Parameter set switching (OK1)	Relay input 0 ... 2 V (AC/DC) parameter set A Relay input 10 ... 30 V (AC/DC) parameter set B Control current 5 mA
Flow (OK1)	Pulse input for flow measurement 0 ... 100 pulses per second Display: 00.0 ... 99.9 l/h Message via 22 mA, alarm contact or limit contacts
<b>Current input TAN option FW-E051</b>	Current input 0/4 ... 20 mA at 50 $\Omega$ Input of measured pressure values from external sensors Supplied current must be galvanically isolated.
Start/end of scale	Within range
Characteristic	Linear
Resolution	Approx. 0.05 mA
Measurement error <sup>2)</sup>	4 ... 20 mA: < 1 % of current value + 0.1 mA 0 ... 20 mA: < 1 % of current value + 0.1 mA + 10 $\mu$ A/K
<b>Output 1, 2 Out 1, Out 2</b>	0/4 ... 20 mA, floating, load resistance up to 500 $\Omega$ Output 1: HART communication with 4 ... 20 mA Output 2 galvanically connected with outputs 3 and 4
Failure message	3.6 mA (with 4 ... 20 mA) or 22 mA, user-defined
Active	Max. 11 V
Process variable	Selection from all available process variables
Start/end of scale	Configurable within selected range
Characteristic	Linear, bi-/trilinear, or logarithmic
Output filter	PT1 filter, filter time constant 0 ... 120 s
Measurement error <sup>2)</sup>	< 0.25 % of current value + 0.025 mA

<sup>1)</sup> ISM with TAN option FW-E053

<sup>2)</sup> At rated operating conditions

<b>Output 3, 4, Out 3, Out 4 TAN Option FW-E052</b>	0/4 ... 20 mA, floating, galvanically connected to output 2, load resistance up to 250 Ω
Failure message	3.6 mA (with 4 ... 20 mA) or 22 mA, user-defined
Active	Max. 5.5 V
Process variable	Selection from all available process variables
Start/end of scale	Configurable within selected range
Characteristic	Linear, bi-/trilinear, or logarithmic
Output filter	PT1 filter, filter time constant 0 ... 120 s
<b>Contact REL1, REL2, REL3</b>	Relay contact, floating
Contact rating with ohmic load	AC < 30 V <sub>rms</sub> / < 15 VA DC < 30 V / < 15 W
Max. switching current	3 A, max. 25 ms
Max. continuous current	500 mA
User-definable: Failure, maintenance required, function check, min/max limit, PID controller, rinse contact, parameter set B signaling, USP output, Sensoface	
<b>Alarm contact</b>	
Contact response	N/C (fail-safe type)
Response delay	0000 ... 0600 s
<b>Rinse contact</b>	To control a simple cleaning system
Contact rating with ohmic load	AC < 30 V <sub>rms</sub> / < 15 VA DC < 30 V / < 15 W
Max. switching current	3 A, max. 25 ms
Max. continuous current	500 mA
Contact response	N/C or N/O
Interval	000.0 ... 999.9 h (000.0 h = cleaning function disabled)
Cleaning time/relax time	0000 ... 1999 s
<b>Min/max limits</b>	Min/max contacts, floating, interconnected
Contact response	N/C or N/O
Response delay	0000 ... 9999 s
Setpoints	Within selected range
Hysteresis	User-defined
<b>PID process controller</b>	Output via limit contacts
Setpoint specification	Within selected range
Neutral zone	Depending on process variable pH: pH 0 ... 5 / 0 ... 500 mV / 0 ... 50 K
P action	Controller gain Kp: 0010 ... 9999 %
I action	Reset time Tr: 0000 ... 9999 s (0000 s = no integral action)
D action	Rate time Td: 0000 ... 9999 s (0000 s = no derivative action)
Controller type	Pulse length controller or pulse frequency controller
Pulse period	0001 ... 0600 s, minimum ON time 0.5 s (pulse length controller)
Max. pulse frequency	0001 ... 0180 min <sup>-1</sup> (pulse frequency controller)
<b>Service functions in the Maintenance menu</b>	
Current source	Current specifiable for output 1 ... 4 (00.00 ... 22.00 mA)
Manual controller	Controller output directly specifiable (start control processes)
Sensor monitor	Direct display of measured values from sensor (mV, temperature, resistance, ...)
Relay test	Manual control of relay contacts

## 13.4 Device

<b>Product name</b>	Stratos Multi
<b>Product type</b>	E401X
<b>Measurements</b>	pH ORP Amperometric oxygen Contacting/inductive conductivity Dual conductivity
<b>2 parameter sets</b>	Parameter set A and B
Select via digital control input OK1 or manually	
<b>Memory card</b>	Accessory for additional functions (firmware update, measurement records, logbook)
Memory size	32 MB
Logbook	For exclusive use: min. 20,000 entries
Measurement recorder	For exclusive use: min. 20,000 entries
Computer ports	Micro USB
Connection to device	Plug
Communication	USB 2.0, high-speed, 12 Mbit/s Data Card, MSD (Mass Storage Device) FW Update Card, FW Repair Card: HID (human interface device)
Dimensions	L 32 mm x W 12 mm x H 30 mm
<b>Display</b>	Graphical TFT color display, 4.3", white backlighting
Resolution	480 x 272 pixels
Language	German, English, French, Spanish, Italian, Portuguese, Chinese, Korean, Swedish
Sensoface	Sensor status display: Happy, neutral, sad smileys
Status indicators	Icons for parameter setting and messages
<b>Keypad</b>	Softkey 1 left, softkey 2 right, arrow keys (cursor), enter
<b>Real-time clock</b>	Different time and date formats selectable, power reserve approx. 1 day
<b>Housing</b>	
Molded enclosure	Glass fiber reinforced Front unit material: PBT Rear unit material: PC
Protection	IP66/IP67/TYP 4X outdoor (with pressure compensation) when the device is closed
Flammability	UL 94 V-0 for external parts
Weight	1.2 kg (1.6 kg incl. accessories and packaging)
Mounting	Wall, pipe/post or panel mounting
Color	Gray RAL 7001
Dimensions	H 148 mm, W 148 mm, D 117 mm
Control panel cutout	138 mm x 138 mm acc. to DIN 43 700
<b>Cable glands</b>	
5 knockouts for M20 x 1.5 cable glands	
2 of 5 knockouts for NPT ½" or rigid metallic conduit	
<b>Terminals</b>	
Screw terminals	For single and stranded wires 0.2 ... 2.5 mm <sup>2</sup>
Tightening torque	0.5 ... 0.6 Nm
<b>Wiring</b>	
Stripping length	Max. 7 mm
Temperature resistance	> 75 °C / 167 °F

### 13.5 Rated Operating Conditions

Climatic class	3K5 according to EN 60721-3-3
Location class	C1 according to EN 60654-1
Ambient temperature	-20 ... 55 °C / -4 ... 131 °F
Altitude of installation site	Max. 60 V DC power supply at altitudes above 2000 m (AMSL)
Relative humidity	5 ... 95 %

### 13.6 Transport and Storage

Transport/storage temperature	-30 ... 70 °C / -22 ... 158 °F
-------------------------------	--------------------------------

### 13.7 Conformity

EMC	EN 61326-1, NAMUR NE 21
Emitted interference	Class A (industrial applications) <sup>1)</sup>
Interference immunity	Industrial applications
RoHS conformity	According to EU directive 2011/65/EU
Electrical safety	According to EN 61010-1, Protection against electric shock by reinforced insulation of all extra-low-voltage circuits against mains

### 13.8 Interfaces

#### HART communication, TAN option FW-E050

HART version 7.x	Digital communication via FSK modulation of output current 1 Device identification, measured values, statuses, and messages Certified by HART: Out 1 passive
Conditions	Output current $\geq 3.8$ mA and load resistance $\geq 250 \Omega$

<sup>1)</sup> This equipment is not designed for domestic use, and is unable to guarantee adequate protection of the radio reception in such environments.



## 13.9 Measuring Functions

### 13.9.1 pH

#### Memosens input

Input for Memosens sensors (pH, ORP, pH/ORP)

Terminals 1 ... 5 or MK-MS095X module

Display ranges	Temperature: -20.0 ... 200.0 °C / -4 ... 392 °F
	pH value: -2.00 ... 16.00
	ORP: -1999 ... 1999 mV
	rH value (with pH/ORP sensor): 0 ... 42.5

Measurement error	Depending on sensor
-------------------	---------------------

#### Module input, analog or ISM <sup>1)</sup>

For pH and ORP sensors with MK-PH015X

Measuring ranges	Temperature: -20.0 ... 200.0 °C / -4 ... 392 °F
	pH value: -2.00 ... 16.00
	ORP: -1999 ... 1999 mV
	rH value (with pH/ORP sensor): 0 ... 42.5

Glass electrode input	Input resistance > 1 x 10 <sup>12</sup> Ω
Reference temperature	Input current < 1 x 10 <sup>-12</sup> A
25 °C/77 °F	Impedance range: 0.5 ... 1000 MΩ (± 20 %)

Reference electrode input	Input resistance > 1 x 10 <sup>10</sup> Ω
Reference temperature	Input current < 1 x 10 <sup>-10</sup> A
25 °C/77 °F	Impedance range: 0.5 ... 200 kΩ (± 20 %)

Measurement error <sup>2) 3)</sup>	pH value < 0.02, TC: 0.002 pH/K mV value < 1 mV, TC: 0.1 mV/K
------------------------------------	--

#### Temperature input via module

Pt100/Pt1000/NTC 30 kΩ/NTC 8.55 kΩ/Balco 3 kΩ

2-wire connection, adjustable

Measuring ranges	Pt100/Pt1000: -20.0 ... 200.0 °C / -4 ... 392 °F
	NTC 30 kΩ: -20.0 ... 150.0 °C / -4 ... 302 °F
	NTC 8.55 kΩ (Mitsubishi): -10.0 ... 130.0 °C / 14 ... 266 °F
	Balco 3 kΩ: -20.0 ... 130.0 °C / -4 ... 266 °F

Adjustment range	10 K
------------------	------

Resolution	0.1 °C / 0.1 °F
------------	-----------------

Measurement error <sup>2) 3)</sup>	< 0.5 K (< 1 K for Pt100; < 1 K for NTC > 100 °C/212 °F)
------------------------------------	--

#### Temperature compensation

Off

Linear characteristic 00.00 ... 19.99 %/K

Ultrapure water

Table: 0 ... 95 °C, user-defined in 5-K steps

Ref. temperature	25 °C / 77 °F
------------------	---------------

<sup>1)</sup> ISM with TAN option FW-E053

<sup>2)</sup> At rated operating conditions

<sup>3)</sup> ± 1 count, plus sensor error

**pH calibration and adjustment**

Calibration with automatic buffer recognition (Calimatic)

Manual calibration with entry of individual buffer values

Product calibration

Data entry of premeasured sensors

ISFET zero point (with ISFET sensors)

Temperature probe adjustment

Calculation of nominal zero point

Max. calibration range	Asymmetry potential (zero point): $\pm 60$ mV Slope: 80 ... 103 % (47.5 ... 61 mV/pH)
------------------------	--

Zero adjustment	$\pm 750$ mV for Memosens ISFET
-----------------	---------------------------------

**Buffer sets**

Knick CaliMat	2.00/4.00/7.00/9.00/12.00
---------------	---------------------------

Mettler-Toledo	2.00/4.01/7.00/9.21
----------------	---------------------

Merck/Riedel	2.00/4.00/7.00/9.00/12.00
--------------	---------------------------

DIN 19267	1.09/4.65/6.79/9.23/12.75
-----------	---------------------------

NIST Standard	1.679/4.005/6.865/9.180
---------------	-------------------------

NIST technical	1.68/4.00/7.00/10.01/12.46
----------------	----------------------------

Hamilton	2.00/4.01/7.00/10.01/12.00
----------	----------------------------

Kraft	2.00/4.00/7.00/9.00/11.00
-------	---------------------------

Hamilton A	2.00/4.01/7.00/9.00/11.00
------------	---------------------------

Hamilton B	2.00/4.01/6.00/9.00/11.00
------------	---------------------------

HACH	4.01/7.00/10.01
------	-----------------

Ciba (94)	2.06/4.00/7.00/10.00
-----------	----------------------

WTW techn. buffers	2.00/4.01/7.00/10.00
--------------------	----------------------

Reagecon	2.00/4.00/7.00/9.00/12.00
----------	---------------------------

Specifiable buffer set	TAN Option FW-E002
------------------------	--------------------

**ORP calibration and adjustment**

ORP data entry

ORP adjustment

ORP check

Temperature probe adjustment

Max. calibration range	-700 ... 700 $\Delta$ mV
------------------------	--------------------------

**Adaptive calibration timer**

Interval	0000 ... 9999 h
----------	-----------------

### 13.9.2 Conductivity (Contacting)

#### Memosens input

Input for Memosens sensors

Terminals 1 ... 5 or MK-MS095X module

Measurement error      Depending on sensor

#### Module input, analog

Input for analog 2- or 4-electrode sensors with MK-COND025X module

Measuring ranges      2-electrode sensors: 0.2  $\mu\text{S} \cdot \text{cm}$  ... 200  $\text{mS} \cdot \text{cm}$   
 (Conductance limited to      4-electrode sensors: 0.2  $\mu\text{S} \cdot \text{cm}$  ... 1000  $\text{mS} \cdot \text{cm}$   
 3500  $\text{mS}$ )

Measurement error <sup>1) 2)</sup>      < 1 % of measured value + 0.4  $\mu\text{S} \cdot \text{cm}$

#### Temperature input via module

Pt100/Pt1000/Ni100/NTC 30 k $\Omega$ /NTC 8.55 k $\Omega$  (Betatherm)

3-wire connection, adjustable

Measuring ranges      Pt100/Pt1000: -50.0 ... 250.0  $^{\circ}\text{C}$  / -58 ... 482  $^{\circ}\text{F}$   
                                  Ni100: -50.0 ... 180.0  $^{\circ}\text{C}$  / -58 ... 356  $^{\circ}\text{F}$   
                                  NTC 30 k $\Omega$ : -20.0 ... 150.0  $^{\circ}\text{C}$  / -4 ... 302  $^{\circ}\text{F}$   
                                  NTC 8.55 k $\Omega$ : -10.0 ... 130.0  $^{\circ}\text{C}$  / 14 ... 266  $^{\circ}\text{F}$

Resolution      0.1  $^{\circ}\text{C}$  / 0.1  $^{\circ}\text{F}$

Measurement error <sup>1) 2)</sup>      < 0.5 K (< 1 K for Pt100; < 1 K for NTC > 100  $^{\circ}\text{C}$ /212  $^{\circ}\text{F}$ )

#### Display ranges

Conductivity      0.000 ... 9.999  $\mu\text{S}/\text{cm}$   
                                  00.00 ... 99.99  $\mu\text{S}/\text{cm}$   
                                  000.0 ... 999.9  $\mu\text{S}/\text{cm}$   
                                  0.000 ... 9.999  $\text{mS}/\text{cm}$   
                                  00.00 ... 9.99  $\text{mS}/\text{cm}$   
                                  000.0 ... 999.9  $\text{mS}/\text{cm}$   
                                  0.000 ... 9.999  $\text{S}/\text{m}$   
                                  00.00 ... 99.99  $\text{S}/\text{m}$

Resistivity      00.00 ... 99.99  $\text{M}\Omega \text{ cm}$

Concentration      0.00 ... 99.99 %

Salinity      0.0 ... 45.0 ‰ (0 ... 35  $^{\circ}\text{C}$  / 32 ... 95  $^{\circ}\text{F}$ )

TDS      0 ... 5000  $\text{mg}/\text{l}$  (10 ... 40  $^{\circ}\text{C}$  / 50 ... 104  $^{\circ}\text{F}$ )

Response time (T90)      Approx. 1 s

#### USP function

Water monitoring in the pharmaceutical industry (USP<645>) with additionally specifiable limit (%)

Output via a relay contact

#### Calibration and adjustment

Automatic with standard calibration solution

Calibration by entry of cell constant

Product calibration

Temperature probe adjustment

Permissible cell constant      00.0050 ... 19.9999  $\text{cm}^{-1}$

<sup>1)</sup> At rated operating conditions

<sup>2)</sup>  $\pm 1$  count, plus sensor error

### 13.9.3 Conductivity (Inductive)

#### Digital input

Input for Memosens or SE680X-\*K toroidal conductivity sensors

Terminals 1 ... 5 or MK-MS095 module

Measurement error            Depending on sensor

#### Module input, analog

Input for SE655X/SE656X toroidal conductivity sensors with MK-CONDI035X module

Measurement error <sup>1) 2)</sup>      < 1 % of measured value + 0.005 mS/cm

#### Temperature input via module

Pt100/Pt1000/NTC 30 kΩ

3-wire connection, adjustable

Measuring ranges                Pt100/Pt1000: -50.0 ... 250.0 °C / -58 ... 482 °F

NTC 30 kΩ: -20.0 ... 150.0 °C / -4 ... 302 °F

Resolution                      0.1 °C / 0.1 °F

Measurement error <sup>1) 2)</sup>      0.5 K (< 1 K for Pt100; < 1 K for NTC > 100 °C/212 °F)

#### Display ranges

Conductivity                    000.0 ... 999.9 μS/cm

0.000 ... 9.999 mS/cm

00.00 ... 99.99 mS/cm

000.0 ... 999.9 mS/cm

0000 ... 1999 mS/cm

0.000 ... 9.999 S/m

00.00 ... 99.99 S/m

Concentration                 0.00 ... 9.99 % / 10.0 ... 100.0 %

Salinity                         0.0 ... 45.0 ‰ (0 ... 35 °C / 32 ... 95 °F)

TDS                              0 ... 5000 mg/l (10 ... 40 °C / 50 ... 104 °F)

Response time (T90)         Approx. 1 s

#### USP Function

Water monitoring in the pharmaceutical industry (USP<645>) with additionally specifiable limit (%)

Output via a relay contact

#### Calibration and adjustment

Automatic with standard calibration solution

Calibration by input of cell factor

Product calibration

Installation factor

Zero correction

Temperature probe adjustment

Permissible cell factor        00.100 ... 19.999 cm<sup>-1</sup>

Permissible transfer ratio    010.0 ... 199.9

Permissible offset             ± 0.5 mS

Permissible installation      0.100 ... 5.000  
factor

<sup>1)</sup> At rated operating conditions

<sup>2)</sup> ± 1 count, plus sensor error

### 13.9.4 Conductivity (Dual)

#### Digital input

Input for Memosens sensors

Terminals 1 ... 5 and MK-MS095X module

Also possible: Memosens sensor and analog sensor via MK COND025X module

→ *Conductivity (Contacting) Process Variable, p. 79*

Measurement error	Depending on sensor
-------------------	---------------------

#### Display ranges

Conductivity	0.000 ... 9.999 $\mu\text{S}/\text{cm}$
--------------	---

00.00 ... 99.99 $\mu\text{S}/\text{cm}$
---

000.0 ... 999.9 $\mu\text{S}/\text{cm}$
---

0000 ... 9999 $\mu\text{S}/\text{cm}$
---------------------------------------

Resistivity	00.00 ... 99.99 $\text{M}\Omega \text{ cm}$
-------------	---

Response time (T90)	Approx. 1 s
---------------------	-------------

#### Calibration and adjustment

Automatic with standard calibration solution

Calibration by entry of cell constant

Product Calibration

Temperature probe adjustment

Permissible cell constant	00.0050 ... 19.9999 $\text{cm}^{-1}$
---------------------------	--------------------------------------

**13.9.5 Temperature Compensation (Conductivity)**

Off	Without
Linear	Linear characteristic 00.00 ... 19.99 %/K Reference temperature adjustable Reference temperature 25 °C/77 °F:
NLF	Natural waters acc. to EN 27888
NaCl	NaCl from 0 (ultrapure water) to 26 wt% (0 ... 120 °C/32 ... 248 °F)
HCl	Ultrapure water with HCl traces (0 ... 120 °C/32 ... 248 °F)
NH <sub>3</sub>	Ultrapure water with NH <sub>3</sub> traces (0 ... 120 °C/32 ... 248 °F)
NaOH	Ultrapure water with NaOH traces (0 ... 120 °C/32 ... 248 °F)

**13.9.6 Concentration Determination, Conductivity (TAN Option FW-E009)**

NaCl	0 ... 28 wt% (0 ... 100 °C/32 ... 212 °F)
HCl	0 ... 18 wt% (-20 ... 50 °C/-4 ... 122 °F) 22 ... 39 wt% (-20 ... 50 °C/-4 ... 122 °F)
NaOH The range limits apply to 25 °C/77 °F.	0 ... 24 wt% (0 ... 100 °C/32 ... 212 °F) 15 ... 50 wt% (0 ... 100 °C/32 ... 212 °F)
H <sub>2</sub> SO <sub>4</sub> The range limits apply to 27 °C/80.6 °F.	0 ... 37 wt% (-17.8 ... 110 °C/-0.04 ... 230 °F) 28 ... 88 wt% (-17.8 ... 115.6 °C/-0.04 ... 240.08 °F) 89 ... 99 wt% (-17.8 ... 115.6 °C/-0.04 ... 240.08 °F)
HNO <sub>3</sub>	0 ... 30 wt% (-20 ... 50 °C/-4 ... 122 °F) 35 ... 96 wt% (-20 ... 50 °C/-4 ... 122 °F)
H <sub>2</sub> SO <sub>4</sub> •SO <sub>3</sub> (Oleum)	12 ... 45 wt% (0 ... 120 °C/32 ... 248 °F) Specifiable concentration table

### 13.9.7 Oxygen

<b>Digital input, Memosens</b>	
Standard measurement / with TAN option FW-E016: Trace measurement	Input for amperometric Memosens sensors: Terminals 1 ... 5 or MS095X module
Display range	Temperature: -20.0 ... 150.0 °C / -4 ... 302 °F
Measurement error	Depending on sensor
<b>Module input, analog or ISM <sup>1)</sup></b>	
Standard	Sensors with MK-OXY045X module: SE706X; InPro 6800; Oxyferm, ISM
Input range	Measuring current -600 ... 2 nA, resolution 10 pA
Measurement error <sup>2)</sup>	< 0.5 % of measured value + 0.05 nA + 0.005 nA/K
Trace measurement TAN option FW-E016	Sensors with MK-OXY045X module: SE707X; InPro 6900; Oxyferm/Oxygold
Input range I	Measuring current -600 ... 2 nA, resolution 10 pA Automatic range selection
Measurement error <sup>2)</sup>	< 0.5 % of measured value + 0.05 nA + 0.005 nA/K
Input range II	Measuring current -10000 ... 2 nA, resolution 166 pA Automatic range selection
Measurement error <sup>2)</sup>	< 0.5 % of measured value + 0.8 nA + 0.08 nA/K
Polarization voltage	-400 ... -1000 mV, preset -675 mV, resolution < 5 mV
Permissible guard current	≤ 20 µA
<b>Temperature input via module</b>	
NTC 22 kΩ/NTC 30 kΩ 2-wire connection, adjustable	
Measuring range	-20.0 ... 150.0 °C / -4 ... 302 °F
Adjustment range	10 K
Resolution	0.1 °C / 0.1 °F
Measurement error <sup>2) 3)</sup>	< 0.5 K (< 1 K at > 100 °C / > 212 °F)
<b>Operating modes</b>	
Measurement in gases	
Measurement in liquids	
<b>Measuring ranges</b>	
Standard sensor (Memosens, digital, analog)	
Saturation <sup>4)</sup>	0.0 ... 600.0 %
Concentration <sup>4)</sup> (dissolved oxygen)	0.00 ... 99.99 mg/l (ppm)
Volume concentration in gas	0.00 ... 99.99 vol%
Trace sensor "01" (Memosens, analog)	
Saturation <sup>4)</sup>	0.000 ... 150.0 %
Concentration <sup>4)</sup> (dissolved oxygen)	0000 ... 9999 µg/l / 10.00 ... 20.00 mg/l 0000 ... 9999 ppb/10.00 ... 20.00 ppm
Volume concentration in gas	000.0 ... 9999 ppm/1.000 ... 50.00 vol%

<sup>1)</sup> ISM with TAN option FW-E053

<sup>2)</sup> At rated operating conditions

<sup>3)</sup> ± 1 count, plus sensor error

<sup>4)</sup> For temperature range -10 ... 80 °C/14 ... 176 °F

<b>Trace sensor "001" (analog)</b>	
Saturation <sup>1)</sup>	0.000 ... 150.0 %
Concentration <sup>1)</sup> (dissolved oxygen)	000.0 ... 9999 µg/l / 10.00 ... 20.00 mg/l 000.0 ... 9999 ppb/10.00 ... 20.00 ppm
Volume concentration in gas	000.0 ... 9999 ppm/1.000 ... 50.00 vol%
<b>Input correction</b>	
Pressure correction	0000 ... 9999 mbar / 999.9 kPa / 145.0 psi (adjustable) Manual or external (via current input 0(4) ... 20 mA)
Salinity correction	0.0 ... 45.0 g/kg
<b>Calibration and adjustment</b>	
Automatic calibration in air-saturated water	
Automatic calibration in air	
Product calibration, saturation	
Zero correction	
Temperature probe adjustment	
<b>Calibration ranges</b>	
<b>Standard sensor</b>	
Zero point	± 2 nA
Slope	25 ... 130 nA (at 25 °C / 77 °F, 1013 mbar)
<b>Trace sensor "01"</b>	
Zero point	± 2 nA
Slope	200 ... 550 nA (at 25 °C / 77 °F, 1013 mbar)
<b>Trace sensor "001"</b>	
Zero point	± 3 nA
Slope	2000 ... 9000 nA (at 25 °C / 77 °F, 1013 mbar)
<b>Calibration timer</b>	0000 ... 9999 h

<sup>1)</sup> For temperature range -10 ... 80 °C/14 ... 176 °F



## 13.10 Diagnostics and Statistics

<b>Diagnostic functions</b>	
Calibration data	Calibration record
Device self-test	Automatic memory test (RAM, FLASH, EEPROM)
Display test	Display of all colors
Keypad test	Check of key functions
<b>Sensocheck</b>	
Delay: approx. 30 s	
pH	Automatic monitoring of glass and reference electrode (can be switched off)
Cond	Polarization detection and monitoring of cable capacitance
Condl	Monitoring of primary and secondary coils and lines for open circuit and of primary coil and lines for short circuit
Oxygen	With amperometric sensors only Monitoring of membrane and electrolyte and the sensor wires for short circuits or open circuits (can be switched off)
<b>Sensoface</b>	
Provides information on the sensor condition (can be switched off; happy, neutral, sad smileys). Evaluation criteria → <i>Sensocheck and Sensoface</i> , p. 158	
pH	Evaluation of zero/slope, response, calibration interval, Sensocheck, wear
Cond	Evaluation of Sensocheck
Condl	Evaluation of zero point, cell factor, installation factor, Sensocheck
Oxygen	Evaluation of zero point/slope, response time, calibration interval, Sensocheck, and sensor wear for digital sensors
<b>Sensor monitor</b>	
Display of direct sensor measured values:	
pH	pH/voltage/temperature
Cond	Resistance/temperature
Condl	Resistance/temperature
Oxygen	Sensor current/temperature
<b>Measurement recorder TAN option FW-E103</b> → <i>Measurement Recorder (FW-E103)</i> , p. 218	
4-channel measurement recorder with marking of events (failure, maintenance required, function check, limit values)	
Storage capacity	100 entries in device memory, at least 20,000 entries in conjunction with Data Card
Recording	Process variables and span freely adjustable
Type of recording	Current value
Time base	10 s ... 10 h
<b>Logbook</b>	
Recording of function activations, appearance and disappearance of warning and failure messages, with date and time, 100 entries with date and time in device memory, viewable on display	
TAN option FW-E104	At least 20,000 entries in conjunction with Data Card


## 14 Annex

### 14.1 Channel II Wiring Examples

#### 14.1.1 pH Analog Wiring Examples

##### Example 1, pH Analog


Measuring task:	pH, temperature, glass impedance
Sensors (example):	SE 555X/1-NS8N
Cable (example):	ZU 0318

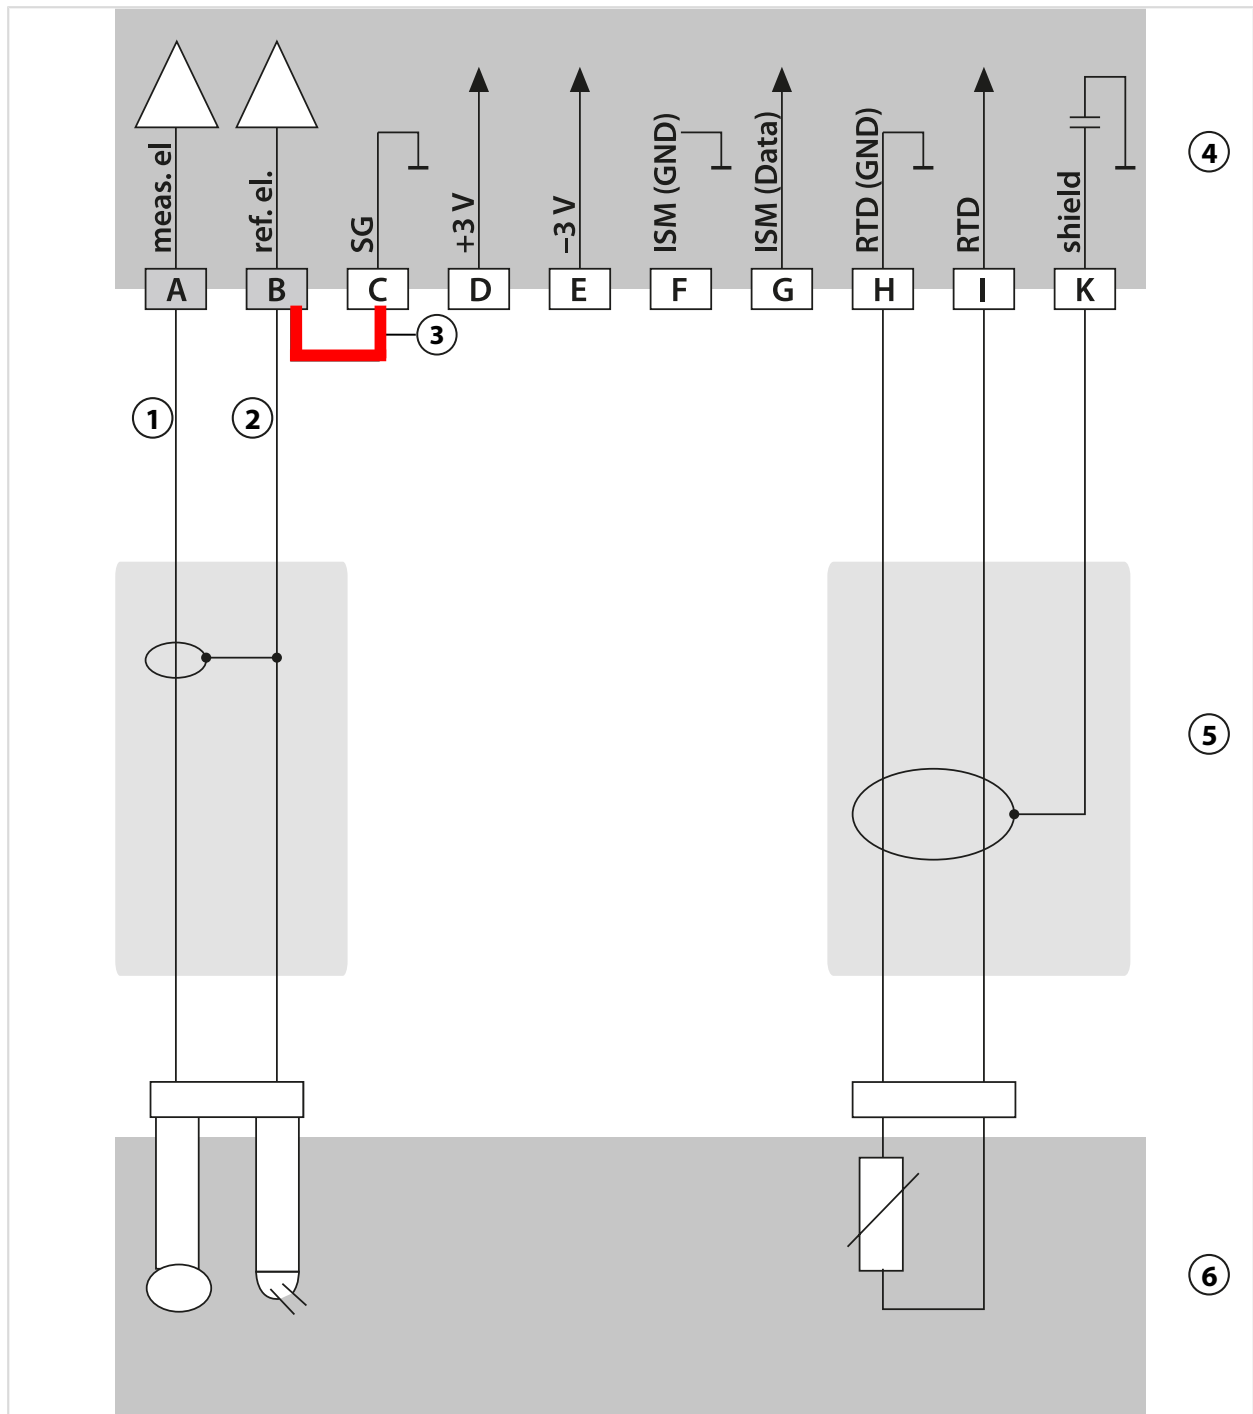

1 Core	4 pH module
2 Shield	5 Cables
3 Jumper!	6 Sensors

**Example 2, pH Analog**


Measuring task:	pH/ORP, temp., glass impedance, reference impedance
Sensors (example):	SE555X/1-NS8N, equipotential bonding: ZU0073 Temperature: e.g., Pt1000
Cable (example):	2x ZU0318

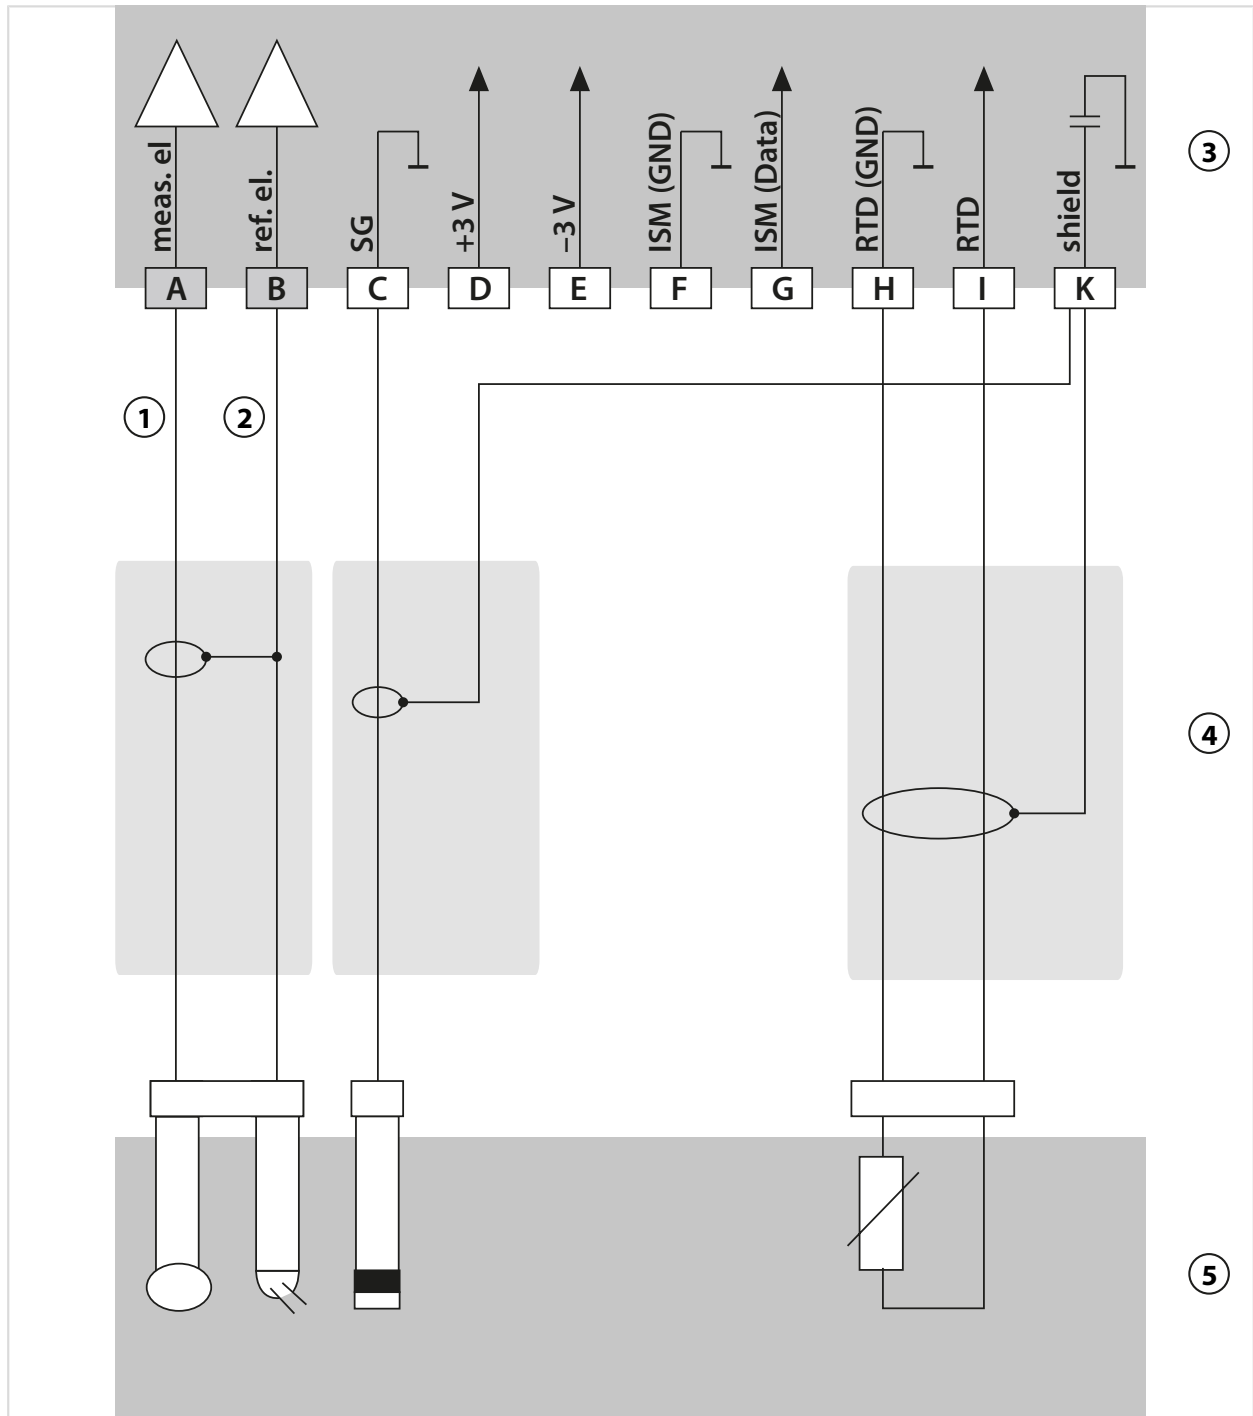

- |             |           |
|-------------|-----------|
| 1 Core      | 4 Cables  |
| 2 Shield    | 5 Sensors |
| 3 pH module |           |

### Example 3, pH Analog


Measuring task:	pH, temp, glass impedance
Sensor:	pH sensor e.g., SE 554X/1-NVPN, cable CA/VP6ST-003A
Temperature detector:	Integrated

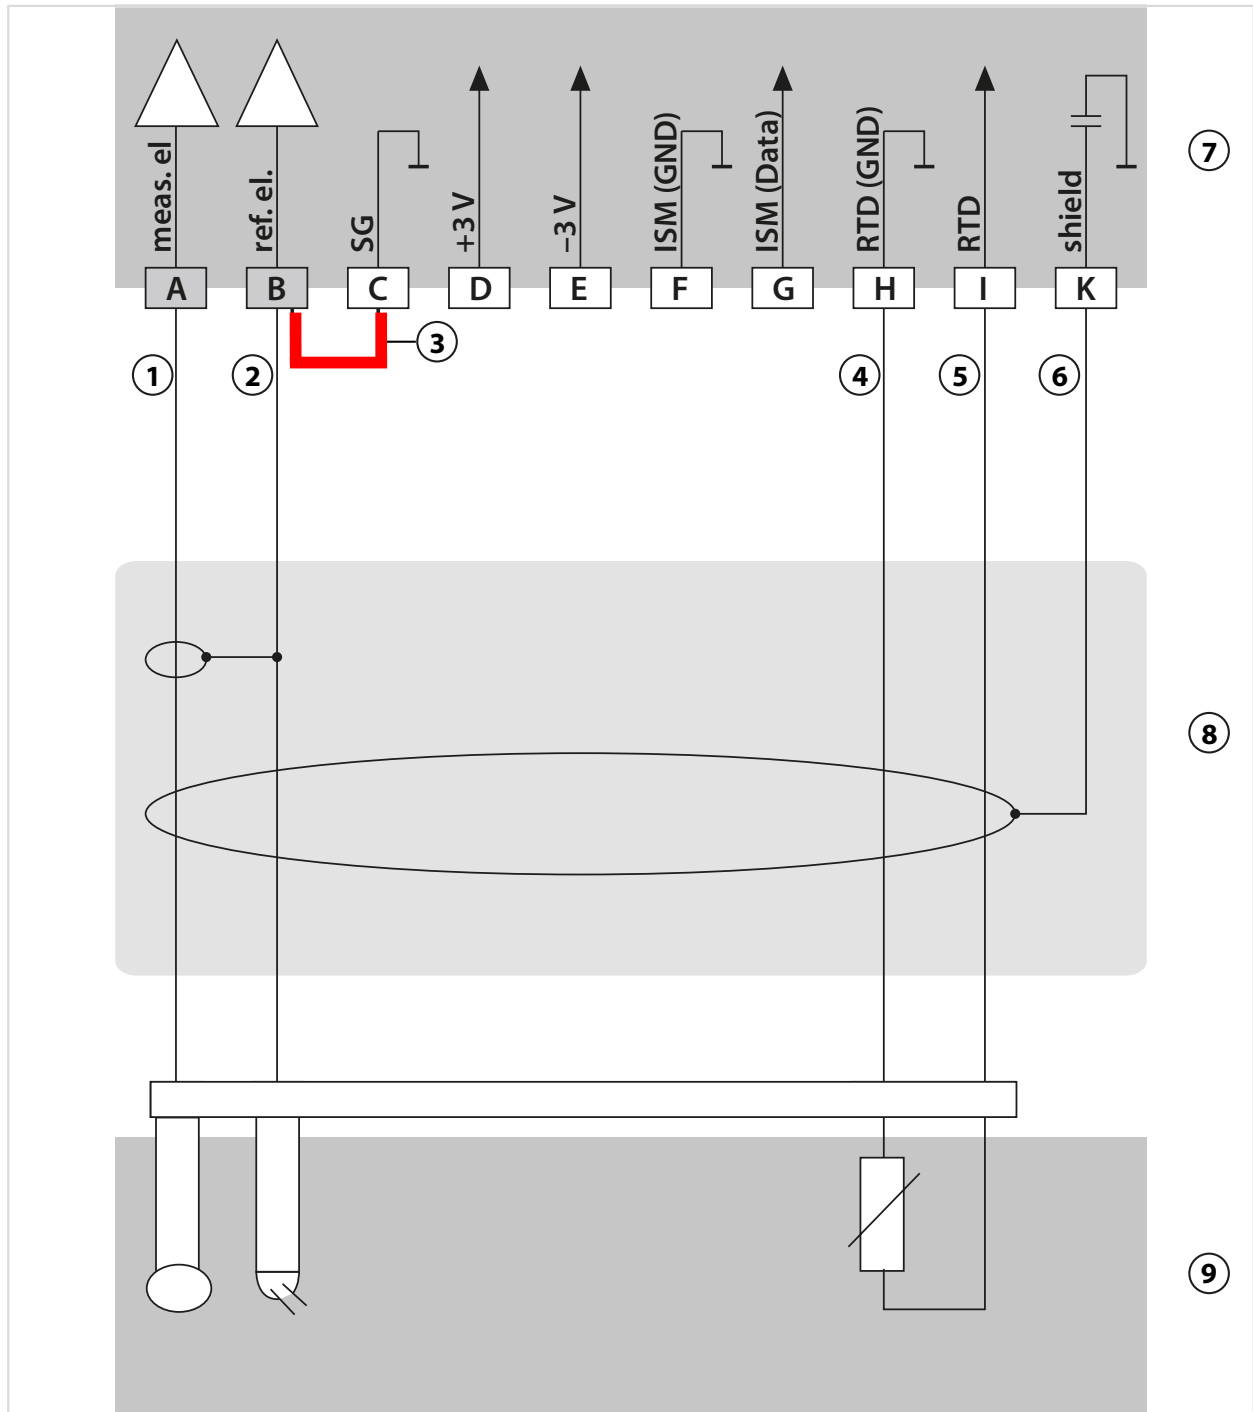

1 Core, clear	6 Shield, yellow/green
2 Shield, red	7 pH module
3 Jumper!	8 VP cable
4 Green	9 Sensor
5 White	

**Example 4, pH Analog**


Measuring task:	pH/ORP, temp., glass impedance, reference impedance
Sensors (example):	pH sensor, e.g., SE 555X/1-NVPN, cable CA/VP6ST-003A
Temperature detector:	Integrated

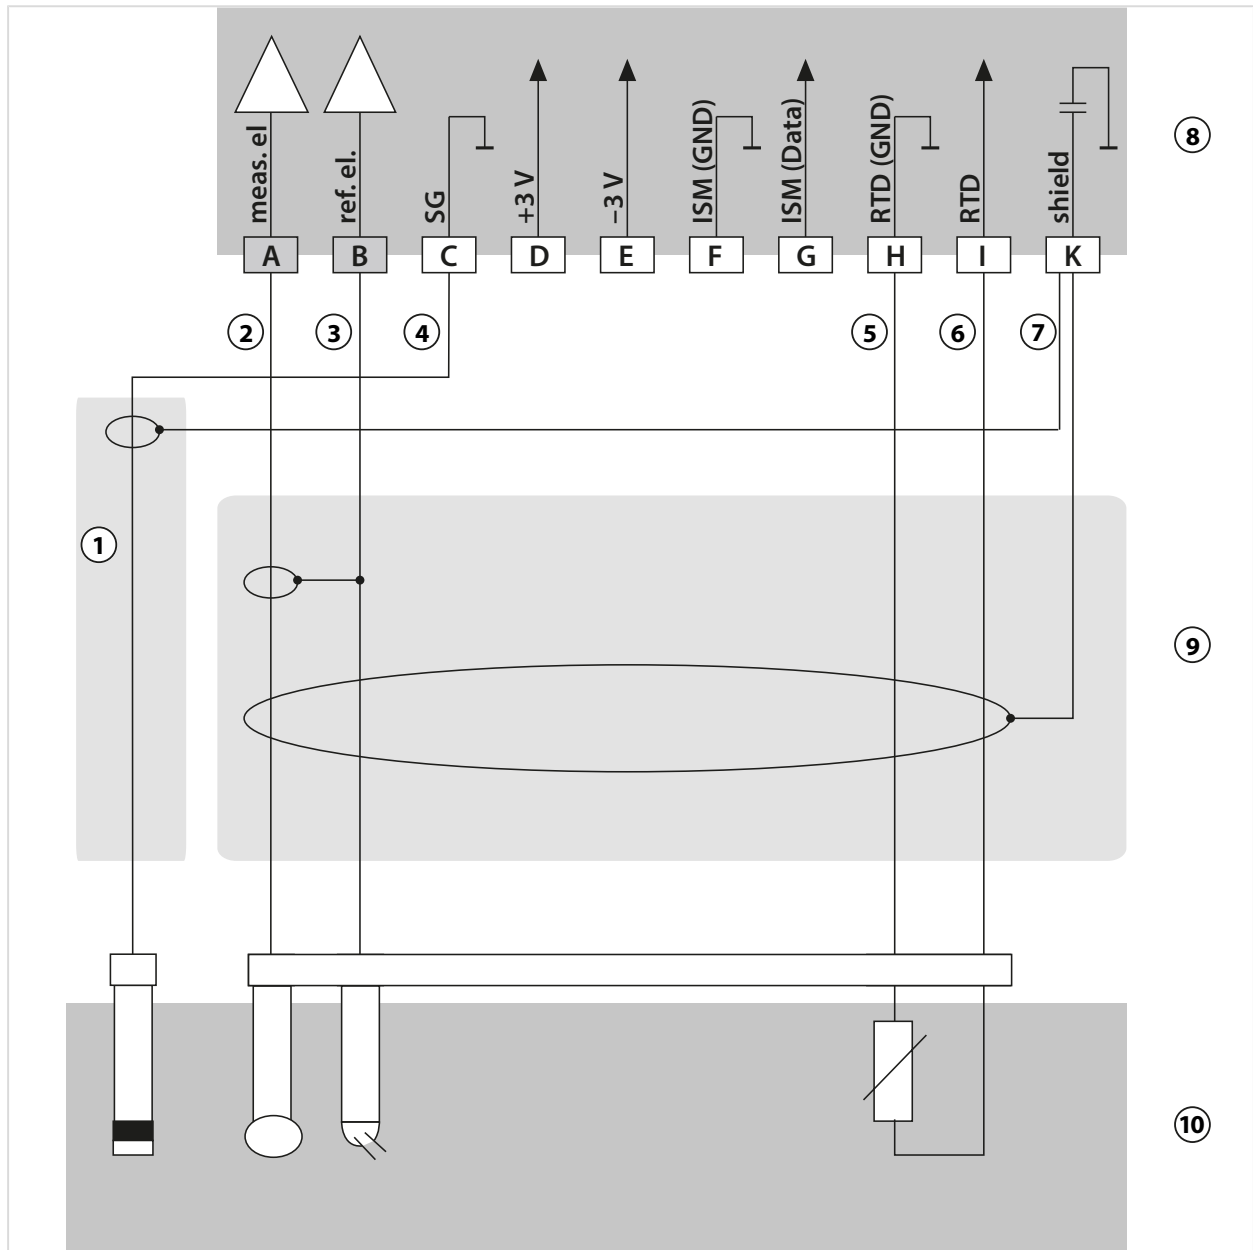

1 Equipotential bonding electrode ZU0073	6 White
2 Core, clear	7 Shield, yellow/green
3 Shield, red	8 pH module
4 Core	9 Cables
5 Green	10 Sensors

**Example 5, pH Analog**


Measuring task:	pH/ORP, temp., glass impedance, reference impedance
Sensors (example):	PL PETR-120VP (pH/ORP combo sensor, SI Analytics)
Cable (example):	CA/VP6ST-003A

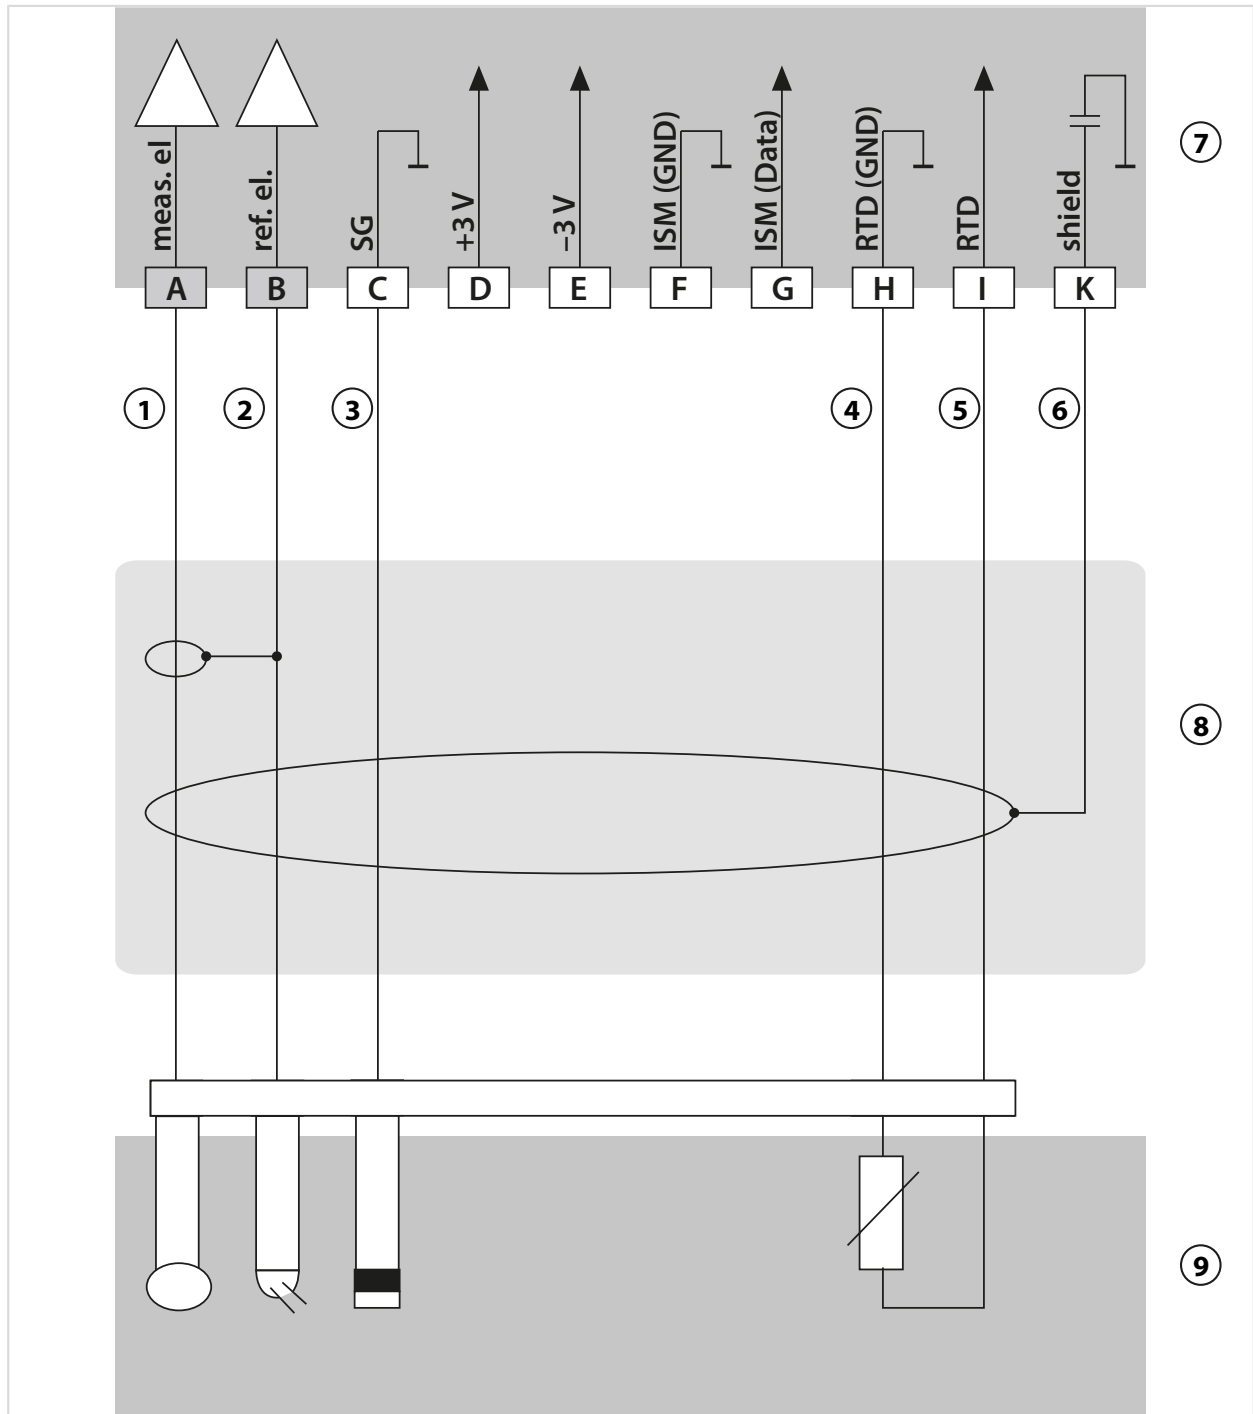

1 Core, transparent	6 Shield, yellow/green
2 Shield, red	7 pH module
3 Blue	8 Cables
4 Green	9 Sensor
5 White	

**Example 6, Pfaudler Sensor**

Channel II, requires TAN option FW-E017 "Pfaudler sensors"

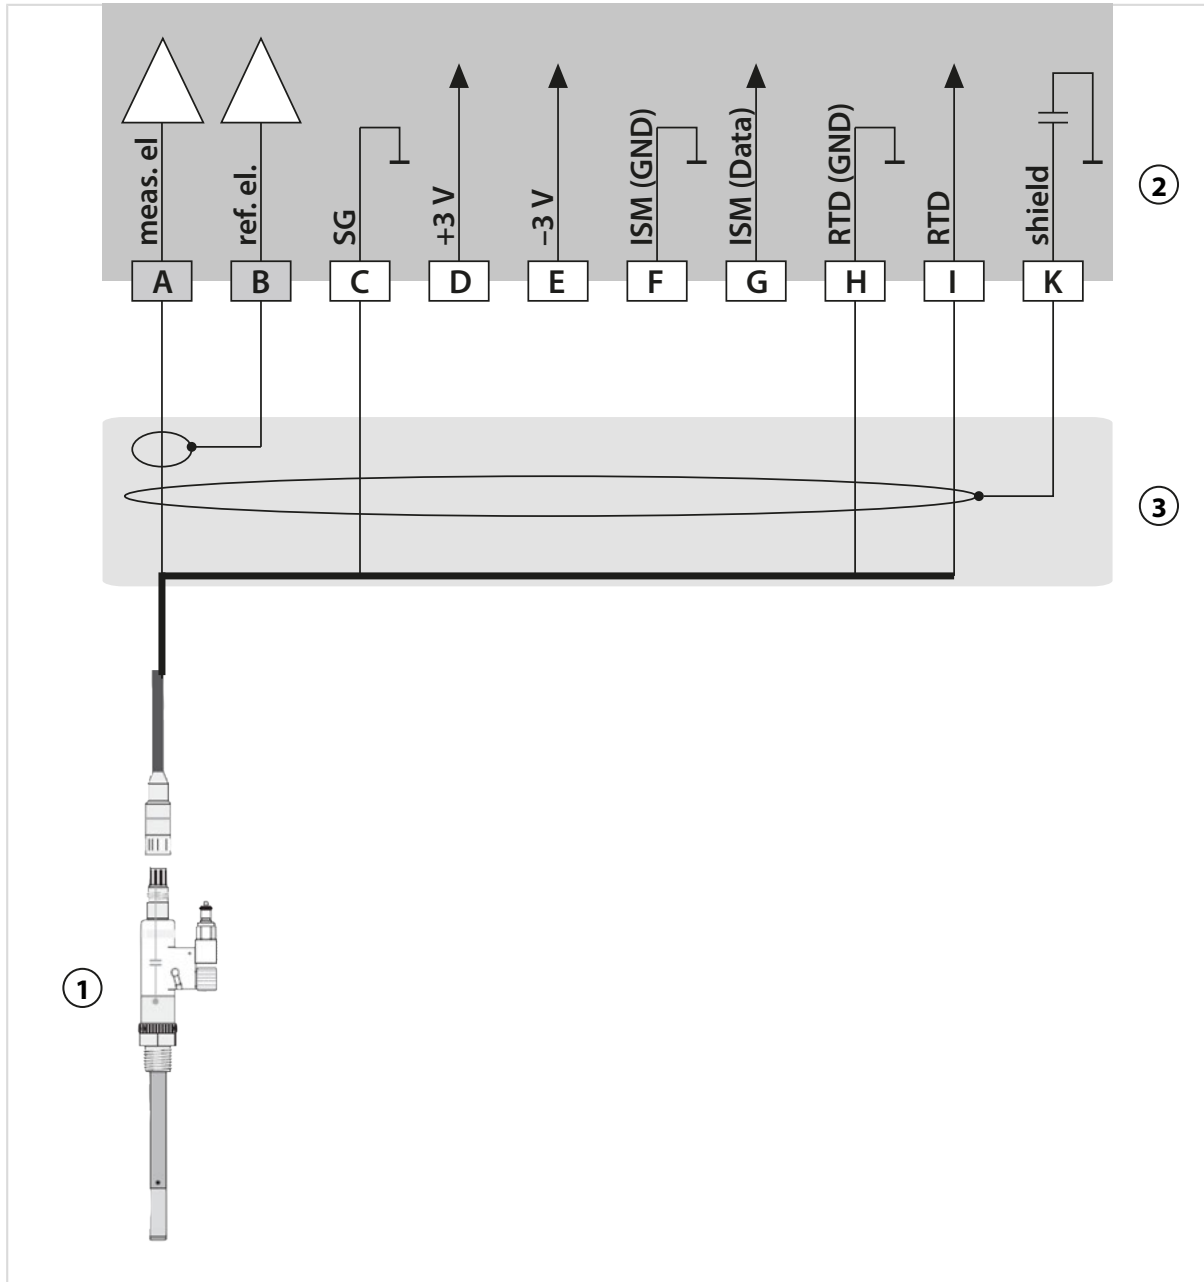

1 Pfaudler probe

3 Cable

2 pH measuring module


Module		pH Reiner with EP <sup>1)</sup> VP connector	Differential, models 18/40 with EP <sup>1)</sup>	Models 03/04 with EP <sup>1)</sup>	Models 03/04 without EP <sup>1)</sup>
A	Meas	Coax core	Coax white	Coax white	Coax white
B	Ref	Coax shield	Coax brown	Coax brown	Coax brown
C	SG	Blue	Blue	Blue	Jumper B/C
...					
H	RTD (GND)	Green	Brown	Brown	Brown
I	RTD	White	Green, Black	Green, Black	Green, Black
K	Shield	Green/Yellow, Gray	Orange, Violet	Orange, Violet	Orange, Violet

<sup>1)</sup> Equipotential bonding

### 14.1.2 ORP Analog Wiring Example

**Note:** Disable Sensocheck.

Measuring task:	ORP, temp., glass impedance, reference impedance
Sensors (example):	ORP: SE 564X/1-NS8N
Cable (example):	ZU 0318

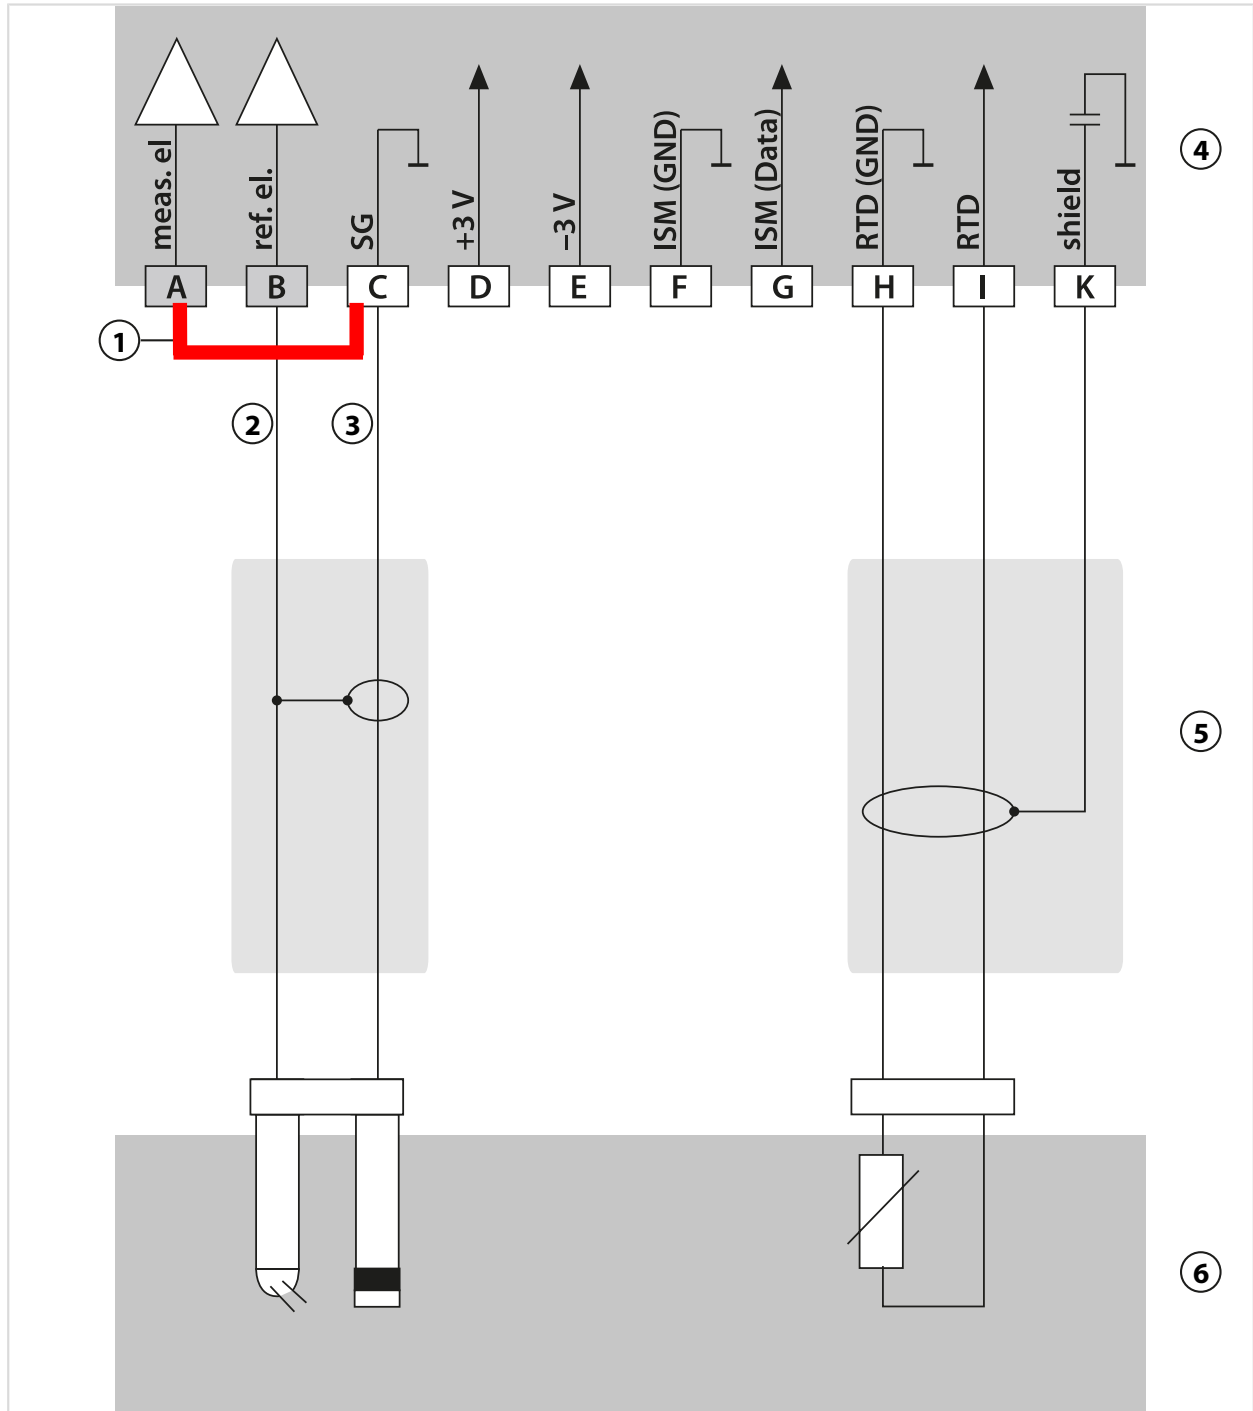


1 Jumper!	4 pH module
2 Shield	5 Cables
3 Core	6 Sensors



### 14.1.3 ISM pH Wiring Example

Channel II, requires TAN option FW-E053 "Digital ISM sensors"

Measuring task:	pH/ORP, temp., glass impedance, reference impedance
Sensors (example):	InPro 4260i (Mettler-Toledo)
Cable (example):	AK9 (Mettler-Toledo)

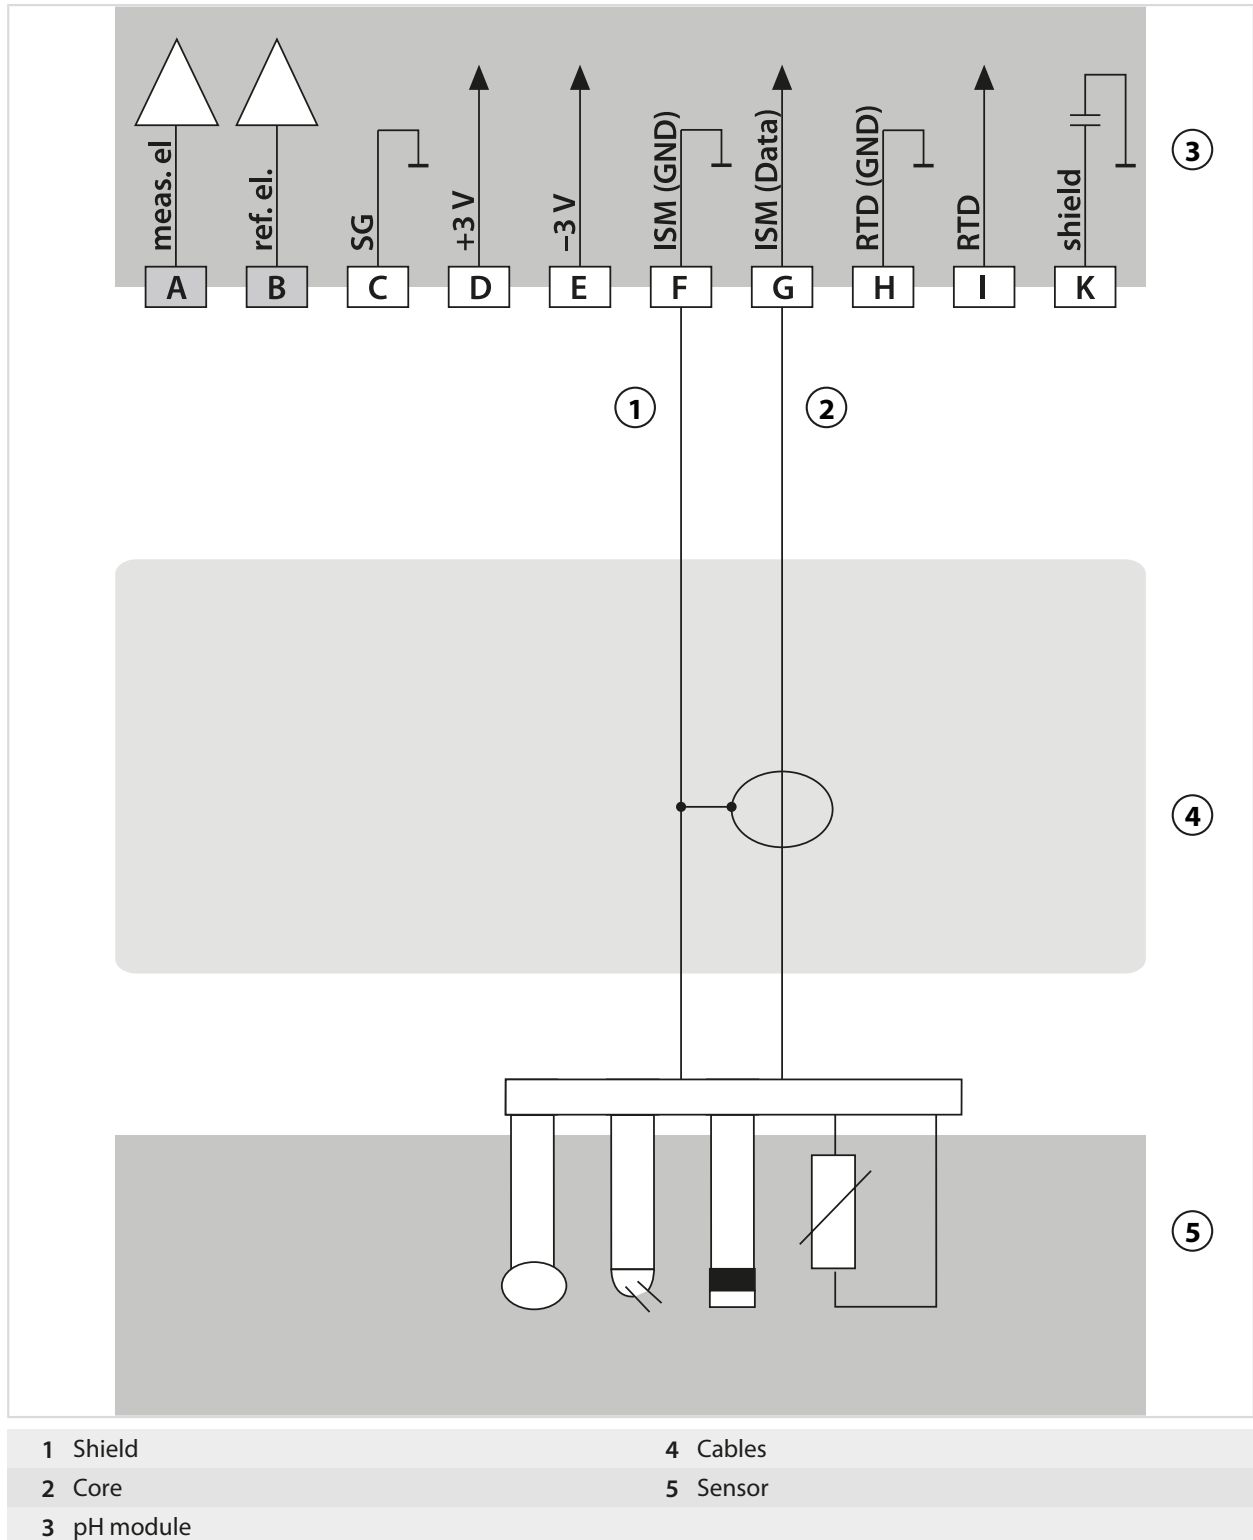


### 14.1.4 Contacting Conductivity Wiring Examples

#### Example 1, Cond

Measuring task: Conductivity, temperature

Sensors (principle): 4 electrodes

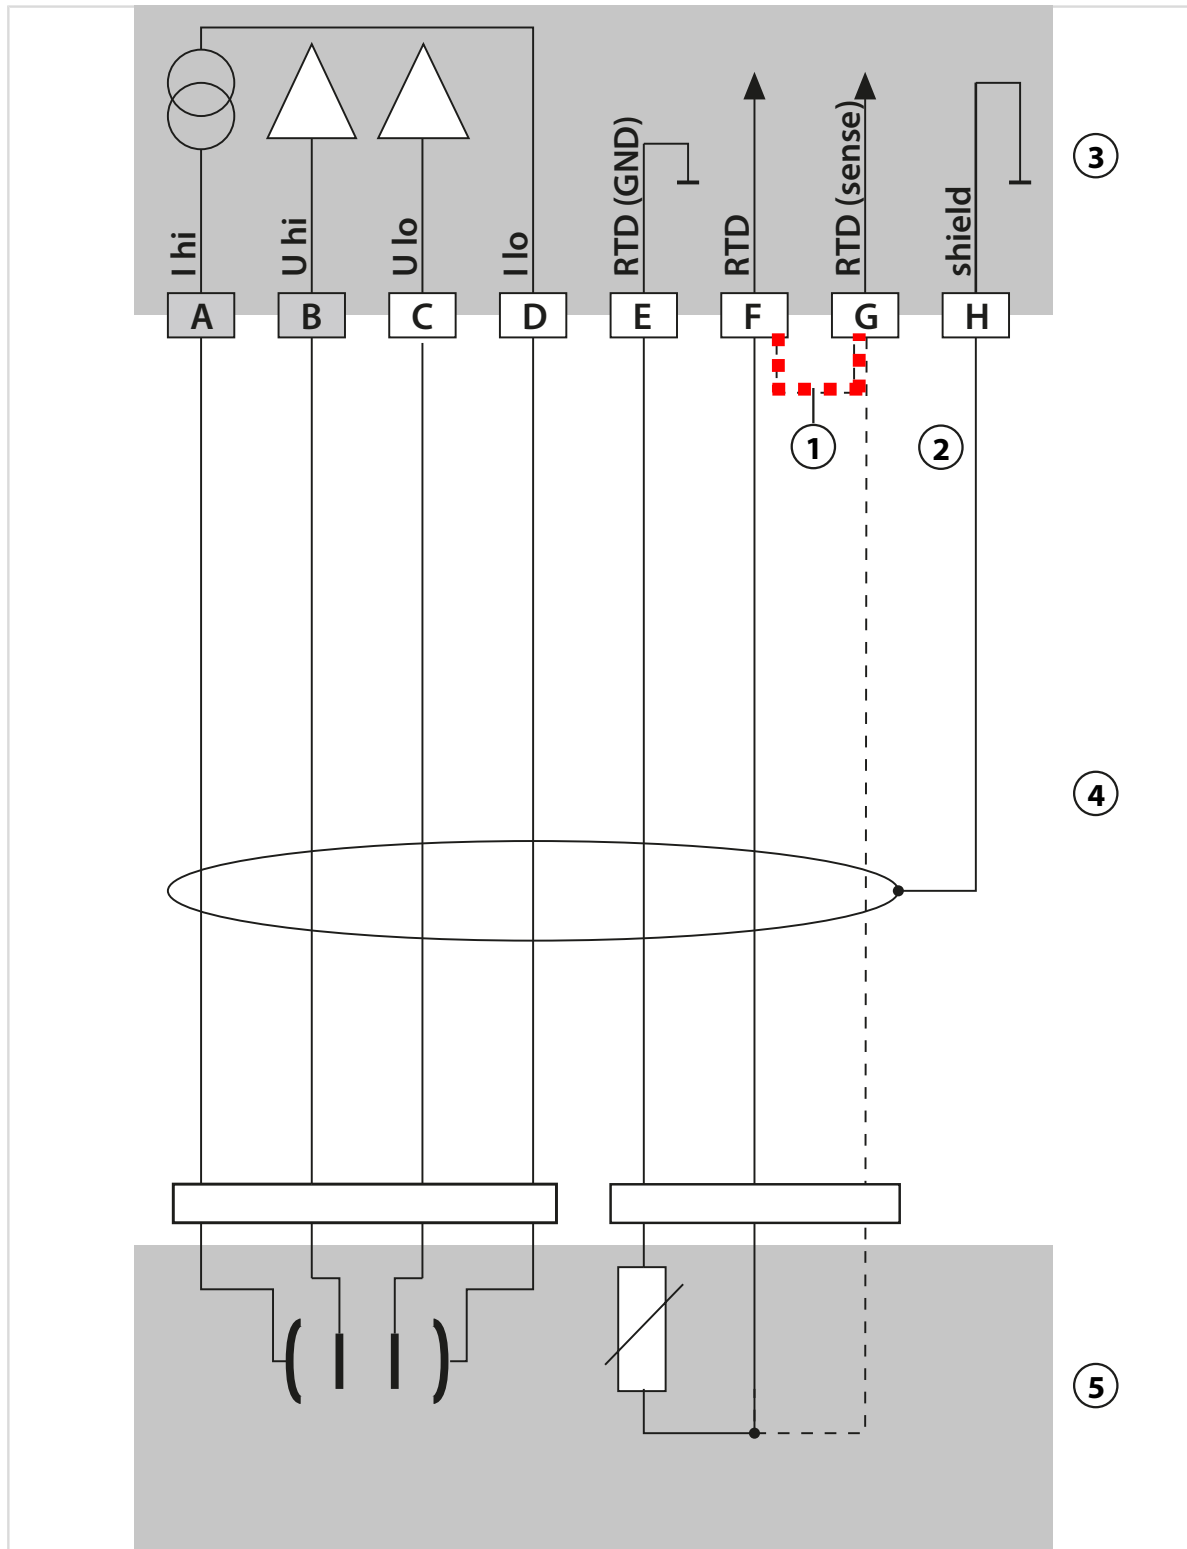

1 Place jumper across F and G when a 2-wire temperature probe is used!

2 Shield


4 Cables

3 Cond module

5 Sensors

**Example 2, Cond**

Measuring task: Conductivity, temperature  
 Sensors (principle): 2 electrodes, coaxial

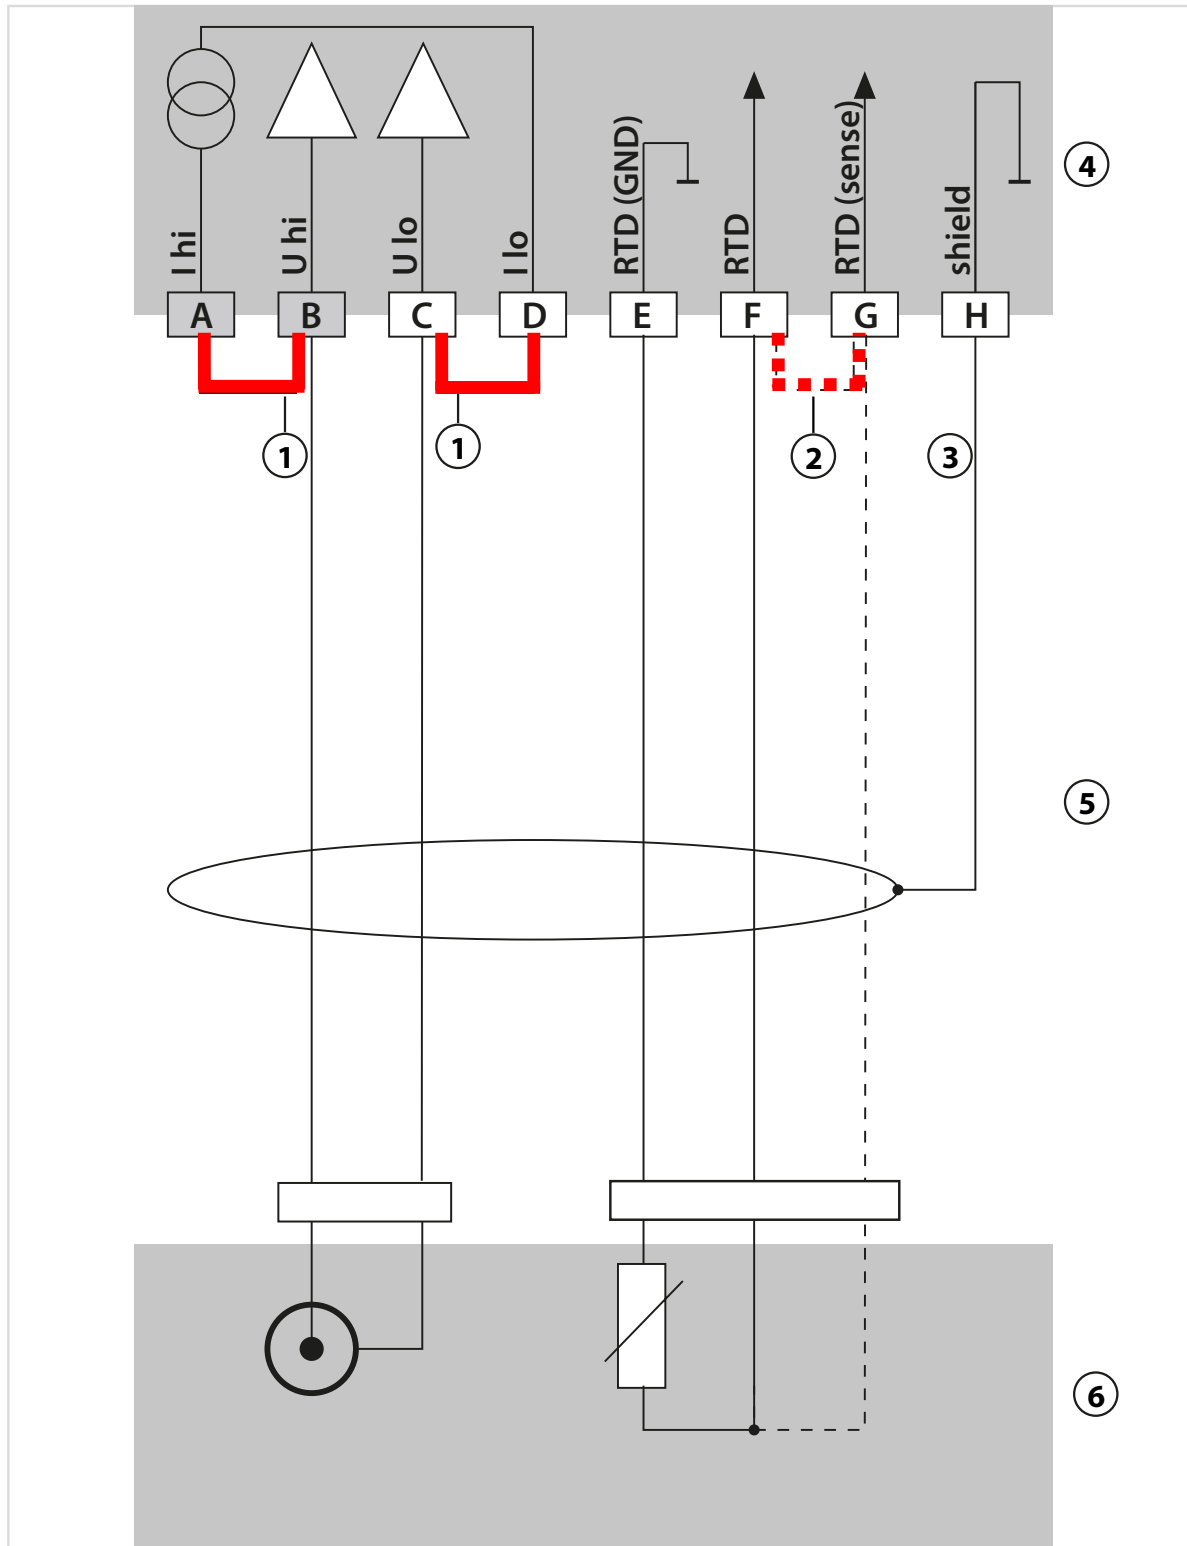


- |  |               |
|--|---------------|
| 1 Jumper!  | 4 Cond module |
| 2 Place jumper across F and G when a 2-wire temperature probe is used! | 5 Cables      |
| 3 Shield   | 6 Sensors     |

### 14.1.5 Inductive Conductivity Wiring Examples

#### Example 1, Condl

Measuring task: Inductive conductivity/temperature

Sensors: SE655X or SE656X

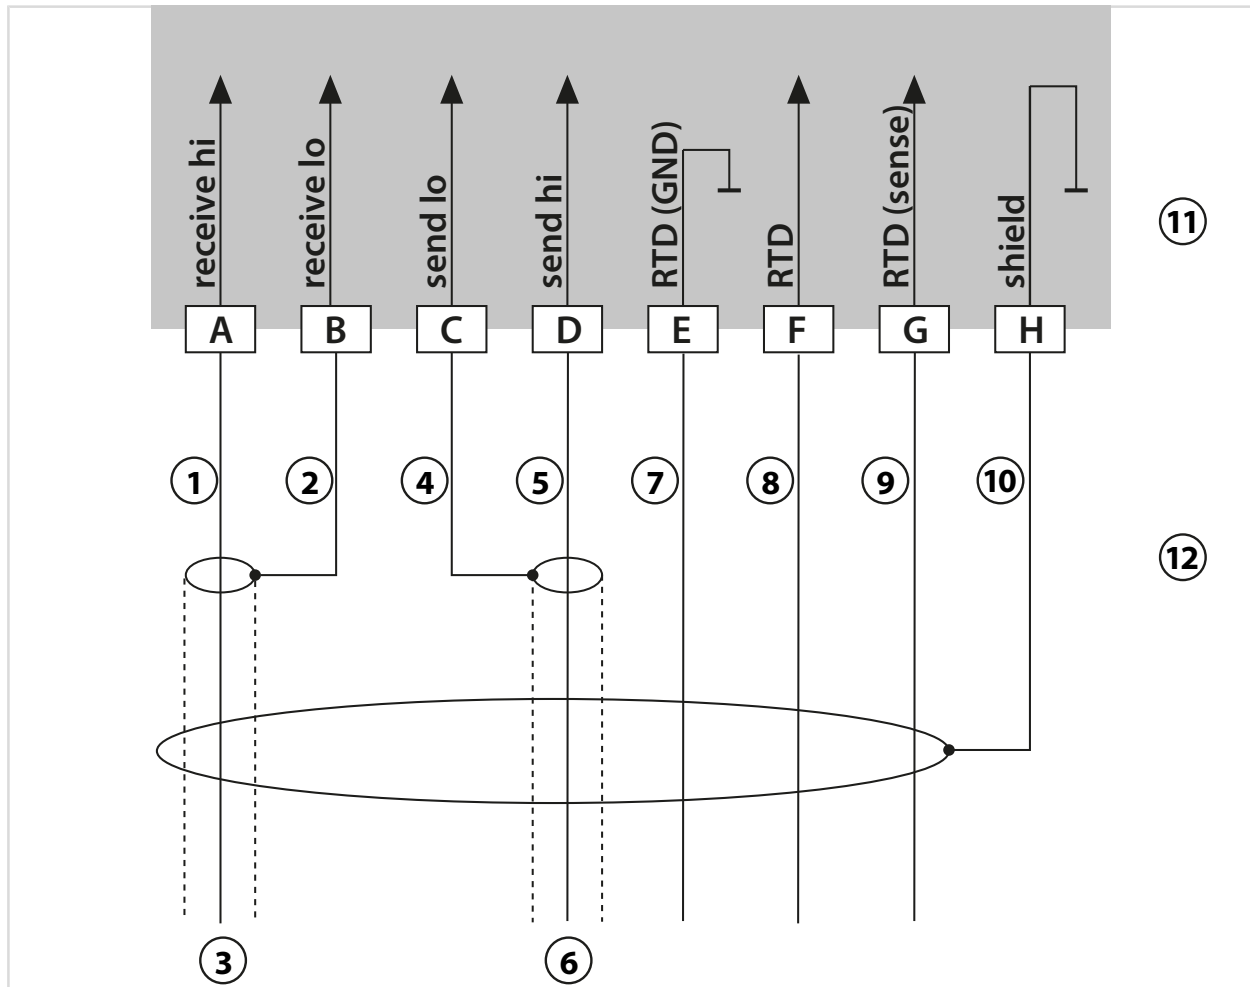


1 Core	7 Green
2 Shield	8 White
3 Coax red	9 Yellow
4 Shield	10 Shield green/yellow
5 Core	11 Condl module
6 Coax white	12 Cable

### 14.1.6 Oxygen Wiring Examples

#### Standard Oxygen Wiring Example


Measuring task:	Oxygen (standard, amperometric)
Sensors (example):	e.g., SE706X
Cable (example):	CA/VP6ST-003A (ZU0313)

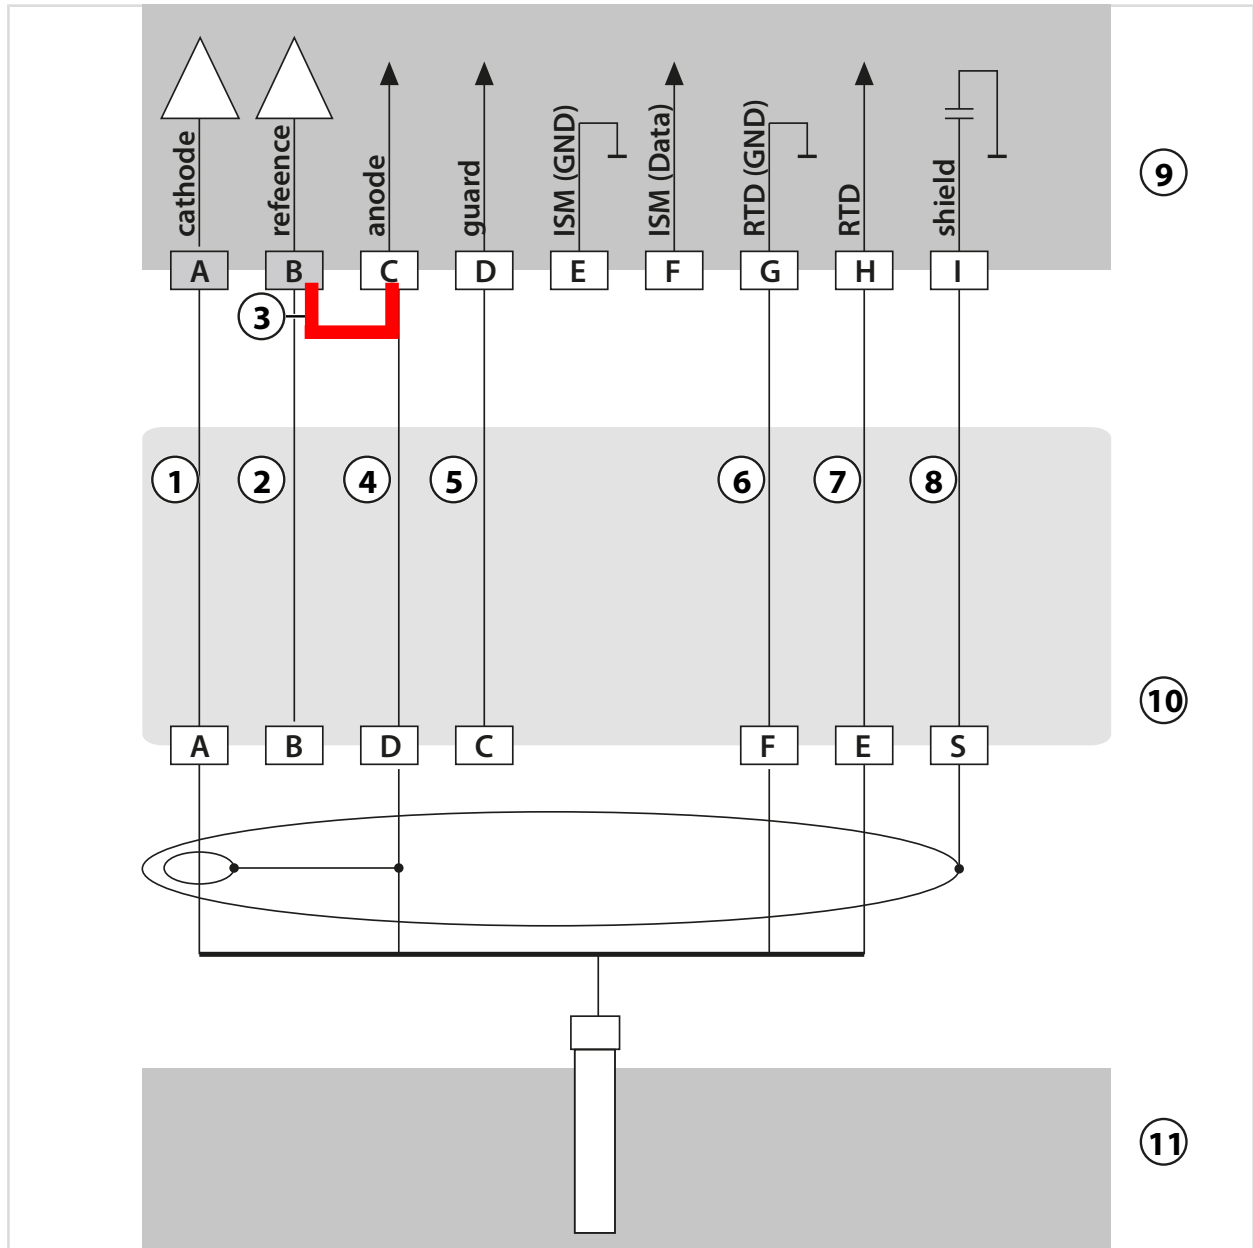

1 Core	5 Gray
2 Blue	6 Green
3 Jumper!	7 White
4 Shield	8 Outer shield

### Trace Oxygen Measurement Wiring Example

Measuring task:	Trace oxygen measurement, TAN option FW-E015
Sensors (example):	Model "01" (e.g., SE707X)
Cable (example):	CA/VP6ST-003A (ZU0313)

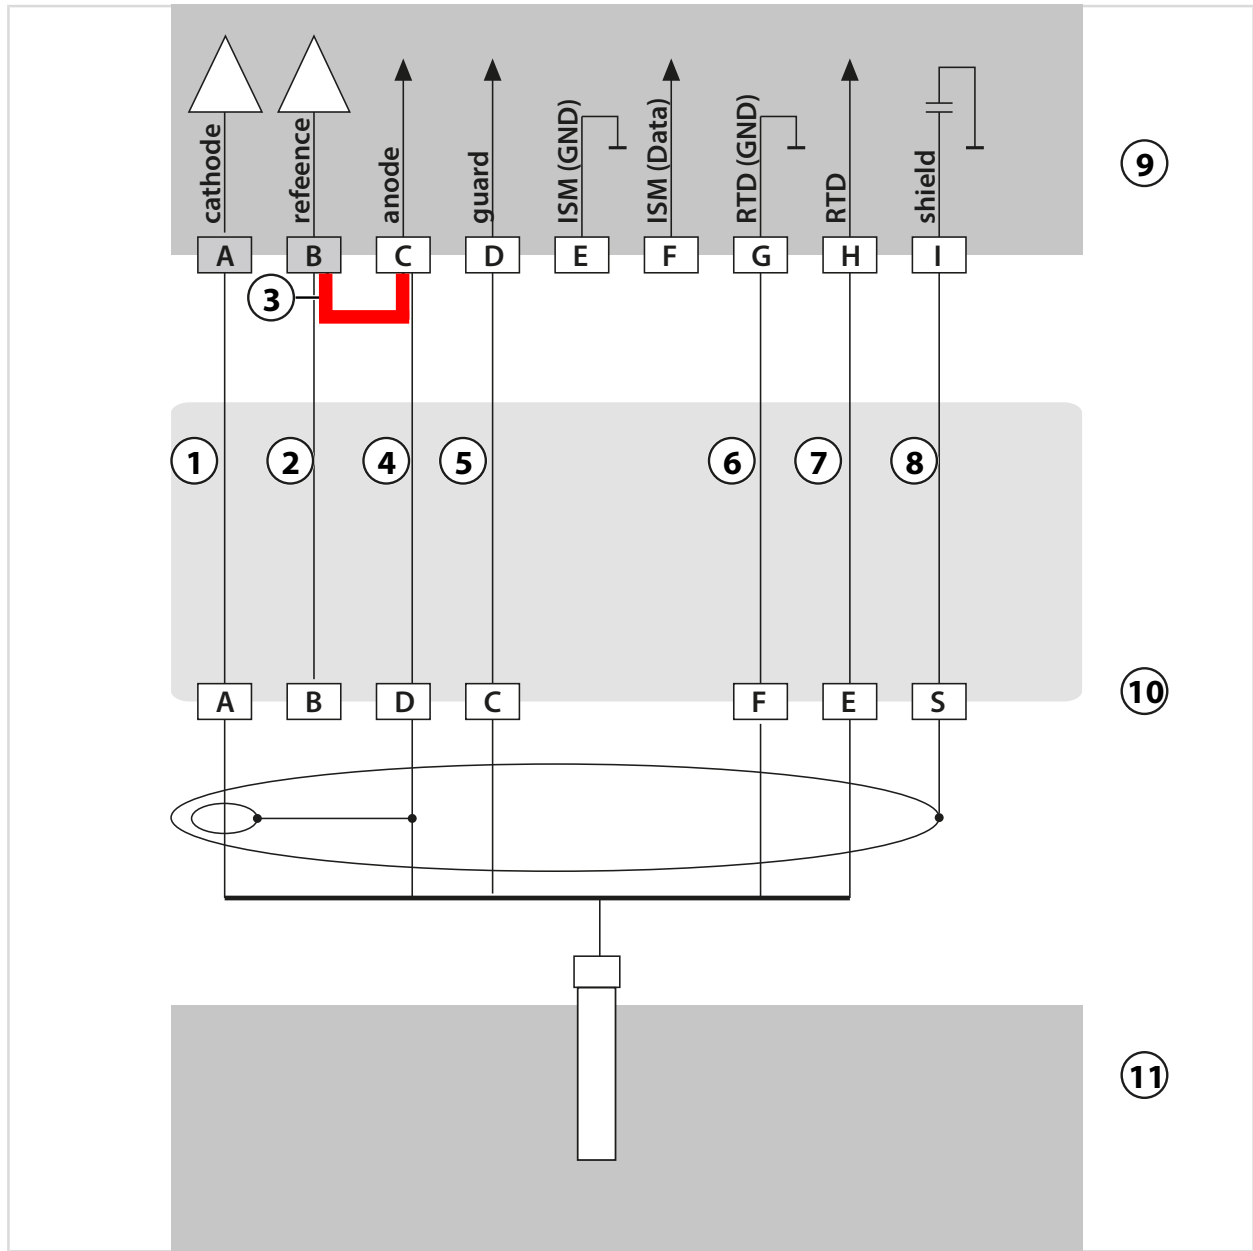


1 Core	5 Gray
2 Blue	6 Green
3 Jumper!	7 White
4 Shield	8 Outer shield

### ISM Oxygen Wiring Example

Channel II, requires TAN option FW-E053 "Digital ISM sensors"

Measuring task:	Oxygen (standard, amperometric)
Sensors (example):	InPro 6850i (Mettler-Toledo)
Cable (example):	AK9 (Mettler-Toledo)

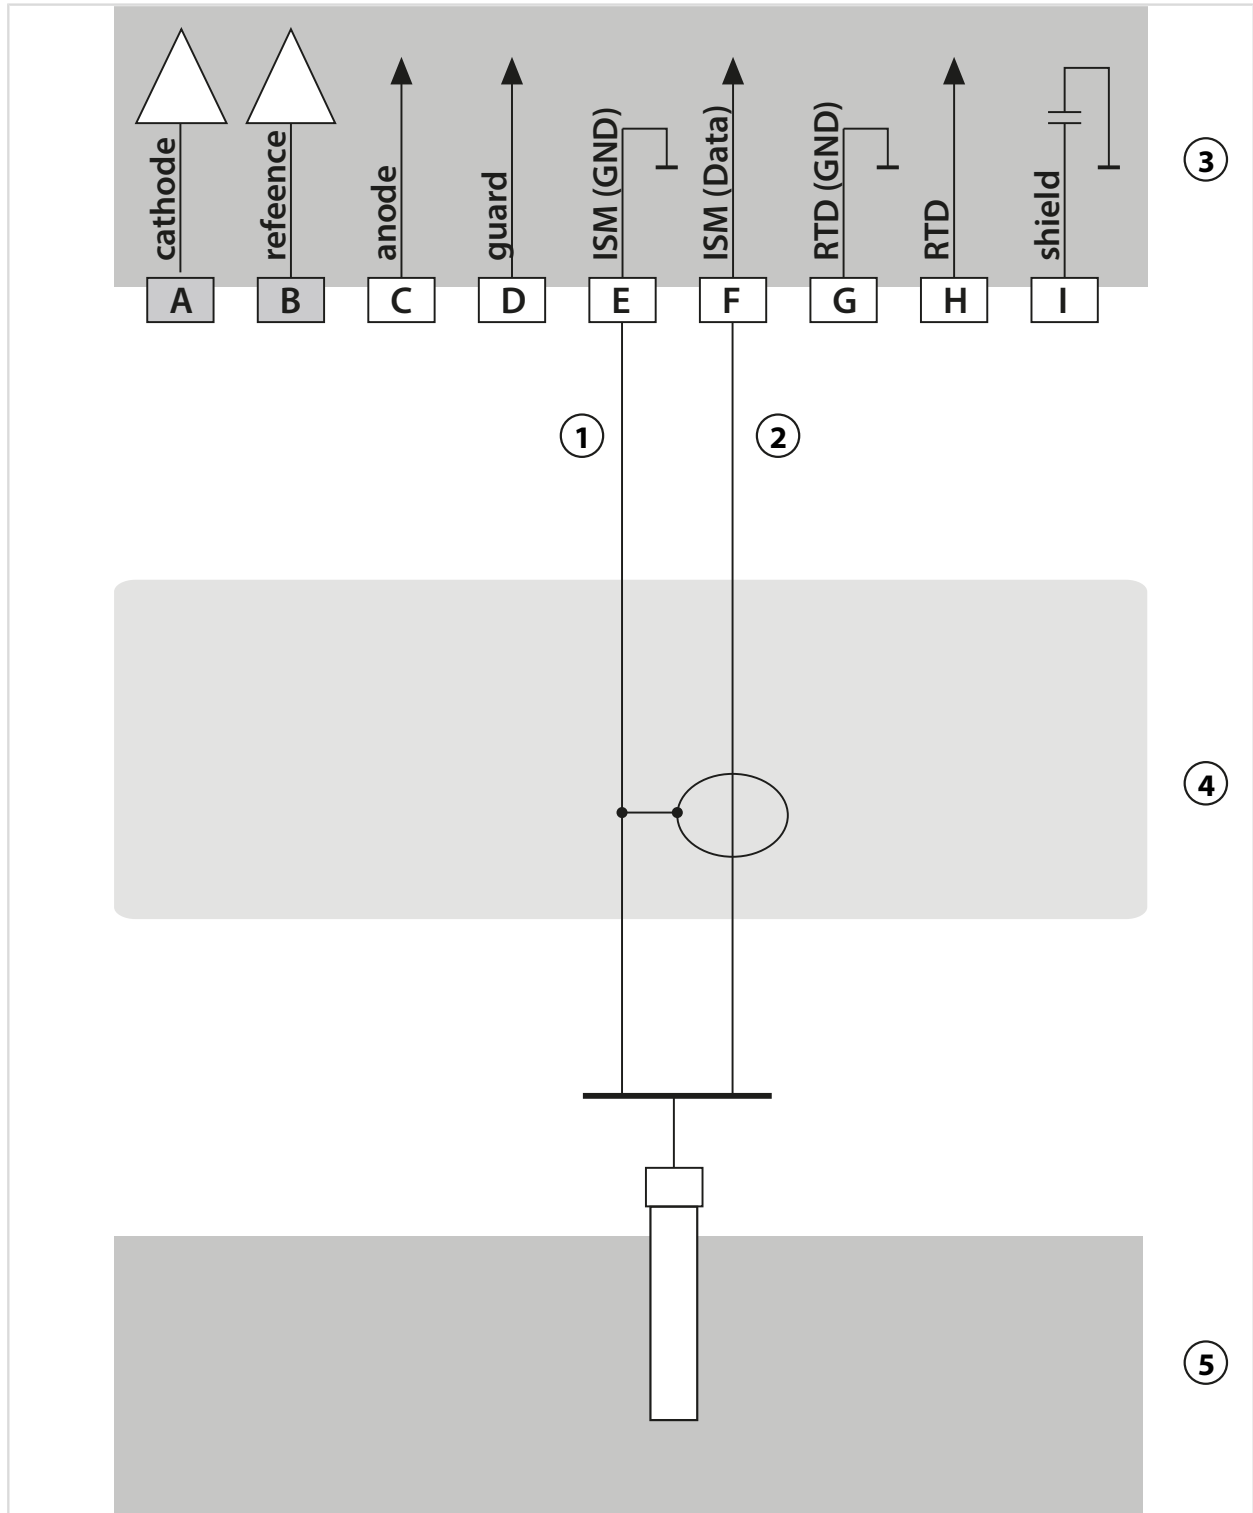

1 Shield	4 Cables
2 Core	5 Sensor
3 Oxygen measuring module	

## 14.2 Buffer Tables

### Buffer Table, Knick CaliMat

Nominal values in bold.

°C	pH				
0	2.01	4.05	7.09	9.24	12.58
5	2.01	4.04	7.07	9.16	12.39
10	2.01	4.02	7.04	9.11	12.26
15	2.00	4.01	7.02	9.05	12.13
<b>20</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>12.00</b>
25	2.00	4.01	6.99	8.95	11.87
30	2.00	4.01	6.98	8.91	11.75
35	2.00	4.01	6.96	8.88	11.64
40	2.00	4.01	6.96	8.85	11.53
50	2.00	4.01	6.96	8.79	11.31
60	2.00	4.00	6.96	8.73	11.09
70	2.00	4.00	6.96	8.70	10.88
80	2.00	4.00	6.98	8.66	10.68
90	2.00	4.00	7.00	8.64	10.48

### Buffer Table, Mettler-Toledo

Nominal values in bold.

°C	pH			
0	2.03	4.01	7.12	9.52
5	2.02	4.01	7.09	9.45
10	2.01	4.00	7.06	9.38
15	2.00	4.00	7.04	9.32
20	2.00	4.00	7.02	9.26
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>9.21</b>
30	1.99	4.01	6.99	9.16
35	1.99	4.02	6.98	9.11
40	1.98	4.03	6.97	9.06
45	1.98	4.04	6.97	9.03
50	1.98	4.06	6.97	8.99
55	1.98	4.08	6.98	8.96
60	1.98	4.10	6.98	8.93
65	1.99	4.13	6.99	8.90
70	1.99	4.16	7.00	8.88
75	2.00	4.19	7.02	8.85
80	2.00	4.22	7.04	8.83
85	2.00	4.26	7.06	8.81
90	2.00	4.30	7.09	8.79
95	2.00	4.35	7.12	8.77



**Buffer Table, Merck/Riedel**

Nominal values in bold.

°C	pH				
0	2.01	4.05	7.13	9.24	12.58
5	2.01	4.04	7.07	9.16	12.41
10	2.01	4.02	7.05	9.11	12.26
15	2.00	4.01	7.02	9.05	12.10
<b>20</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>12.00</b>
25	2.00	4.01	6.98	8.95	11.88
30	2.00	4.01	6.98	8.91	11.72
35	2.00	4.01	6.96	8.88	11.67
40	2.00	4.01	6.95	8.85	11.54
45	2.00	4.01	6.95	8.82	11.44
50	2.00	4.00	6.95	8.79	11.33
55	2.00	4.00	6.95	8.76	11.19
60	2.00	4.00	6.96	8.73	11.04
65	2.00	4.00	6.96	8.72	10.97
70	2.01	4.00	6.96	8.70	10.90
75	2.01	4.00	6.96	8.68	10.80
80	2.01	4.00	6.97	8.66	10.70
85	2.01	4.00	6.98	8.65	10.59
90	2.01	4.00	7.00	8.64	10.48
95	2.01	4.00	7.02	8.64	10.37

**Buffer Table, DIN 19267**

Nominal values in bold.

°C	pH				
0	1.08	4.67	6.89	9.48	13.95 <sup>1)</sup>
5	1.08	4.67	6.87	9.43	13.63 <sup>1)</sup>
10	1.09	4.66	6.84	9.37	13.37
15	1.09	4.66	6.82	9.32	13.16
20	1.09	4.65	6.80	9.27	12.96
<b>25</b>	<b>1.09</b>	<b>4.65</b>	<b>6.79</b>	<b>9.23</b>	<b>12.75</b>
30	1.10	4.65	6.78	9.18	12.61
35	1.10	4.65	6.77	9.13	12.45
40	1.10	4.66	6.76	9.09	12.29
45	1.10	4.67	6.76	9.04	12.09
50	1.11	4.68	6.76	9.00	11.89
55	1.11	4.69	6.76	8.96	11.79
60	1.11	4.70	6.76	8.92	11.69
65	1.11	4.71	6.76	8.90	11.56
70	1.11	4.72	6.76	8.88	11.43
75	1.11	4.73	6.77	8.86	11.31
80	1.12	4.75	6.78	8.85	11.19
85	1.12	4.77	6.79	8.83	11.09
90	1.13	4.79	6.80	8.82	10.99
95	1.13 <sup>1)</sup>	4.82 <sup>1)</sup>	6.81 <sup>1)</sup>	8.81 <sup>1)</sup>	10.89 <sup>1)</sup>

<sup>1)</sup> extrapolated

**Buffer Table, NIST Standard (DIN 19266: 2015-05)**

Nominal values in bold.

°C	pH				
0	1.666	4.000	6.984	9.464	
5	1.668	3.998	6.951	9.395	13.207
10	1.670	3.997	6.923	9.332	13.003
15	1.672	3.998	6.900	9.276	12.810
20	1.675	4.000	6.881	9.225	12.627
<b>25</b>	<b>1.679</b>	<b>4.005</b>	<b>6.865</b>	<b>9.180</b>	<b>12.454</b>
30	1.683	4.011	6.853	9.139	12.289
35	1.688	4.018	6.844	9.102	12.133
37		4.022	6.841	9.088	
38	1.691				12.043
40	1.694	4.027	6.838	9.068	11.984
45					11.841
50	1.707	4.050	6.833	9.011	11.705
55	1.715	4.075	6.834	8.985	11.574
60	1.723	4.091	6.836	8.962	11.449
70	1.743	4.126	6.845	8.921	
80	1.766	4.164	6.859	8.885	
90	1.792	4.205	6.877	8.850	
95	1.806	4.227	6.886	8.833	

**Note:** The actual pH(S) values of the individual batches of the reference materials are documented in a certificate of an accredited laboratory. This certificate is supplied with the respective buffers. Only these pH(S) values shall be used as standard values for the secondary reference buffer materials. Correspondingly, this standard does not include a table with standard pH values for practical use. The table above only provides examples of pH(S) values for orientation.

**Buffer Table, NIST Technical Buffers**

Nominal values in bold.

°C	pH				
0	1.67	4.00	7.115	10.32	13.42
5	1.67	4.00	7.085	10.25	13.21
10	1.67	4.00	7.06	10.18	13.01
15	1.67	4.00	7.04	10.12	12.80
20	1.675	4.00	7.015	10.06	12.64
<b>25</b>	<b>1.68</b>	<b>4.005</b>	<b>7.00</b>	<b>10.01</b>	<b>12.46</b>
30	1.68	4.015	6.985	9.97	12.30
35	1.69	4.025	6.98	9.93	12.13
40	1.69	4.03	6.975	9.89	11.99
45	1.70	4.045	6.975	9.86	11.84
50	1.705	4.06	6.97	9.83	11.71
55	1.715	4.075	6.97	9.83 <sup>1)</sup>	11.57
60	1.72	4.085	6.97	9.83 <sup>1)</sup>	11.45
65	1.73	4.10	6.98	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
70	1.74	4.13	6.99	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
75	1.75	4.14	7.01	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
80	1.765	4.16	7.03	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
85	1.78	4.18	7.05	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
90	1.79	4.21	7.08	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>
95	1.805	4.23	7.11	9.83 <sup>1)</sup>	11.45 <sup>1)</sup>

**Buffer Table, Hamilton Duracal**

Nominal values in bold.

°C	pH				
0	1.99	4.01	7.12	10.23	12.58
5	1.99	4.01	7.09	10.19	12.46
10	2.00	4.00	7.06	10.15	12.34
15	2.00	4.00	7.04	10.11	12.23
20	2.00	4.00	7.02	10.06	12.11
<b>25</b>	<b>2.00</b>	<b>4.01</b>	7.00	10.01	12.00
30	1.99	4.01	6.99	9.97	11.90
35	1.98	4.02	6.98	9.92	11.80
40	1.98	4.03	6.97	9.86	11.70
45	1.97	4.04	6.97	9.83	11.60
50	1.97	4.05	6.97	9.79	11.51
55	1.98	4.06	6.98	9.75	11.42
60	1.98	4.08	6.98	9.72	11.33
65	1.98	4.10 <sup>1)</sup>	6.99 <sup>1)</sup>	9.69 <sup>1)</sup>	11.24
70	1.99	4.12 <sup>1)</sup>	7.00 <sup>1)</sup>	9.66 <sup>1)</sup>	11.15
75	1.99	4.14 <sup>1)</sup>	7.02 <sup>1)</sup>	9.63 <sup>1)</sup>	11.06
80	2.00	4.16 <sup>1)</sup>	7.04 <sup>1)</sup>	9.59 <sup>1)</sup>	10.98
85	2.00	4.18 <sup>1)</sup>	7.06 <sup>1)</sup>	9.56 <sup>1)</sup>	10.90
90	2.00	4.21 <sup>1)</sup>	7.09 <sup>1)</sup>	9.52 <sup>1)</sup>	10.82
95	2.00	4.24 <sup>1)</sup>	7.12 <sup>1)</sup>	9.48 <sup>1)</sup>	10.74

1) values added

**Buffer Table, Kraft**

Nominal values in bold.

°C	pH				
0	2.01	4.05	7.13	9.24	11.47 <sup>1)</sup>
5	2.01	4.04	7.07	9.16	11.47
10	2.01	4.02	7.05	9.11	11.31
15	2.00	4.01	7.02	9.05	11.15
<b>20</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>11.00</b>
25	2.00	4.01	6.98	8.95	10.85
30	2.00	4.01	6.98	8.91	10.71
35	2.00	4.01	6.96	8.88	10.57
40	2.00	4.01	6.95	8.85	10.44
45	2.00	4.01	6.95	8.82	10.31
50	2.00	4.00	6.95	8.79	10.18
55	2.00	4.00	6.95	8.76	10.18 <sup>1)</sup>
60	2.00	4.00	6.96	8.73	10.18 <sup>1)</sup>
65	2.00	4.00	6.96	8.72	10.18 <sup>1)</sup>
70	2.01	4.00	6.96	8.70	10.18 <sup>1)</sup>
75	2.01	4.00	6.96	8.68	10.18 <sup>1)</sup>
80	2.01	4.00	6.97	8.66	10.18 <sup>1)</sup>
85	2.01	4.00	6.98	8.65	10.18 <sup>1)</sup>
90	2.01	4.00	7.00	8.64	10.18 <sup>1)</sup>
95	2.01	4.00	7.02	8.64	10.18 <sup>1)</sup>

**Buffer Table, Hamilton A**

Nominal values in bold.

°C	pH				
0	1.99	4.01	7.12	9.31	11.42
5	1.99	4.01	7.09	9.24	11.33
10	2.00	4.00	7.06	9.17	11.25
15	2.00	4.00	7.04	9.11	11.16
20	2.00	4.00	7.02	9.05	11.07
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>9.00</b>	<b>11.00</b>
30	1.99	4.01	6.99	8.95	10.93
35	1.98	4.02	6.98	8.90	10.86
40	1.98	4.03	6.97	8.85	10.80
45	1.97	4.04	6.97	8.82	10.73
50	1.97	4.05	6.97	8.78	10.67
55	1.98	4.06	6.98	8.75	10.61
60	1.98	4.08	6.98	8.72	10.55
65	1.98	4.10	6.99	8.70	10.49
70	1.99	4.12	7.00	8.67	10.43
75	1.99	4.14	7.02	8.64	10.38
80	2.00	4.16	7.04	8.62	10.33
85	2.00	4.18	7.06	8.60	10.28
90	2.00	4.21	7.09	8.58	10.23
95	2.00	4.24	7.12	8.56	10.18

1) values added

**Buffer Table, Hamilton B**

Nominal values in bold.

°C	pH				
0	1.99	4.01	6.03	9.31	11.42
5	1.99	4.01	6.02	9.24	11.33
10	2.00	4.00	6.01	9.17	11.25
15	2.00	4.00	6.00	9.11	11.16
20	2.00	4.00	6.00	9.05	11.07
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>6.00</b>	<b>9.00</b>	<b>11.00</b>
30	1.99	4.01	6.00	8.95	10.93
35	1.98	4.02	6.00	8.90	10.86
40	1.98	4.03	6.01	8.85	10.80
45	1.97	4.04	6.02	8.82	10.73
50	1.97	4.05	6.04	8.78	10.67
55	1.98	4.06	6.06	8.75	10.61
60	1.98	4.08	6.09	8.72	10.55
65	1.98	4.10	6.11	8.70	10.49
70	1.99	4.12	6.13	8.67	10.43
75	1.99	4.14	6.15	8.64	10.38
80	2.00	4.16	6.18	8.62	10.33
85	2.00	4.18	6.21	8.60	10.28
90	2.00	4.21	6.24	8.58	10.23
95	2.00	4.24	6.27	8.56	10.18

**Buffer Table, HACH**

Nominal values: 4.01 7.00 10.01(± 0.02 at 25 °F)

°C	pH		
0	4.00	7.118	10.30
5	4.00	7.087	10.23
10	4.00	7.059	10.17
15	4.00	7.036	10.11
20	4.00	7.016	10.05
<b>25</b>	<b>4.01</b>	<b>7.00</b>	<b>10.00</b>
30	4.01	6.987	9.96
35	4.02	6.977	9.92
40	4.03	6.97	9.88
45	4.05	6.965	9.85
50	4.06	6.964	9.82
55	4.07	6.965	9.79
60	4.09	6.968	9.76
65	4.10	6.98	9.71
70	4.12	7.00	9.66
75	4.14	7.02	9.63
80	4.16	7.04	9.59
85	4.18	7.06	9.56
90	4.21	7.09	9.52
95	4.24	7.12	9.48

**Buffer Table, Ciba (94)**

Nominal values: 2.064.00 7.00 10.00

°C	pH			
0	2.04	4.00	7.10	10.30
5	2.09	4.02	7.08	10.21
10	2.07	4.00	7.05	10.14
15	2.08	4.00	7.02	10.06
20	2.09	4.01	6.98	9.99
25	2.08	4.02	6.98	9.95
30	2.06	4.00	6.96	9.89
35	2.06	4.01	6.95	9.85
40	2.07	4.02	6.94	9.81
45	2.06	4.03	6.93	9.77
50	2.06	4.04	6.93	9.73
55	2.05	4.05	6.91	9.68
60	2.08	4.10	6.93	9.66
65	2.07 <sup>1)</sup>	4.10 <sup>1)</sup>	6.92 <sup>1)</sup>	9.61 <sup>1)</sup>
70	2.07	4.11	6.92	9.57
75	2.04 <sup>1)</sup>	4.13 <sup>1)</sup>	6.92 <sup>1)</sup>	9.54 <sup>1)</sup>
80	2.02	4.15	6.93	9.52
85	2.03 <sup>1)</sup>	4.17 <sup>1)</sup>	6.95 <sup>1)</sup>	9.47 <sup>1)</sup>
90	2.04	4.20	6.97	9.43
95	2.05 <sup>1)</sup>	4.22 <sup>1)</sup>	6.99 <sup>1)</sup>	9.38 <sup>1)</sup>

**Buffer Table, WTW Technical Buffers**

Nominal values in bold.

°C	pH			
0	2.03	4.01	7.12	10.65
5	2.02	4.01	7.09	10.52
10	2.01	4.00	7.06	10.39
15	2.00	4.00	7.04	10.26
20	2.00	4.00	7.02	10.13
<b>25</b>	<b>2.00</b>	<b>4.01</b>	<b>7.00</b>	<b>10.00</b>
30	1.99	4.01	6.99	9.87
35	1.99	4.02	6.98	9.74
40	1.98	4.03	6.97	9.61
45	1.98	4.04	6.97	9.48
50	1.98	4.06	6.97	9.35
55	1.98	4.08	6.98	
60	1.98	4.10	6.98	
65	1.99	4.13	6.99	
70	2.00	4.16	7.00	
75	2.00	4.19	7.02	
80	2.00	4.22	7.04	
85	2.00	4.26	7.06	
90	2.00	4.30	7.09	
95	2.00	4.35	7.12	

<sup>1)</sup> extrapolated

**Buffer Table, Reagecon**

Nominal values in bold.

°C	pH				
0	2.01 <sup>1)</sup>	4.01 <sup>1)</sup>	7.07 <sup>1)</sup>	9.18 <sup>1)</sup>	12.54 <sup>1)</sup>
5	2.01 <sup>1)</sup>	4.01 <sup>1)</sup>	7.07 <sup>1)</sup>	9.18 <sup>1)</sup>	12.54 <sup>1)</sup>
10	2.01	4.00	7.07	9.18	12.54
15	2.01	4.00	7.04	9.12	12.36
20	2.01	4.00	7.02	9.06	12.17
<b>25</b>	<b>2.00</b>	<b>4.00</b>	<b>7.00</b>	<b>9.00</b>	<b>12.00</b>
30	1.99	4.01	6.99	8.95	11.81
35	2.00	4.02	6.98	8.90	11.63
40	2.01	4.03	6.97	8.86	11.47
45	2.01	4.04	6.97	8.83	11.39
50	2.00	4.05	6.96	8.79	11.30
55	2.00	4.07	6.96	8.77	11.13
60	2.00	4.08	6.96	8.74	10.95
65	2.00 <sup>1)</sup>	4.10 <sup>1)</sup>	6.99 <sup>1)</sup>	8.70 <sup>1)</sup>	10.95 <sup>1)</sup>
70	2.00 <sup>1)</sup>	4.12 <sup>1)</sup>	7.00 <sup>1)</sup>	8.67 <sup>1)</sup>	10.95 <sup>1)</sup>
75	2.00 <sup>1)</sup>	4.14 <sup>1)</sup>	7.02 <sup>1)</sup>	8.64 <sup>1)</sup>	10.95 <sup>1)</sup>
80	2.00 <sup>1)</sup>	4.16 <sup>1)</sup>	7.04 <sup>1)</sup>	8.62 <sup>1)</sup>	10.95 <sup>1)</sup>
85	2.00 <sup>1)</sup>	4.18 <sup>1)</sup>	7.06 <sup>1)</sup>	8.60 <sup>1)</sup>	10.95 <sup>1)</sup>
90	2.00 <sup>1)</sup>	4.21 <sup>1)</sup>	7.09 <sup>1)</sup>	8.58 <sup>1)</sup>	10.95 <sup>1)</sup>
95	2.00 <sup>1)</sup>	4.24 <sup>1)</sup>	7.12 <sup>1)</sup>	8.56 <sup>1)</sup>	10.95 <sup>1)</sup>

---

<sup>1)</sup> values added

## 14.3 Calibration Solutions

### Potassium Chloride Solutions

(Conductivity in mS/cm)

Temperature [°C]	Concentration <sup>1)</sup>		
	0.01 mol/l	0.1 mol/l	1 mol/l
0	0.776	7.15	65.41
5	0.896	8.22	74.14
10	1.020	9.33	83.19
15	1.147	10.48	92.52
16	1.173	10.72	94.41
17	1.199	10.95	96.31
18	1.225	11.19	98.22
19	1.251	11.43	100.14
20	1.278	11.67	102.07
21	1.305	11.91	104.00
22	1.332	12.15	105.94
23	1.359	12.39	107.89
24	1.386	12.64	109.84
25	1.413	12.88	111.8
26	1.441	13.13	113.77
27	1.468	13.37	115.74
28	1.496	13.62	
29	1.524	13.87	
30	1.552	14.12	
31	1.581	14.37	
32	1.609	14.62	
33	1.638	14.88	
34	1.667	15.13	
35	1.696	15.39	
36		15.64	

<sup>1)</sup> Data source: K. H. Hellwege (Editor), H. Landolt, R. Börnstein: Zahlenwerte und Funktionen ..., volume 2, part. volume 6



**Sodium Chloride Solutions**

(Conductivity in mS/cm)

Temperature [°C]	Concentration		
	0.01 mol/l <sup>1)</sup>	0.1 mol/l <sup>1)</sup>	1 mol/l <sup>2)</sup>
0	0.631	5.786	134.5
1	0.651	5.965	138.6
2	0.671	6.145	142.7
3	0.692	6.327	146.9
4	0.712	6.510	151.2
5	0.733	6.695	155.5
6	0.754	6.881	159.9
7	0.775	7.068	164.3
8	0.796	7.257	168.8
9	0.818	7.447	173.4
10	0.839	7.638	177.9
11	0.861	7.831	182.6
12	0.883	8.025	187.2
13	0.905	8.221	191.9
14	0.927	8.418	196.7
15	0.950	8.617	201.5
16	0.972	8.816	206.3
17	0.995	9.018	211.2
18	1.018	9.221	216.1
19	1.041	9.425	221.0
20	1.064	9.631	226.0
21	1.087	9.838	231.0
22	1.111	10.047	236.1
23	1.135	10.258	241.1
24	1.159	10.469	246.2
25	1.183	10.683	251.3
26	1.207	10.898	256.5
27	1.232	11.114	261.6
28	1.256	11.332	266.9
29	1.281	11.552	272.1
30	1.306	11.773	277.4
31	1.331	11.995	282.7
32	1.357	12.220	288.0
33	1.382	12.445	293.3
34	1.408	12.673	298.7
35	1.434	12.902	304.1
36	1.460	13.132	309.5

<sup>1)</sup> Data source: K. H. Hellwege (Editor), H. Landolt, R. Börnstein: Zahlenwerte und Funktionen ..., volume 2, part. volume 6

<sup>2)</sup> Data source: Test solutions calculated according to DIN IEC 746-3

## 14.4 TAN Options

The functions described below are available after enabling their TAN options.

→ *Option Activation, p. 49*

### 14.4.1 pH Buffer Table: Entry of Individual Buffer Set (FW-E002)

The FW-E002 add-on function must be activated in the device with a TAN for the specifiable buffer table. → *Option Activation, p. 49*

You can enter an individual buffer set with 3 buffer solutions. To do so, enter the nominal buffer values for the correct temperature (0 ... 95 °C / 32 ... 203 °F, 5 °C/9 °F step size). Then this buffer set is available as "Table" in addition to the permanently set standard buffer solutions.

#### Conditions for the Specifiable Buffer Set:

- All values must lie in the range pH 0 ... 14.
- Maximum difference between two adjacent pH values (5 °C step width) of the same buffer solution: 0.25 pH units.
- The values of buffer solution 1 must be lower than those of buffer solution 2.
- The difference between values for identical temperatures must be greater than 2 pH units. An error message appears if your input is incorrect.

The pH value at 25 °C/77 °F is always used for buffer display during calibration.

Settings can be changed in the **Buffer Table** submenu:

**Parameter Setting** ▶ **System Control** ▶ **Buffer Table**

01. Select buffer to be entered. Enter the values for 3 complete buffer solutions in ascending order (e.g., pH 4, 7, 10). Minimum distance: 2 pH units.
02. Enter the nominal buffer value and all temperature-corrected buffer values and press **enter** to confirm.

The individual buffer set is selected in the menu:

**Parameter Setting** ▶ **[I] [II] ... pH** ▶ **Cal Presettings**

**Calibration Mode** : Calimatic

**Buffer Set** : Table

**Buffer set:**

Fill in your configuration data or use the table as original for copy.

Temperature (°C)	Buffer 1	Buffer 2
5		
10		
15		
20		
25		
30		
35		
40		
45		
50		
55		
60		
65		
70		
75		
80		
85		
90		
95		

### 14.4.2 Current Characteristic (FW-E006)

The FW-E006 add-on function must be activated in the device with a TAN for the specifiable current characteristic. → *Option Activation, p. 49*

Assignment of output current to process variables in 1-mA increments.

Settings can be changed in:

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs

01. Open the Current Output I1 or Current Output I2 submenus.

02. Usage : On

03. Select the Process Variable .

04. Characteristic : Table

✓ The Table submenu is displayed.

05. Open the Table submenu.

06. Enter process variable values.

The entered values must be continuously rising or falling.

### 14.4.3 Concentration Determination (FW-E009)

The FW-E009 add-on function must be activated in the device with a TAN for the concentration determination. → *Option Activation, p. 49*

The substance concentration in percent by weight (wt%) is determined for H<sub>2</sub>SO<sub>4</sub>, HNO<sub>3</sub>, HCl, NaOH, NaCl, and Oleum.

#### Conditions for Concentration Determination

The following pages present the conductivity curves depending on substance concentration and medium temperature.

The following conditions must be met for a reliable concentration determination:

- For calculation of concentration, the medium to be measured must be a purely binary mixture (e.g., water-hydrochloric acid). Presence of other dissolved substances (e.g., salts) leads to incorrect concentration values.
- In the region of small slopes (e.g., at the range limits) small changes in conductivity can correspond to large changes in concentration. This may lead to an unsteady display of the concentration value.
- As the concentration value is calculated from the measured conductivity and temperature values, accurate temperature measurement is very important. Therefore, you should make sure that conductivity sensor and process medium are in thermal equilibrium.

Settings can be changed in the Concentration submenu:

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ Concentration

01. Concentration : On

02. Select the medium :

NaCl (0-28 %), HCl (0-18 %), NaOH (0-24 %), H<sub>2</sub>SO<sub>4</sub> (0-37 %), HNO<sub>3</sub> (0-30 %), H<sub>2</sub>SO<sub>4</sub> (89-99 %), HCl (22-39 %), HNO<sub>3</sub> (35-96 %), H<sub>2</sub>SO<sub>4</sub> (28-88 %), NaOH (15-50 %), Oleum (12-45 %), table

You can define limits for warning and failure messages for the concentration value:

Parameter Setting ▶ [I] [II] ... Cond(I) ▶ Messages ▶ Concentration Messages → *Messages, p. 84*

## Specifying a Concentration Solution for Conductivity Measurement

To specify the customer-specific solution, 5 concentration values A-E are entered in a matrix together with 5 temperature values 1-5. First enter the 5 temperature values, then the corresponding conductivity values for each of the concentrations A-E.

These solutions are then available as "Table" in addition to the permanently set standard solutions.

Settings can be changed in the **System Control** in the **Concentration Table** submenu:

**Parameter Setting** ▶ **System Control** ▶ **Concentration Table**

01. Enter temperatures 1 to 5.

02. Enter values for concentrations A-E for the respective temperatures.

**Note:** The temperature values must be rising (Temp. 1 is the lowest, Temp. 5 the highest temperature). The concentration values must be rising (Conc. A is the lowest, conc. E the highest concentration). The table values A1 ... E1, A2 ... E2, etc. must all be rising within the table or all falling. Points of inflection are not allowed.

Incorrect table entries are indicated by an exclamation point in a red triangle.

The table is built up as 5x5 matrix:

	Conc. A	Conc. B	Conc. C	Conc. D	Conc. E
Temp. 1	A1	B1	C1	D1	E1
Temp. 2	A2	B2	C2	D2	E2
Temp. 3	A3	B3	C3	D3	E3
Temp. 4	A4	B4	C4	D4	E4
Temp. 5	A5	B5	C5	D5	E5

The concentration table is selected in the menu:

**Parameter Setting** ▶ **[I] [II] ... Cond(I)** ▶ **Cal Presettings**


**Calibration Mode** : Automatic

**Cal Solution** : Table

**Concentration Curves**


Conductivity [mS/cm] versus substance concentration [wt%] and media temperature [°C]

**Sodium Chloride Solution NaCl**

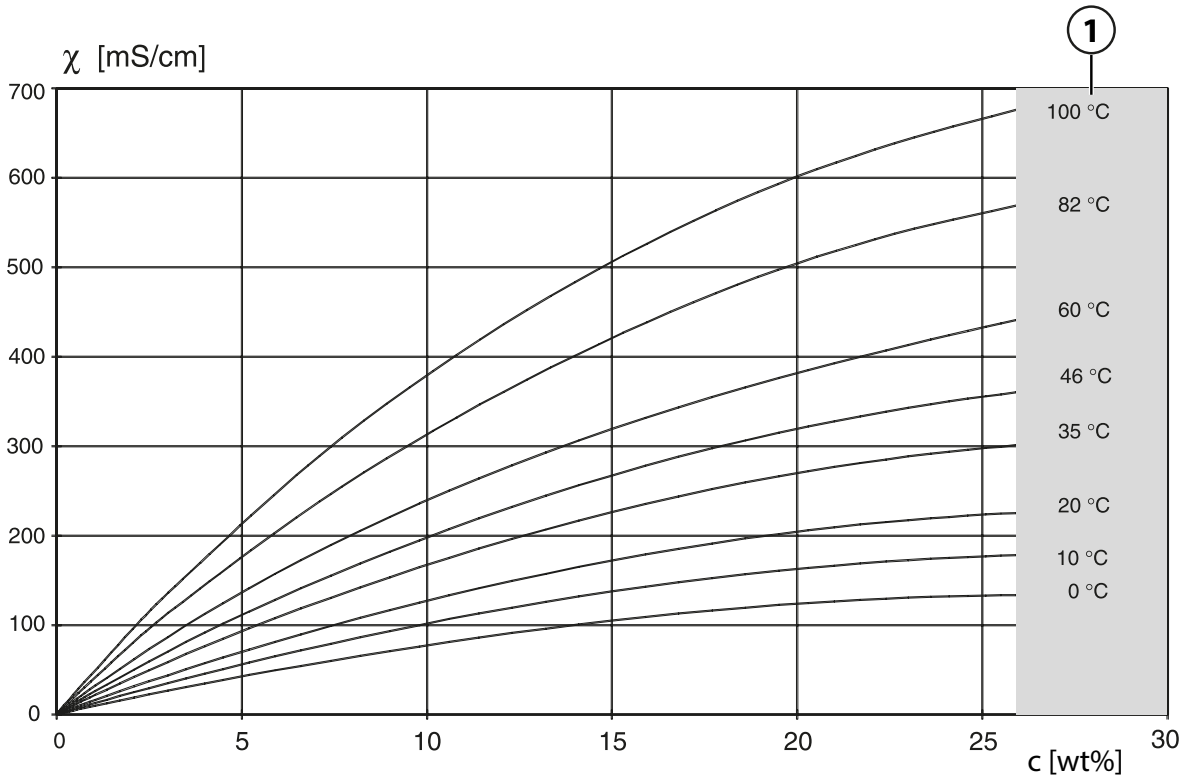


**1** Range within which concentration determination is not possible.

**Hydrochloric Acid HCl**

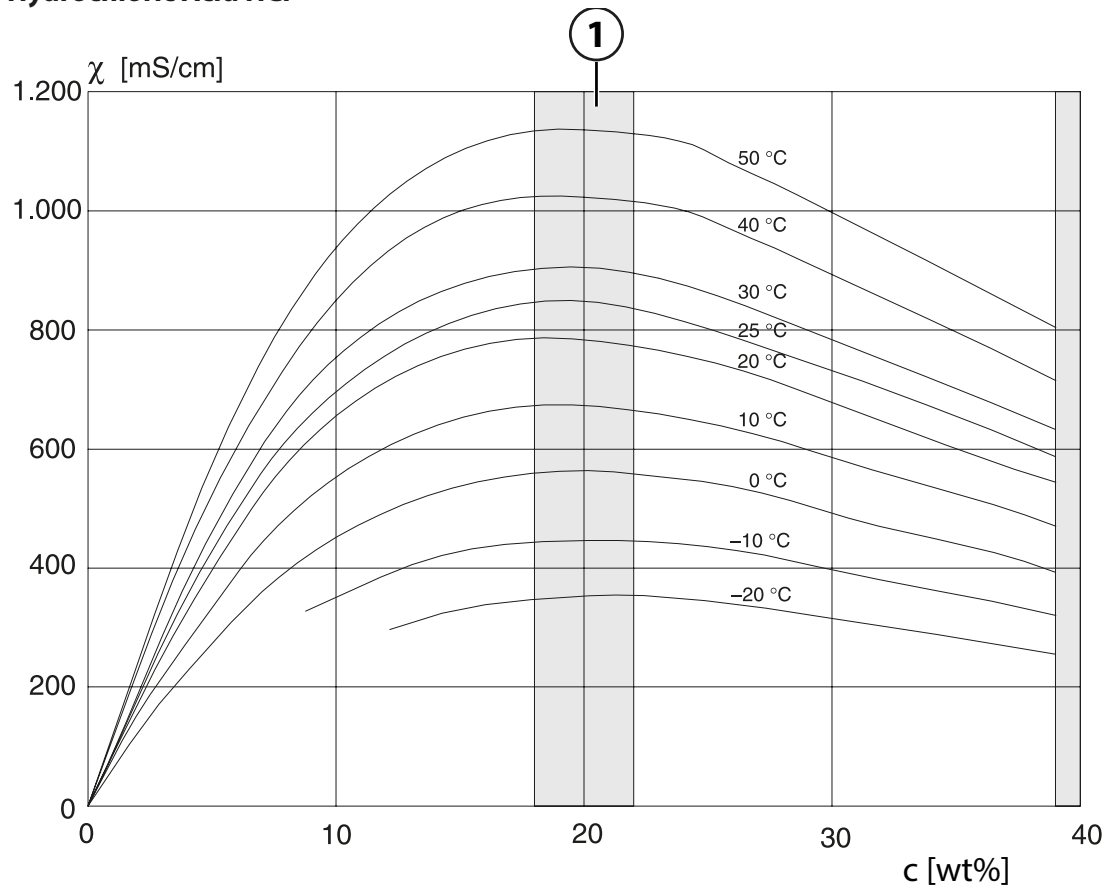


**1** Range within which concentration determination is not possible.

**Sodium Hydroxide Solution NaOH**

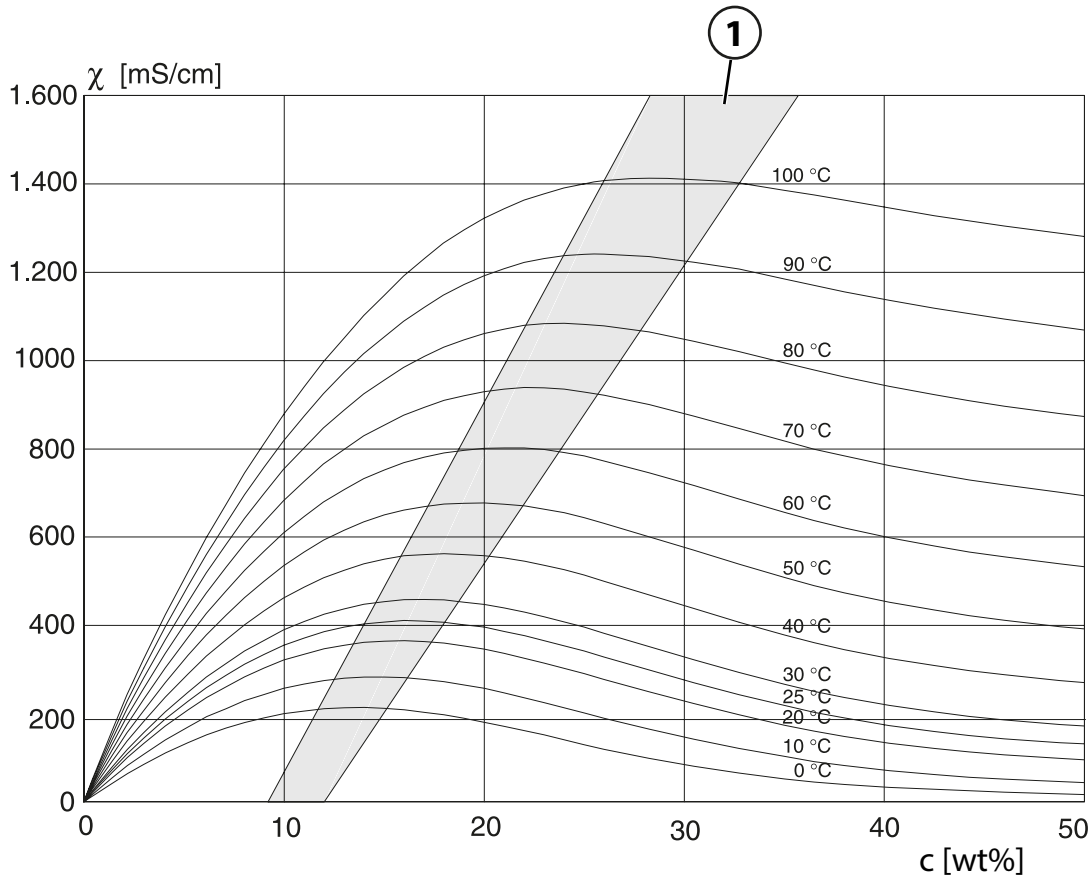


1 Range within which concentration determination is not possible.

**Sulfuric Acid H<sub>2</sub>SO<sub>4</sub>**

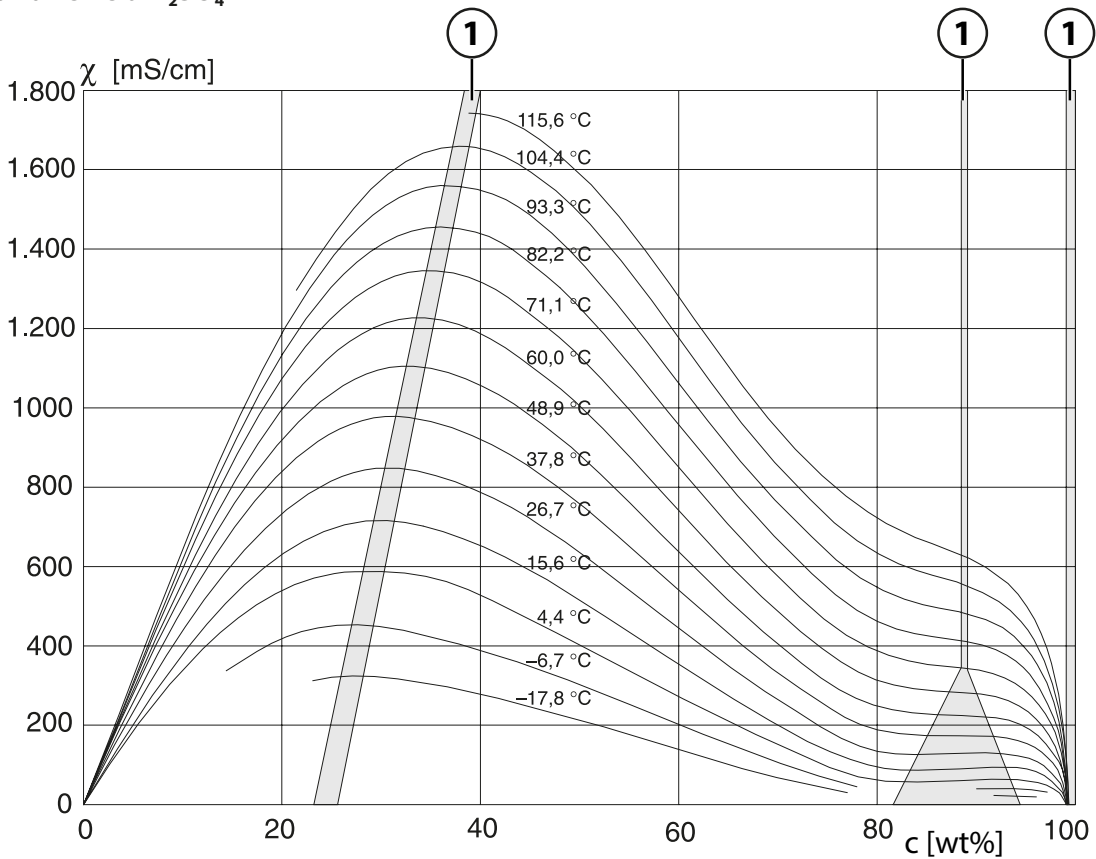


1 Range within which concentration determination is not possible.

**Nitric Acid HNO<sub>3</sub>**

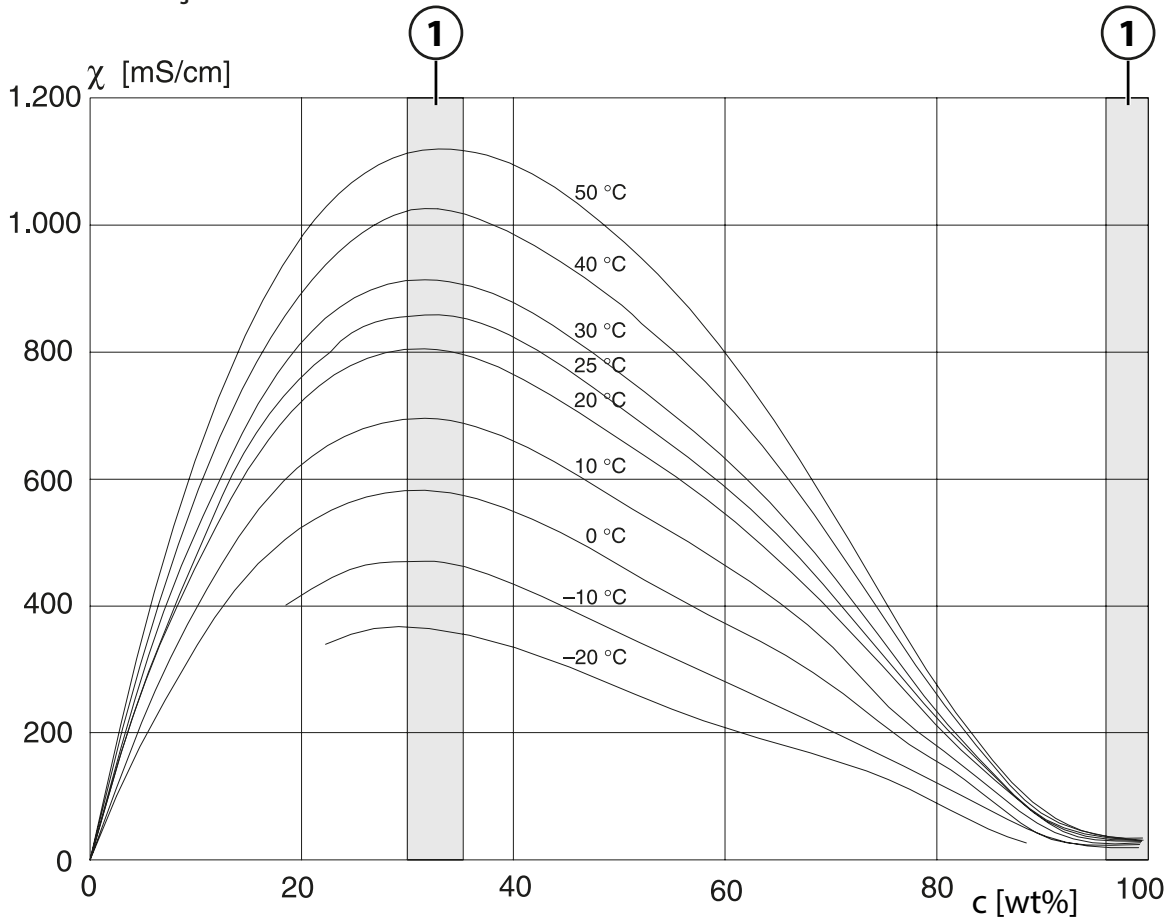

**1** Range within which concentration determination is not possible.

**Oleum H<sub>2</sub>SO<sub>4</sub>•SO<sub>3</sub>**

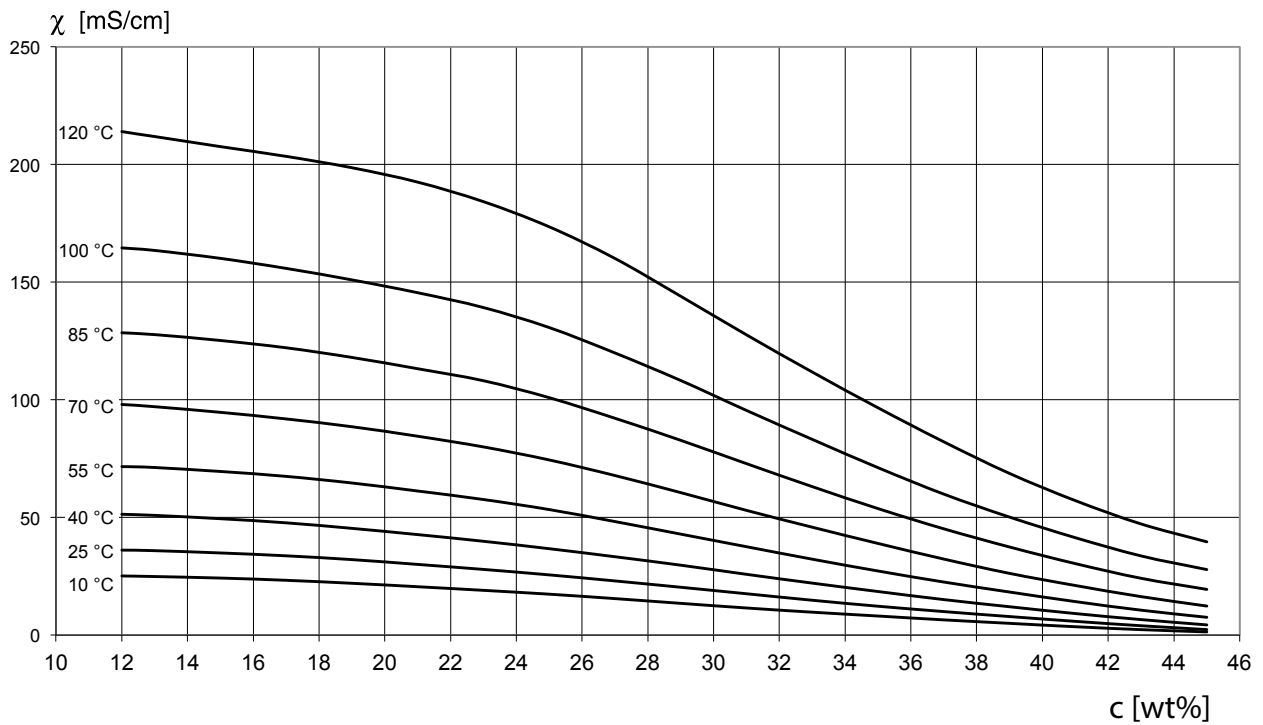

**1** Range within which concentration determination is not possible.



### 14.4.4 Pfaudler Sensors (FW-E017)

This option enables simultaneous pH and temperature measurements using Pfaudler pH sensors or pH sensors with a zero point other than pH 7 and/or a deviating slope, e.g., pH sensors with a zero point at pH 4.6.

The FW-E017 add-on function must be activated in the device with a TAN for this purpose.

→ *Option Activation, p. 49*

When using analog sensors, perform the following before measurement:

01. Select the used sensor type:

Parameter Setting ▶ [II] Analog pH ▶ Sensor Data → *Sensor Data, p. 69*

02. Enter the nominal zero point and the nominal slope data supplied by the sensor manufacturer.

Parameter Setting ▶ [II] Analog pH ▶ Sensor Data ▶ Sensor Monitoring Details

03. Select the parameter.

04. Monitoring: "Individual"

✓ You can enter the values for "Nominal", "Min.", "Max."

The default values for "Auto" are shown in the table below.

05. Select "Data Entry" calibration mode:

Calibration ▶ [II] Analog pH → *Calibration Mode: Data Entry, p. 110*

✓ You can enter the  $pH_{is}$  value for the isothermal intersection point.

06. If necessary, you can perform further calibrations afterwards. The  $pH_{is}$  value entered in the "Data Entry" calibration mode remains stored.

**Note:** When a Pfaudler enamel electrode is connected, the data is read from the sensor or set to the standard values. No menu entries are required; they are therefore deactivated.

The nominal values for zero point and slope are required to ensure that the sensor monitoring and calibration functions (Sensoface, Calimatic) operate as intended. They do not replace the need for calibration.

#### Presettings for Slope, Zero Point, Sensocheck of Reference Electrode

Parameter Setting ▶ [II] Analog pH ▶ Sensor Data ▶ Sensor Monitoring Details :

Monitoring: "Auto"

Selected sensor type	Pfaudler Standard	Pfaudler Diff.	Glass El. Diff.
Nom. Slope	59.2 mV/pH	59.2 mV/pH	59.2 mV/pH
Nom. Zero	pH 1.50	pH 10.00	pH 7.00
Sensocheck Ref. Electrode	500 kΩ	30 MΩ	120 MΩ

#### Typical Values

These values are for guidance only. The exact values are supplied by the sensor manufacturer.


Sensor	Pfaudler enamel sensors (Pfaudler specifications)	Sensors with absolute pH measurement and Ag/AgCl reference system	Sensors with absolute pH measurement and Ag/Ac (silver acetate) reference system	Differential pH sensors
Nom. Slope	55 mV/pH	55 mV/pH	55 mV/pH	55 mV/pH
Nom. Zero	pH 8.65	pH 8.65	pH 1.35	pH 7 ... 12
$pH_{is}$	pH 1.35	pH 1.35	pH 1.35	pH 3.00

**Note:** Refer to the operating instructions for the respective sensor to obtain more information on functioning, installation, calibration, and configuration.

### Isothermal Intersection Point

The isothermal intersection point is the intersection of two calibration lines plotted for two different temperatures. The coordinates of this intersection are labeled  $V_{is}$  and  $pH_{is}$ . The isothermal intersection point remains constant for each sensor.

It may cause temperature-dependent measurement errors, but such errors can be avoided by calibrating at the measuring temperature or at a constant, controlled temperature.

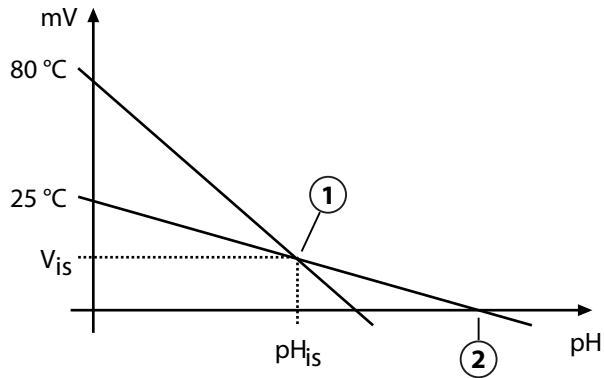

- 1 Isothermal intersection point
- 2 Zero point

### 14.4.5 Calculation Blocks (FW-E020)

After activating TAN option FW-E020, two calculation blocks that can convert existing process variables to new variables are available. → *Option Activation, p. 49*

In addition, the general device status (NAMUR signals) is taken into account.

The following variables are calculated from the existing values:

- Measured value difference (selection depending on sensor)
- Ratio
- Passage
- Rejection
- Deviation
- pH value calculation from dual conductivity measurement (see below)
- User-Spec (DAC): User specification

All new variables generated by the calculation blocks can be output at the current outputs and on the measurement display. Control using an internal controller is not possible.

#### Activating and Configuring Calculation Blocks


Parameter Setting ▶ System Control ▶ Calculation Blocks

Preconditions

- At least two sensors are connected.
- TAN option FW-E020 is enabled.

Steps

01. Open Calculation Blocks.
02. Select a process variable combination.

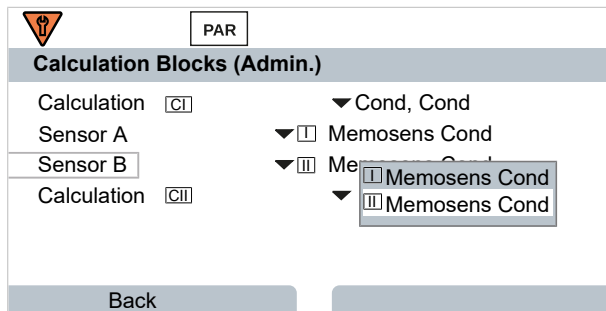


03. 2x **left softkey: Back**

04. Scroll down using the **arrow key** and select a calculation block.

During parameter setting, the calculation blocks are displayed like modules, plus [CI] or [CII]:

05. Configure the calculation block.

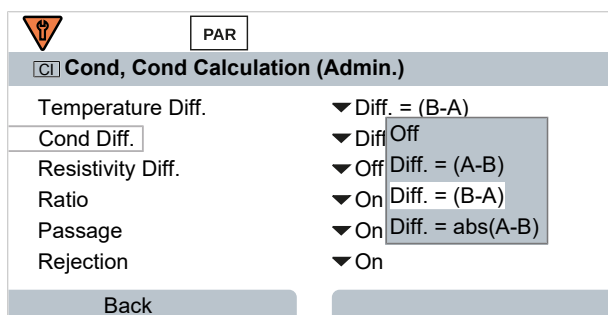

**Process Variable Combination in Calculation Block**

Process Variable Combinations	Calculation Block	Variables Calculated by Calculation Block	
pH + pH	pH/pH	Temperature difference	°C
		pH value difference	pH
		ORP difference	mV
		pH voltage difference	mV
Cond + Cond CondI + CondI Cond + CondI	Cond/Cond	Temperature difference	°C
		Conductivity difference	S/cm
		Resistivity difference	Ω*cm
		Ratio	S/cm [%]
		Passage	S/cm [%]
		Rejection	S/cm [%]
		Deviation	S/cm [%]
Oxy + Oxy	Oxy/Oxy	Saturation %air difference	%air
		Saturation %O <sub>2</sub> difference	%O <sub>2</sub>
		Conc. (liquid) difference	mg/l
		Conc. (gas) difference	%vol
		Temperature difference	°C

**Calculation Formulas**

Process Variable	Calculation Formula	Range	Span
Difference (selectable in menu)	Diff. = A - B	Process variable	Process variable
	Diff. = B - A		
	Diff. = abs(A - B)		
Ratio (Cond/Cond only)	Cond A/Cond B	0.00 ... 19.99	0.10
Passage (Cond/Cond only)	Cond B/Cond A · 100	0.00 ... 199.9	10 %
Rejection (Cond/Cond only)	(Cond A - Cond B)/Cond A · 100	-199.9 ... 199.9	10 %
Deviation (Cond/Cond only)	(Cond B - Cond A)/Cond A · 100	-199.9 ... 199.9	10 %

When calculating Cond/Cond, it is possible to determine a pH value from the measured conductivity values. Settings can be changed in the **pH Value** submenu:

**Adjustable Parameters for pH Value Calculation**

**Parameter Setting** ▶ **[C/I/II] Cond/Cond Calculation** ▶ **pH Value**

Usage	Off, pH-VGB-S-006, pH variable
If you select pH-VGB-S-006:	
Alkalizing Agent	NaOH: $11 + \log((\text{COND A} - \text{COND B} / 3) / 243)$ NH <sub>3</sub> : $11 + \log((\text{COND A} - \text{COND B} / 3) / 273)$ LiOH: $11 + \log((\text{COND A} - \text{COND B} / 3) / 228)$
Alkalizing	Off, on
Ion Exchanger	Off, on
Filter Volume	Enter filter volume in l
Resin Capacity	Enter resin capacity
Capacity Factor	Enter capacity factor in %
If you select pH variable:	
	Enter coefficient C, factor 1 ... 3

**Typical Application**


**pH Value Calculation by Means of Dual Conductivity Measurement**

When monitoring boiler feedwater in power plants, dual conductivity measurement can be used to calculate the pH value. For that purpose, the boiler feedwater conductance is measured upstream and downstream of the cation exchanger. This commonly used method of indirect pH value measurement does not require much maintenance and has the following advantage:

Normal pH measurement in ultrapure water is very critical. Boiler feedwater does not contain many ions. This requires the use of a special electrode, which must be calibrated constantly and has a generally short life.

Two sensors are used to measure the conductivity upstream and downstream of the cation exchanger. The pH value is inferred from these two conductivity values.

**pH Value Measurement of Boiler Feedwater in Power Plant Technology**

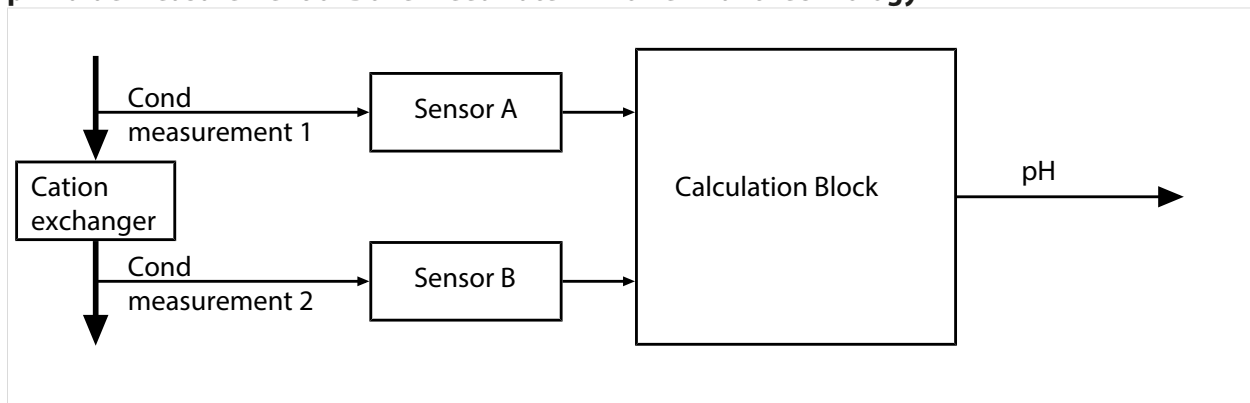

Calculating the concentration of sodium hydroxide / the pH value


$$c(\text{NaOH}) = (\text{Cond1} - \frac{1}{3} \text{Cond2}) / 243$$

$$\text{pH} = 11 + \log[c(\text{NaOH})]$$

Recommended pH ranges:

$10 \pm 0.2$  for  $< 136$  bar operating overpressure or

$9.5 \pm 0.2$  for  $> 136$  bar operating overpressure

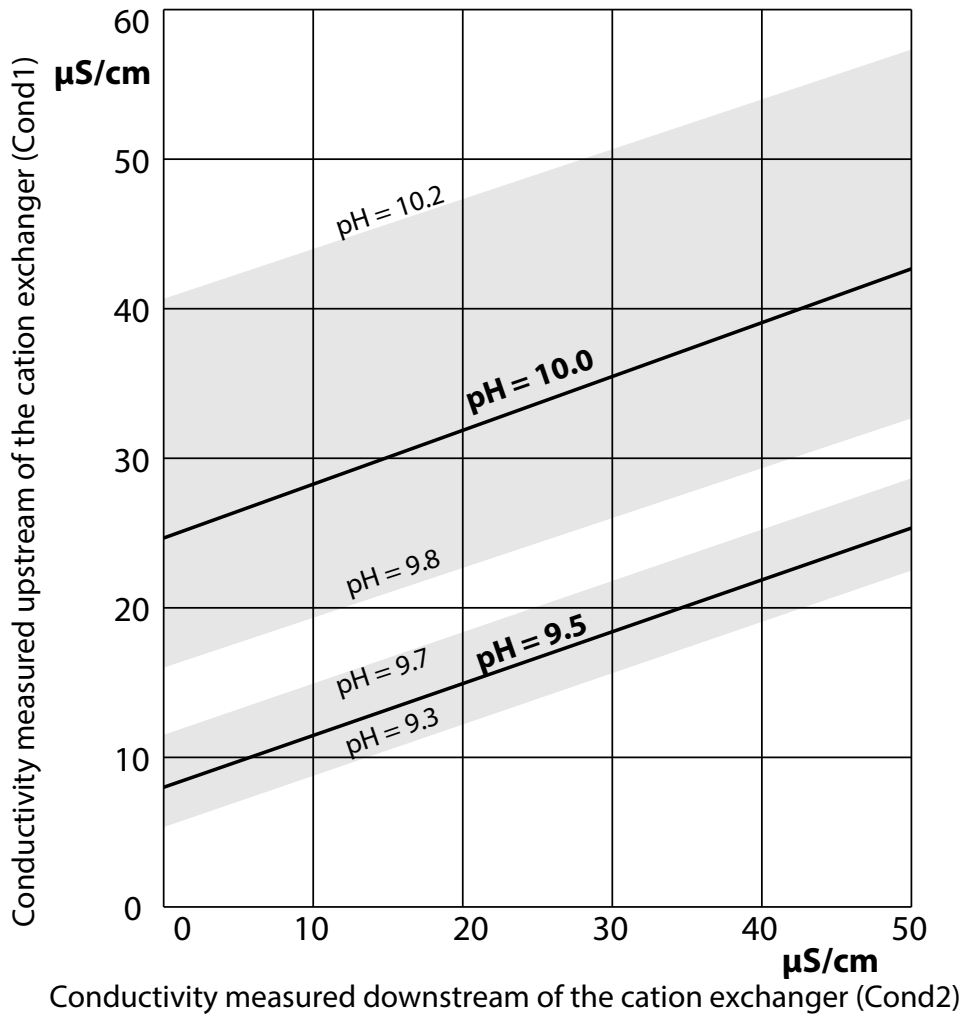

Conditioning of water in natural circulation boilers with sodium hydroxide. Relationship between the pH value and the conductivity measured upstream and downstream of the cation exchanger.

Source: Appendix to VGB guideline for boiler feed water, boiler water, and steam of steam generators above 68 bar permissible operating overpressure (VGB- R 450 L, 1988 edition)

See also

→ *Dual Conductivity Measurement, p. 93*

### 14.4.6 HART (FW-E050)

Stratos Multi with TAN option FW-E050 is registered with the HART Communication Foundation. The device complies with the requirements of HCF Specification V7.

The device's HART interface is activated as follows:

01. Enable the HART interface on the device using a TAN option number.

Parameter Setting ▶ System Control ▶ Enable Options ▶ 050 HART ▶ Active


02. Switch on current output I1 on the device and set it to 4 ... 20 mA, as HART communication requires a current.

Parameter Setting ▶ Inputs/Outputs ▶ Current Outputs ▶ Current Output I1 ▶ Output

→ *Current Outputs, p. 57*

03. Enable communication in the Parameter Setting ▶ HART ▶ Usage menu

After switching on the device, HART communication is available after around 20 seconds.

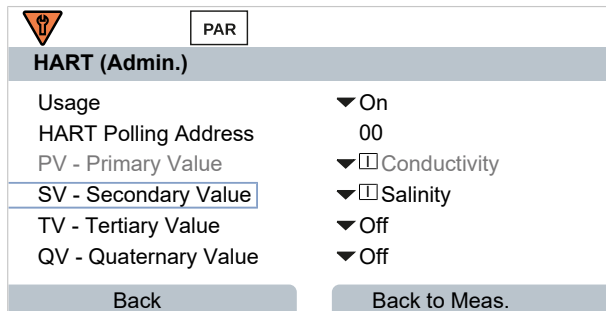

The device's polling address can be configured in the HART menu. As delivered, the value is set to zero (shown as "0"). Multi-drop mode is activated with values between "01" and "63". In multi-drop mode, the output current is a constant 4 mA.

After activating the HART interface, the four *dynamic variables* PV, SV, TV, and QV are displayed. *Dynamic variable* PV (*Primary Value*) represents the process variable assigned to current output I1. The three other *dynamic variables* SV, TV, and QV (*Secondary, Tertiary, Quarternary Values*) can be freely assigned.

The HART information required for system integration, e.g., *Device Revision, Device Type ID*, is displayed in the Diagnostics ▶ HART Information menu. Further information can be downloaded from the relevant product page on our website, e.g.:

- Device description (DD)
- HART command specification

See also

→ *Malfunction States, p. 143*

### 14.4.7 Digital ISM Sensors (FW-E053)

This option enables the use of digital ISM sensors to measure pH, ORP, and oxygen (amperometric). The FW-E053 add-on function must be activated in the device with a TAN for this purpose.

→ *Option Activation, p. 49*

#### Identifying an ISM Sensor

ISM sensors have an “electronic datasheet”. The permanent factory data (manufacturer, sensor description) and key sensor-related parameters are automatically transferred to the Stratos Multi.

#### Sensor Monitoring



Predictive maintenance data can be entered into the sensor by the device. This includes, for example, the maximum permitted number of CIP/SIP or autoclaving cycles. The settings can be changed in Parameter Setting:

Parameter Setting ▶ [II] ISM [pH] ▶ Sensor Data ▶ Sensor Monitoring Details → *pH Process Variable, p. 67*

Parameter Setting ▶ [II] ISM [Oxy] ▶ Sensor Data ▶ Sensor Monitoring Details

→ *Oxygen Process Variable, p. 95*

You can select whether and how an exceeded limit value is to be displayed for each parameter:

Off	No message, but the parameter is still shown in the Diagnostics menu.
Failure	A Failure message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with red backlighting.
Maintenance	A Maintenance Required message is shown in off-limit conditions; the corresponding NAMUR icon  is displayed. If “Display Color NE107” is selected, the measurement display is shown with blue backlighting.

#### Calibration/Adjustment

**Note:** The calibration data is saved in the ISM sensor. This means that ISM sensors can be cleaned, reconditioned, calibrated, and adjusted away from the measurement location, e.g., in a laboratory. Sensors in the system are replaced on-site by adjusted sensors.

An ISM sensor that has never been used before must first be calibrated:

01. Calibration ▶ [II] ISM [pH/Oxy]

02. Select Calibration Mode .

03. First Adjustment : Yes

04. Adjust other settings available in the calibration mode.

✓ Calibration can be performed. → *Calibration/Adjustment, p. 103*



#### 14.4.8 Parameter Sets 1-5 (FW-E102)

The FW-E102 add-on function must be activated in the device with a TAN for use of parameter sets 1-5.  
→ *Option Activation, p. 49*

##### Saving a Parameter Set on the Data Card

2 complete parameter sets (A, B) are stored in the device. Up to 5 parameter sets can be loaded to the Data Card. To do so, a parameter set (1, 2, 3, 4, or 5) on the Data Card is overwritten by the device-internal parameter set A:

Parameter Setting ▶ System Control ▶ Parameter Sets ▶ Save Parameter Set

01. **Save to** : Select the parameter set to be overwritten.

✓ The parameter set is saved as a file on the Data Card.

##### Loading a Parameter Set from the Data Card

A parameter set saved on the Data Card (1, 2, 3, 4, or 5) can be loaded to the device-internal parameter set A. This overwrites parameter set A:

Parameter Setting ▶ System Control ▶ Parameter Sets ▶ Load Parameter Set

01. **Load from** : Select the parameter set to be loaded.

✓ The parameter set is saved as parameter set A in the device.

### 14.4.9 Measurement Recorder (FW-E103)

The FW-E103 add-on function must be activated in the device with a TAN for use of the measurement recorder. → *Option Activation, p. 49*

The measurement recorder logs measured values and additional values depending on its parameter setting.

Parameter settings can be made for:


- Process variables to be displayed
- Start and end value for the process variable to be recorded
- Time base (recording interval, selectable from 10 s to 10 h)

In addition, the time axis can be stretched by factor 10 using the “zoom” function.

#### Setting the Measurement Recorder Parameters:

Parameter Setting ▶ General ▶ Measurement Recorder

Recording starts as soon as the parameters have been set.

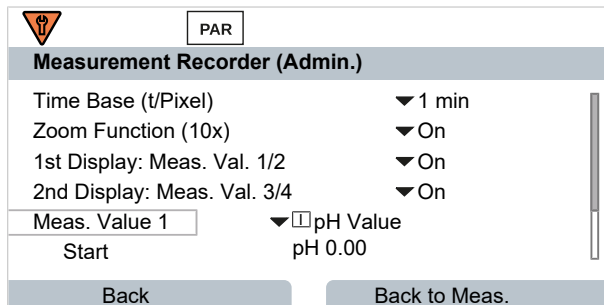


#### Display Measurement Recorder Data:

Diagnostics ▶ Measurement Recorder

The measurement recorder saves all entries in a file. The last 100 entries are graphically presented on the device’s display.

Up to 4 process variables are displayed. These 4 process variables are distributed to 2 measurement recorders. Use the right *softkey* to toggle between the measurement recorders.

The zoom function is automatically switched on for fast changes. It begins several pixels before the event. This makes process variable fluctuation traceable in detail.

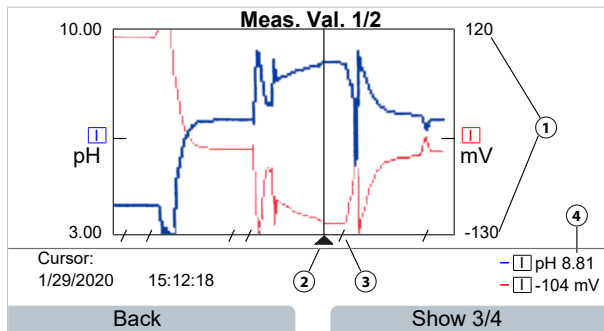

- |   |   |
|---|---|
| <p><b>1</b> Graphic range<br/>Start and end value of the process variable</p> <p><b>2</b> Cursor<br/>(shift using arrow keys)</p> | <p><b>3</b> Ranges with fast measured value changes (automatic zoom function) are marked by lines.</p> <p><b>4</b> Currently measured values at cursor position</p> |
|---|---|


#### Deleting the Measurement Recorder’s Data:

Parameter Setting ▶ System Control ▶ Measurement Recorder

**Saving to Data Card**

**Note:** The device's internal memory has limited capacity and continuously overwrites the oldest data set after reaching maximum memory capacity. For recording sessions that take a long time, a data card is absolutely necessary. The data saved on the data card can be read out and evaluated using a computer.

Enable the Data Card to save recorder data:

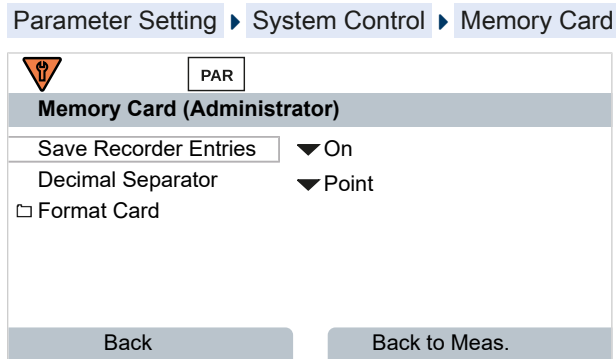

A new file is generated for each day. The date is encoded in the file name.

Example for a file generated on the Data Card:

**\RECORDER\R\_YYMMDD.TXT**

Recorder data of YYMMDD (YY = year, MM = month, DD = day)

The data is recorded as ASCII file with the extension .TXT. The individual columns are separated by tabs. This makes the file readable with word processing or spreadsheet programs (e.g., Microsoft Excel). Each time the Data Card is inserted in the memory card slot, a "Device Info" consisting of the device type, serial number, and tag number is written. Thus, a Data Card can also be used to collect the measurement recorder data of several devices.

Meaning of the entries in the recorder file:

TIME STAMP	Recorder entry time stamp
CH1/2/3/4	1st/2nd/3rd/4th recorder channel with measured value and unit of measurement
Z1/2	1st/2nd additional value and unit of measurement
MAINT	NAMUR signal "Maintenance Required"
HOLD	NAMUR signal "Function Check/HOLD"
FAIL	NAMUR signal "Failure"

#### 14.4.10 Firmware Update (FW-E106)

**Note:** First check whether your device really requires a firmware update.

The FW-E106 add-on function must be activated in the device with a TAN for the firmware update.

→ *Option Activation, p. 49*

Stratos Multi features a standard microcontroller and a microcontroller for communication. The firmware of both microcontrollers can be updated. The firmware files are named as follows:

- Standard microcontroller: FW: xx.xx.xx. Build xxxxx
- Communication microcontroller: IF-4000: xx.xx.xx. Build xxxxx


The two updates may have to be carried out one after the other.

**NOTICE!** For a correct firmware update, adhere to the order: 1. FW, 2. IF-4000.

**NOTICE!** The device is not operable during a firmware update. Its outputs are in an undefined state. After a firmware update, the configuration must be checked.

**Note:** Before updating the firmware for the standard microcontroller, we recommend saving the previous version on the FW Update Card.

#### Firmware Update with FW Update Card

01. Open the housing.
02. Insert the FW Update Card into the memory card slot in the front unit. → *Memory Card, p. 162*
  - ✓ The FW Update Card icon appears on the display .
03. Close the housing.
04. If required, save the firmware (FW) currently installed on the device:
  - Menu Selection ▶ Parameter Setting ▶ System Control ▶ Firmware Update ▶ Save Firmware
  - Start the backup by pressing the **right softkey: Start**.
  - ✓ When the backup has finished, the device returns to measuring mode.
05. Load the firmware update:
  - Menu Selection ▶ Parameter Setting ▶ System Control ▶ Firmware Update ▶ Update Firmware
06. Select the right version using the arrow keys.
07. Confirm with **enter**.
08. Start the firmware update with the **right softkey: Start**.
  - ✓ When the firmware update has finished, the unit will return to measuring mode.
09. As required, carry out firmware update IF-4000 (procedure as from step 5).
10. When the updates have finished, open the housing and remove the FW Update Card.
11. Close and screw the housing together.
12. Check the configuration.

## 15 Basics

### 15.1 Basics of PID Control

Control is only possible in a closed control loop. The control loop is made up of individual components, which must be permanently ready for operation. The variable to be controlled (controlled variable) is continuously measured and compared with the specified setpoint. The aim is to equalize the controlled variable and the setpoint. The resulting sequence of action takes place in a closed loop, the control loop.

The controlled variables (e.g., pH value, temperature, concentration, etc.) are measured by suitable sensors, which supply the continuously measured value for comparison with the specified setpoint. The comparison is carried out at user-defined time intervals. Deviations trigger a control process with the aim of adjusting the controlled variable to match the specified setpoint within a specified period of time.

The controller compares the controlled variable with the setpoint and feeds back the result to influence the controlled variable.

Controllers are classified according to the criteria of characteristic, dynamic response, operating mode.

- Characteristic: A distinction is made between continuous (linear) and discontinuous controllers.
- Dynamic response: The change of the control difference variable at the controller input influences the manipulated variable at the controller output.

The linear controllers are classified according to very different criteria. Their dynamic response, however, is of primary importance.

In the following, basic dynamic components and their typical combinations are described.

#### **P Controller (Parameter: Controller Gain)**

The proportional action of an independently operating functional unit of a P controller converts the control difference variable into a proportional manipulated variable. The control signal is limited to a maximum value (range of the manipulated variable). Accordingly, the controller input signal has a maximum usable input signal range (control range).

#### **I Controller (Parameter: Reset Time)**

The integral action, also an independently operating functional unit, takes into account the time change (rate of change) of the manipulated variable, i.e., the time integral of the control difference variable. Each value of the controlled variable is assigned a specific value of the control speed.

#### **PI Controller**

With these controllers, the proportional and integral action is added together. In contrast to P controllers, which only have a proportional relationship between the controlled variable and the manipulated variable, the time is also integrated. The value of the manipulated variable is determined proportionally to the control deviation, and the integral action is also added.

#### **D Control (Parameter: Derivative)**

A D control (differentiating control) is completely unsuitable on its own, as it only responds to changes in the control difference variable, i.e., it is unaffected by a constant control difference variable.

#### **PD Controller**

With this controller, the proportional change of the input signal and the rate of change of the controlled variable are added to the resulting manipulated variable.

**PID Controller**

This controller contains the P, I, and D basic action of linear controllers. In the PID control system, the manipulated variable corresponds to an addition of the output variables of a P, I, and D control system.

The PID controller has an even lower maximum overshoot than the PD controller. Due to the I action component, it does not exhibit any permanent control deviation. The basic action (P, I, D) of a PID controller, however, produces a universally applicable, classic controller by the fast intervention of the P action, by the regulating property of the I component, and the damping effect of the D action.

**Typical Applications**

P controller: Use in integral control systems (e.g., closed tank, batch processes).

PI controller: Use in non-integral control systems (e.g., drains).

PID controller: The additional derivative action compensates for measurement peaks.

## 16 Abbreviations

A/F	Width across flats
AMSL	Above mean sea level
ATEX	Atmosphères Explosibles (explosive atmospheres)
CIP	Cleaning in place
DIN	Deutsches Institut für Normung (German Institute for Standardization)
EEPROM	Electrically erasable programmable read-only memory
EMC	Electromagnetic compatibility
EN	European standard
ESD	Electrostatic discharge
Ex	Explosion protected
FM	Factory mutual
FW	Firmware
HART	Highway addressable remote transducer
HCF	HART Communication Foundation
IEC	International Electrotechnical Commission
IP	International Protection / Ingress Protection
ISFET	Ion-sensitive field-effect transistor
ISM	Intelligent sensor management
NAMUR	User Association of Automation Technology in Process Industries
NE 107	NAMUR recommendation 107: "Monitoring and Diagnosis of Field Devices"
NEPSI	National Supervision and Inspection Center for Explosion Protection and Safety of Instrumentation
NIST	National Institute of Standards and Technology, US
NTC	Negative temperature coefficient
PELV	Protective extra low voltage
PID	Proportional-integral-derivative
PCS	Process control system
PV	Primary value
QV	Quarternary value
RAM	Random-access memory
RoHS	Restriction of Hazardous Substances
SELV	Safety extra low voltage
SIP	Sterilization in place
SV	Secondary value
TAN	Transaction number
TC	Temperature compensation/coefficient
TDS	Total dissolved solids
TFT	Thin film transistor
TV	Tertiary value
USP	U.S. Pharmacopeia

## Index

### A

Abbreviations	223
Access control	41
Change passcodes	50
Adaptive calibration timer	72
Add-on function	
Activate	49
Descriptions	202
Overview	13
Adjustment of temperature probe	111, 114, 120, 127, 133
Adjustment record	138
Adjustment, definition	103
Administrator level	43
Analog Cond sensor	
Calibration/Adjustment	115
Parameter setting	80
Wiring examples	186
Analog CondI sensor	
Calibration/Adjustment	121
Parameter setting	87
Wiring examples	188
Analog ORP sensor	
Calibration/Adjustment	112
Parameter setting	75
Wiring example	184
Analog oxygen sensor	
Calibration/Adjustment	128
Parameter setting	96
Wiring examples	189
Analog pH sensor	
Calibration/Adjustment	104
Parameter setting	67
Wiring examples	178
Autoclaving counter	
Increment	141
Oxy parameter setting	99
pH parameter setting	71
Automatic calibration/adjustment	
Calimatic pH	106
Cond	116
CondI	122
Oxygen, in air	129
Oxygen, in water	129

### B

Bilinear curve	58
Blanking plug for cable gland	26
Boiler feed water	213
Buffer table, specifiable (FW-E002)	202
Buffer Tables	192

### C

Cable gland, sealing inserts	26
Cal presettings	
Cond parameter setting	83
CondI parameter setting	90
ORP parameter setting	77
Oxy parameter setting	100
pH parameter setting	72

Calculation Blocks (FW-E020)	211
Calibration record	138
Calibration solutions	200
Calibration timer	
ORP parameter setting	77
Oxy parameter setting	100
pH parameter setting	72
Calibration/Adjustment	
Calibration solutions	200
Cond	115
Cond presettings	83
CondI	121
CondI presettings	90
General	103
Memosens	104
ORP	112
ORP presettings	77
Oxy presettings	100
Oxygen	128
pH	104
pH presettings	72
Record	138
Calimatic	
Automatic calibration/adjustment	106
Cation exchanger	213
Certificates	10
Change signs	40
Characteristic curves	58
CIP counter	
Cond parameter setting	82
CondI parameter setting	89
Oxy parameter setting	98
pH parameter setting	70
Commissioning	20, 37
Final check	37
Concentration determination (FW-E009)	204
Conductivity (contacting)	
Calibration/Adjustment	115
Parameter setting	79
Wiring examples, analog sensors	186
Conductivity (dual)	
Parameter setting	93
Conductivity (Inductive)	
Calibration/Adjustment	121
Parameter setting	86
Wiring examples, analog sensors	188
Configuration	
Operating Levels	43
System control	45
Control inputs	
Parameter setting	64
Terminal assignments	31
Controlled variables	64
Controller	
Basics of PID control	221
Parameter setting	63
Controller test	142
Current characteristic (FW-E006)	204



Current outputs	
Characteristic curves	58
Function check (HOLD)	59
Messages	59
Output filter	59
Parameter setting	57
Span, examples	57
Wiring	30
Current source	142
Custom FW Update/Repair Card	164

**D**

D control	221
Data Card	
Configuration	45
Description	164
Open/close memory card	162
Save device settings	46
Save/load parameter set	217
Data entry	
ORP calibration/adjustment	112
Oxygen calibration/adjustment	130
Date/time	48
Decommissioning	161
Default settings, reset	50
Delta function	73, 77
Device diagnostics	137
Device information	137
Diagnostic functions	
Calibration/adjustment record	138
Channel I/II	138
Device information	137
Device self-test	137
Logbook	136
Meas. point description	138
Message list	135
Sensor diagram	138
Sensor information	138
Sensor monitor	138
Sensor wear monitor	139
Temp. offset log	138
Diagnostics	
Diagnostic functions	135
Sensoface	158
Display	
Description	38
No display	144
Parameter setting	56
Display color, parameter setting	56
Display test	137
Disposal	11, 161
Dual conductivity measurement	
Calculation blocks	211
Parameter setting	93
pH value calculation	213

**E**

Electrical installation	27
Electrolyte replacement, confirm	141
Enter numbers and text	40
Environmental damage	8
Equipment	10
Error messages, synoptic tables	143
Explosive atmospheres	10

**F**

Failure	
Signaling via relay contact	60
Favorites menu	134
Firmware repair	164
Firmware update	220
First adjustment	104
Flow measurement	102
Formats/units, parameter setting	50
Function check	
Signaling via relay contact	61
Function control	48
FW Repair Card	164
FW Update Card	164

**H**

HART (FW-E050)	
Description	215
Parameter setting	102
Hysteresis	61

**I**

I controller	221
Icons	
Overview	18
Input OK1	
Function control	48
Parameter set selection	47
Parameter setting	64
Input OK2, configuration	64
Inputs and outputs	
Parameter setting	57
System overview	14
Inputs/Outputs	
Current Outputs	30
Installation	27
Installation factor, calibration/adjustment	126
Installation location	10
Intended Use	8
Introductory safety chapter	2
Ion exchanger	213
ISFET zero, calibration/adjustment	111
ISM oxygen sensor (FW-E053)	
Interior body replacement, confirm	141
Membrane body replacement, confirm	141
Parameter setting	95
Wiring example	191
ISM pH sensor (FW-E053)	
Parameter setting	67
Wiring example	185
ISM sensors (FW-E053), description	216
Isothermal intersection point	210

**K**

Keypad	40
Keypad test	137

**L**

Language, select	38
Linear characteristic	58
Lingua	38
Load matrix	139
Locking a Function	44

Logarithmic curve	58	Messages	
Logbook		Conductivity parameter setting	84, 92
Delete entries	49	ORP parameter setting	78
Display entries	136	Oxygen parameter setting	101
Parameter setting	49	pH parameter setting	74
<b>M</b>		Mixed equipping	10
Maintenance	11	Monitoring limits	
Maintenance functions	140	Conductivity	84, 92
Maintenance functions		ORP	78
Autoclaving counter	141	Oxygen	101
Controller test	142	pH, pH/ORP	74
Current source	142	Mounting	
Electrolyte replacement/Membrane body replacement	141	Housing	20
Relay test	142	Mounting options	22
Replacing the membrane body/interior body	141	Multiple sealing insert for cable gland	26
Sensor monitor	141	<b>N</b>	
Maintenance required		Nameplate	18
Signaling via relay contact	60	NAMUR signals, description	60
Malfunction states	143	NE107	
Manual calibration/adjustment		Display color	56
Cond	117	Status signals	60
Condl	123	Notes on safety information	2
pH	108	Numbers, entering	40
Manual function check	142	<b>O</b>	
Meas. point description		Operating mode, select	65
Display	138	Operating point, Memosens ISFET sensor	111
Parameter setting	48	Operating states	42
Measurement display		Operator level	43
General	42	Option	
Parameter setting	51	Activate	49
Measurement recorder (FW-E103)		Descriptions	202
Delete data	49	Overview	13
Description	218	Option activation	49
Display data	218	Optocoupler input OK1	
Measuring modules		Function control	48
Insert	33	Parameter set selection	47
Overview, Ex	12	Optocoupler inputs	
Terminal assignments	35	Parameter setting	64
Wiring examples	178	ORP	
Membrane body replacement, confirm	141	Calibration/Adjustment	112
Memory card		Parameter setting	75
Configuration	45	Wiring example, analog sensor	184
Insert	162	ORP adjustment	112
Memory card types	164	ORP check	113
Memosens		ORP process variable	
Sensor connection	32	Parameter setting	75
Sensor information	138	Out of specification	
Memosens cond sensor		Signaling via relay contact	60
Parameter setting	79	Output current	
Memosens Condl sensor		Current characteristic (FW-E006)	204
Parameter setting	86	Manual entry	142
Memosens conductivity sensor		Output filter	59
Parameter setting	79, 86	Output filter time interval	59
Memosens ORP sensor		Oxygen	
Parameter setting	75	Calibration/Adjustment	128
Memosens oxygen sensor		Parameter setting	94
Parameter setting	94	Wiring examples, analog sensors	189
Memosens pH sensor			
Parameter setting	66		
Menu selection	38		
Menu structure	41		
Message List			
Displays	135		
Error messages, overview	143		

**P**

P controller	221
Package contents	17
Panel mounting ZU0738	25
Parameter Sets	47
Parameter sets 1-5 (FW-E102)	217
Parameter setting	
Cond	79
Condl	86
General	50
Open	43
ORP	75
Overview of menus	45
Oxygen	94
pH	66
Passcodes	
Change/deactivate	50
Factory setting	50
PD controller	221
Personnel requirements	9
Pfautler Sensors (FW-E017)	
Description	209
Parameter setting	68
Wiring example	183
pH	
Buffer Tables	192
Calibration/Adjustment	104
Individual buffer set (FW-E002)	202
Parameter setting	66
Wiring examples, analog sensors	178
pH value calculation by means of dual conductivity measurement	213
PI controller	221
PID control, basics	221
PID controller	
Controller test	142
Description	222
Parameter setting	63
Pipe mounting ZU0274	23
Presettings for calibration	
Cond parameter setting	83
Condl parameter setting	90
ORP parameter setting	77
Oxy parameter setting	100
pH parameter setting	72
Pressure correction	100
Process variable conductivity (contacting)	
Calibration/Adjustment	115
Parameter setting	79
Wiring examples, analog sensors	186
Process variable conductivity (dual)	
Calculation blocks	211
Parameter setting	93
Process variable conductivity (inductive)	
Calibration/Adjustment	121
Parameter setting	86
Wiring examples, analog sensors	188
Process variable ORP	
Calibration/Adjustment	112
Wiring example, analog sensor	184
Process variable oxygen	
Calibration/Adjustment	128
Parameter setting	94
Wiring examples, analog sensors	189

Process variable pH	
Buffer Tables	192
Calibration/Adjustment	104
Individual buffer set (FW-E002)	202
Parameter setting	66
Wiring examples, analog sensors	178
Product calibration/adjustment	
Cond	118
Condl	124
Oxygen	131
pH	109
Product Line	12
Product range	12
Property damage	8
Protective hood ZU0737	24
Pulse frequency controller	64
Pulse length controller	63

**Q**

Qualified personnel	9
---------------------	---

**R**

Reduction sealing insert for cable gland	26
Relay contacts	
Functional test	142
Hysteresis	61
Parameter setting	59
Usage: Failure	60
Usage: Function check	61
Usage: Limit	61
Usage: Maintenance required	60
Usage: Out of specification	60
Usage: Rinse contact	62
Usage: Sensoface	62
Usage: USP output	62
Relay test	142
Rescue TAN	50
Reset to default	50
Restore factory settings	50
Returns	161
Rinse function, parameter setting	62

**S**

Safety chapter	8
Safety Guide	2
Safety Instructions	2
Salinity correction	101
Save device settings	46
Sensocheck	160
Sensoface	
Criteria	159
Description	158
Relay contact	62
Sensor connection	
Inserting the Module	33
Memosens	32
Second Memosens sensor	34
Sensor data	
Cond parameter setting	80
Condl parameter setting	88
Oxy parameter setting	97
pH parameter setting	69
Sensor diagram	138
Sensor information, digital sensors	138

Sensor monitor			
During function check		141	
During operation		138	
Sensor monitoring, adjusting	70, 76, 81, 89, 98		
Sensor polarization			
Parameter setting		96	
Sensor selection		65	
Sensor wear monitor		139	
SIP counter			
Cond parameter setting		82	
Condl parameter setting		89	
Oxy parameter setting		98	
pH parameter setting		70	
Slope			
Oxygen measurement		128	
Softkeys			
Display		38	
Function control		48	
Keypad		40	
Specifications		165	
Statistics		139	
Supplemental directives		2	
Symbols and Markings			
Display		18	
System control		45	
System overview			
Inputs and outputs		14	
<b>T</b>			
<hr/>			
TAN Option FW-E050 HART			
Parameter setting		102	
TAN option			
Activate		49	
Descriptions		202	
Overview		13	
TAN option FW-E002 pH buffer table		202	
TAN option FW-E006 Current characteristic		204	
TAN option FW-E009 Concentration determination		204	
TAN option FW-E015 Trace oxygen measurement			
Calibration/Adjustment		133	
Wiring example		190	
TAN option FW-E017 "Pfaudler sensors"			
Wiring example		183	
TAN option FW-E017 Pfaudler sensors			
Description		209	
TAN option FW-E020 Calculation blocks		211	
TAN option FW-E050 HART			
Description		215	
TAN option FW-E051 current input			
Parameter setting		100	
Terminal assignments		31	
Typical Application		16	
TAN option FW-E052 current outputs 3 and 4			
Parameter setting		57	
Terminal assignments		31	
TAN option FW-E053 ISM sensors			
Description		216	
Oxygen wiring example		191	
pH wiring example		185	
TAN option FW-E102 Parameter sets 1-5		217	
TAN option FW-E103 Measurement recorder			
Delete data		49	
Description		218	
Display data		218	
TAN option FW-E104 Logbook		136	
TAN option FW-E106 Firmware update		220	
TDS function		84, 91	
Temp. offset log		138	
Temperature compensation of process medium			
Cond parameter setting		83, 90	
pH parameter setting		73	
Temperature probe, adjustment	111, 114, 120, 127, 133		
Terminal assignments		31	
Terminals		31	
Time/date		48	
Trace impurities in ultrapure water		83, 91	
Trace oxygen measurement (FW-E015)			
Calibration/Adjustment		133	
Wiring example		190	
Transfer configuration		46	
Trilinear curve		58	
Troubleshooting		143	
Typical applications			
Oxygen measurement and pressure correction		16	
pH measurement and PID control		15	
pH value calculation by means of dual conductivity measurement		213	
<b>U</b>			
<hr/>			
Ultrapure water with trace impurities		83, 91	
Units/formats, parameter setting		50	
User interface		38	
USP function			
Display values		84, 92	
Parameter setting		84, 91	
Relay contact		62	
<b>V</b>			
<hr/>			
Viewing level		43	
<b>W</b>			
<hr/>			
Warnings		2	
Wiring examples			
Conductivity (contacting)		186	
Conductivity (inductive)		188	
ORP analog		184	
Oxygen, analog		189	
pH analog		178	
<b>Z</b>			
<hr/>			
Zero correction			
Condl		125	
Oxygen		133	





**Knick**  
**Elektronische Messgeräte**  
**GmbH & Co. KG**

**Headquarters**

Beuckestraße 22 • 14163 Berlin  
Germany  
Phone: +49 30 80191-0  
Fax: +49 30 80191-200  
info@knick.de  
www.knick.de

**Local Contacts**

www.knick-international.com

Translation of the original instructions  
Copyright 2022 • Subject to change  
Version 2 • This document was published on April 11, 2022.  
The latest documents are available for download on our  
website under the corresponding product description.

TA-212.502-KNEN02



099652